SAMSUNG

REFRIGERATOR

FRENCH DOOR REFRIGERATOR

MODEL NAME : RF30HBEDBSR

MODEL CODE : RF30HBEDBSR/AA

SERVICE Manual

REFRIGERATOR

CONTENTS

1. PRECAUTIONS (SAFETY WARNINGS)·····5

2. PRODUCT SPECIFICATIONS·····9

3. DISASSEMBLY AND REASSEMBLY·····25

4. TROUBLESHOOTING·····55

5. PBA DIAGRAM·····97

6. WIRING DIAGRAM·····102

7. BLOCK DIAGRAM·····103

8. MODEL CODE TABLE·····105

WARNING

IMPORTANT SAFETY NOTICE

The service guide is for service technicians with adequate backgrounds of electrical, electronic, and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage.
The manufacturer or dealer cannot be responsible for the interpretation of this information.

SAMSUNG ELECTRONICS AMERICA, INC.
Technical Service Guide
Copyright ©2014

All rights reserved. This service guide may not be reproduced in whole or in part in any form without written permission from the SAMSUNG ELECTRONICS Company.

Contents

1. Precautions (safety warnings) 5

2. Product specifications 9

2–1) Introduction of Main Function 10
2–2) Specifications 12
2–3) Interior Views 13
2–4) Model Specification & Specification Chart 14
2–5) Dimensions of Refrigerator (Inch, mm) 17
2–6) Optional Material Specification 18
2–7) Refrigerant Route in Refrigeration cycle 19
2–7–1. Principle of freezeer 20
2–7–2. Operation theory of refrigeration cycle components 21
2–7–3. Refrigeration Cycle Type 23
2–8) Cooling Air Circulation 24

3. Disassembly and Reassembly 25

3–1) PRECAUTION 26
3–2) Refrigerator Door 27
3–3) Door Handle Refrigerator 29
3–4) Door Handle Freezer & Flex zone 29
3–5) Refrigerator Light 30
3–6) Cover–Display & Water–Dispenser 30
3–8) Water–Dispenser 31
3–9) Glass Shelf 32
3–10) Foldable Glass Shelf 32
3–11) Vegetable & Fruit Drawers Shelf 32
3–12) Case Water Filter 33
3–14) Motor Damper 35
3–15) Water Filter (Assembly & Disassembly) 36
3–17) Gallon Door Bin (RF30HB*) 37
3–18) Vertical Hinged Section 38
3–19) Evaporator Cover In Refrigerator 39
3–20) Evaporator In Refrigerator 40
3–21) Freezer Door 41
3–22) Convertible Door 42
3–23) Ice–Maker 43
3–24) Auger Motor Fan 45
3–25) Flex Zone Light 46
3–26) Freezer Light 46
3–27) Side Light 47
3–28) Door Switch In Freezer 47
3–29) Evaporator Cover In Freezer 48
3–30) Evaporator In Freezer 48
3–31) Comp Cooling Fan 49
3–32) Comp Cooling Fan Motor 50
3–33) Relay O/L 51
3–34) COMPRESSOR 52
3–35) Electric Box 53
3–36) ASSY TOP TABLE 54

Contents

4. Troubleshooting 55

4–1) Function for failure diagnosis 56
4–1–1. Test mode (manual operation / manual defrost function) 56
4–1–2. Display function of Communication error 57
4–1–3. Self–diagnostic function 58
4–1–4. Display function of Load condition 61
4–1–5. Cooling OFF mode setting function North American(US, Canada) Models Only 63
4–1–6. Exhibition mode setting function (All Regions Except for North America) 63
4–1–7. Option setting function 64
4–1–8. Option TABLE 66
4–2) Diagnostic method according to the trouble symptom(Flow Chart) 70
4–2–1. If the trouble is detected by self–diagnosis 72
4–2–2. If FAN does not operate 82
4–2–3. If ICE Room Fan does not operate 83
4–2–4. When ICE MAKER(FF) does not operate 84
4–2–5. If defrost does not operate (F,R DEF Heater) 85
4–2–7. When Compressor does not run (Inverter COMP.) 86
4–2–8. When alarm sounds continuously without stop(related with buzzer sound) 87
4–2–9. When the Panel PBA does not operate normally 89
4–2–10. If Mid drawer Panel PCB is not working normally 90
4–2–11. When refrigerator ROOM Lamp does not light up 91
4–2–12. If ICE Water is not supplied 92
4–2–13. If Cubed or Crushed Ice is not supplied 93
4–2–14. If Cover Ice Route Motor(Geard Motor) is not working normally 94
4–2–15. IR Sensor Trouble–Shooting 95
4–2–16. LED blinking frequency depending on protecting functions 96

5. PBA Diagram 97

5–1) PBA Layout with part position 98
5–2) PBA Layout with part position (Inverter Board) 99
5–3) Connector Layout with part position (Main Board) 100
5–3–1. RF30HB* 100
5–4) Connector Layout with part position (Inverter Board) 101
5–4–1. RF30HB* 101

6. Wiring Diagram 102

7. Block Diagram 103

7–1) Whole block diagram 103
7–1–1. MODEL : Common for All Models 103
7–1–2. RF30HB* 104

8. Model code table 105

8–1) RF30HB* 105

1. PRECAUTIONS (SAFETY WARNINGS)

- Unplug the appliance before replacing or repairing electrical parts.
  ⇒ Be careful to avoid electric shock.

- Always use only the correct replacement parts.
  ⇒ Check the model name, rating voltage, rating current, running temperature symbols.

- When troubleshooting, verify that wiring harnesses are connected securely.
  ⇒ Make sure the connectors are not separated when power is supplied.

- Check for visible traces of water on electrical parts.
  ⇒ Replace or secure any part that may have come in contact with water.

- Check the status of parts after replacement or troubleshooting.
  ⇒ All parts must be reinstalled properly.

- Check the location where the refrigerator will be used.
  ⇒ If the refrigerator will be used in a damp or wet space, or if installation will be unstable, the unit should be relocated.

- The refrigerator must be grounded properly.
  ⇒ An earth ground should be used if there is a risk of high humidity or wetness.

- The refrigerator should be plugged into a dedicated outlet.
  ⇒ Make sure the power cord is not damaged, crushed, squeezed or burned. If the plug is damaged it should be replaced.
  ⇒ If the socket is damaged, it should not be used.

- Consumers must not try to repair the refrigerator.

- Nothing should be stored in the refrigerator except food.
  ⇒ Drugs requiring precise temperatures should not be stored in the refrigerator.
  ⇒ Flammable substances (alcohol, benzene, ether, LP gas, etc.) carry risk of explosion and should not be stored in the refrigerator.

SECTION 0

Read all instructions before repairing the product and follow the instructions in order to prevent danger or property damage.
Plug out and remove all the items in refrigerator prior to repair.

CAUTION/WARNING SYMBOLS DISPLAYED

Warning	Indicates that a danger of death or serious injury exists.
Caution	Indicates that a risk of personal injury or material damage exists.

SYMBOLS

	means "Prohibited".
	means "Do not disassemble".
	means "No contact".
	means "Warning or Caution".
	means "Unplug the unit before preforming service"
	means "Earth or Ground".

Warning & Caution

Unplug to exchange the interior lamp.

- ***It may cause electric shock.***

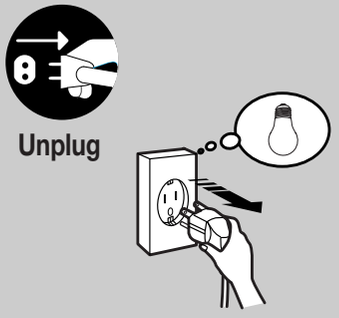

Use the rated components on the replacement.

- ***Check the correct model, rated voltage, rated current, operating temperature and so on.***

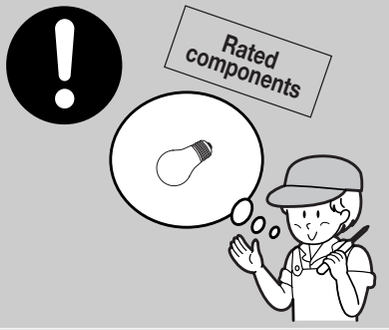

On repair, make sure that the all wiring harnesses are reconnected.

- ***Wiring harnesses should be connected tightly and kept dry.***
- ***Bundle tightly wires in order not to be detached by the external force and then not to be wetted.***

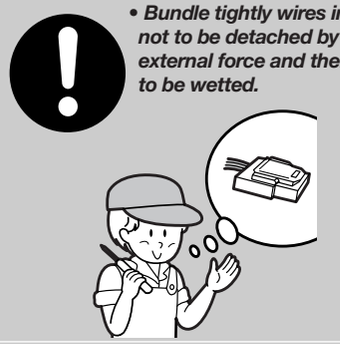

On repair, Make sure that all parts and wires are free of dust and debris.

- ***Cleaning parts could help prevent fire or shorting.***

Check the status of parts after replacement or troubleshooting.

- ***All parts must be reinstalled properly.***

Check for visible traces of water on electrical parts.

- ***Replace or secure any part that may have come in contact with water.***

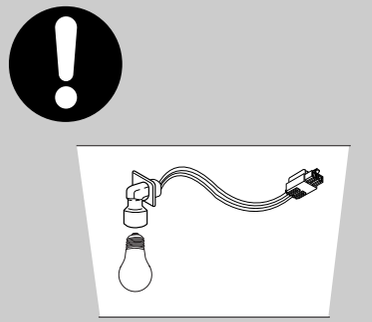

❊ ***Please let users know following warnings & cautions in detail.***

⚠ Warning & Caution

Customers should not store glass bottles of liquid in the freezer section. Frozen bottles could explode and cause injury.

Customers should not store narrow or long bottles or food in a small door shelf.

- ***These items could fall when the door is opened, causing injury tot he customer.***

Drugs requiring precise temperatures should not be stored in the refrigerator.

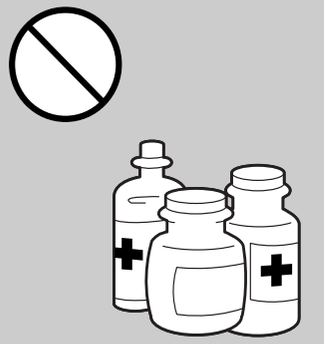

The refrigerator should be plugged into a dedicated outlet.

- ***Multiple plugs in the outlet could cause excessive heat or fire.***

Prohibited

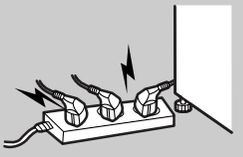

Consumers must not try to repair the refrigerator.

- ***Electrical and mechanical parts could injure the consumer.***

Do not disassemble

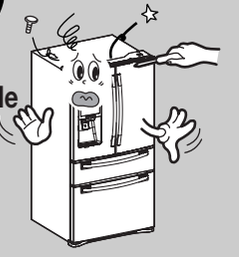

Make sure the power cord is not damaged or crushed.

- ***A damaged cord could cause excessive heat or fire.***

Articles on the product.

- ***Opening or closing the door may cause things to fall down, which may cause injury.***

Prohibition

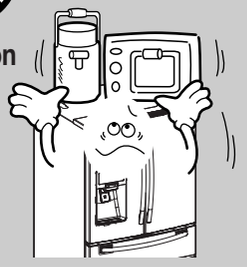

Check the location where the refrigerator will be used.

- ***If the refrigerator will be used in a damp or wet space, or if installation will be unstable, the unit should be relocated.***

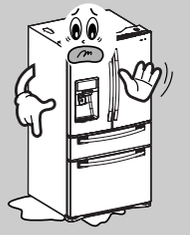

The refrigerator must be grounded properly.

- ***An earth ground should be used if there is a risk of high humidity or wetness.***

Earth

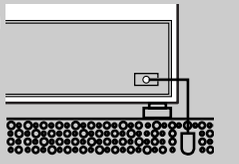

FLOORING

For proper installation, this refrigerator must be placed on a level surface of hard material that is the same height as the rest of the flooring. This surface should be strong enough to support a fully loaded refrigerator.

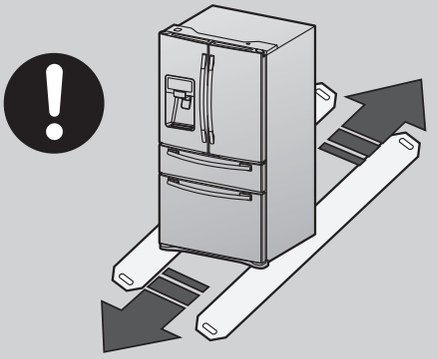

MOVING

Protect the finish of the flooring. Cut a large section of the cardboard carton and place under the refrigerator where you are working. When moving, be sure to pull the unit straight out and push back in straight.

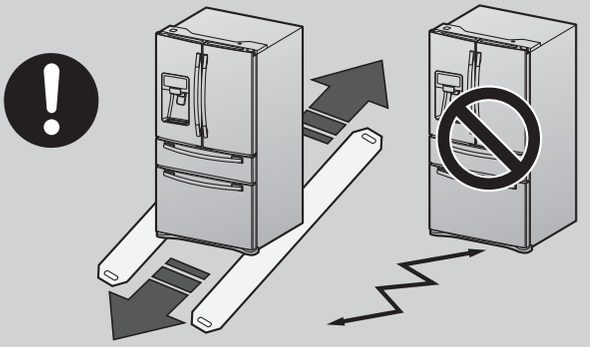

2. PRODUCT SPECIFICATIONS

2–1) Introduction of Main Function 10
2–2) Specifications 12
2–3) Interior Views 13
2–4) Model Specification & Specification Chart 14
2–5) Dimensions of Refrigerator (Inch, mm) 17
2–6) Optional Material Specification 18
2–7) Refrigerant Route in Refrigeration cycle 19
    2–7–1. Principle of freezeer 20
    2–7–2. Operation theory of refrigeration cycle components 21
    2–7–3. Refrigeration Cycle Type 23
2–8) Cooling Air Circulation 24

PRODUCT SPECIFICATIONS

2–1) Introduction of Main Function

• A newly developed SAMSUNG French door refrigerator in 2014 has the following characteristics.

	Surround Multi Flow • Provides uniform cooling for each shelf and every corner in the fresh food section. This is accomplished by using a center positioned fan and duct with multiple cooling flow openings.
	Twin Cooling System • The refrigerator and the freezer each have an evaporator. Given this independent system, the freezer and the refrigerator are cooled individually as required and are, therefore, more efficient. Food odor from the refrigerator does not affect food in the freezer due to separate air flow circulation.
	Flex Zone • The Flex Zone is a full-width independent mid drawer with adjustable temperature control.
	Counter Height Design • The Independent Mid Drawer(Flex zone) is counter Height to fit contemporary kitchen.
	Two Lever Dispenser • Two levers, one for ice and sparkling water, another one for water.
  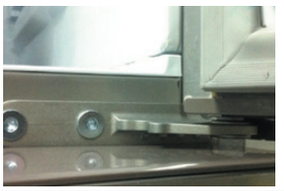	**Secure Auto Close Door System** • Doors close tightly. • Food on the doors stays cool. • Prevents moisture from forming on the outside of the doors.

PRODUCT SPECIFICATIONS

▶ Changing Items

NO	Item	Details	New Model
1	Ez-Open Handle System	The freezer door and Mid drawer (Flex zone) open and close easily.	
2	Emotional Lighting	The lighting helps you find groceries Easier by lighting down when you open Mid drawer(Flex zone) and freezer door.	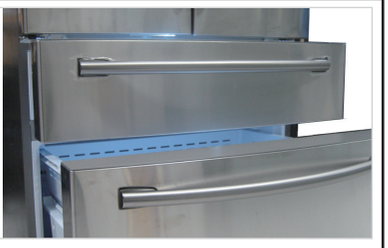
3	Smart Divider	- Easy rail partition can divide off 4 independent spaces easily. - The rail partition allows you to divide the space of the convertible room easier.	
4	Touch Sensor Lighting	The display change more wider and apply LED lighting. And Touch Sensor Lighting make the refrigerator graceful.	
5	Mono Ice Maker	10 Cubes Ice-Maker (RF31FM**) 6 Cubes Ice-Maker (RF24FS**)	

PRODUCT SPECIFICATIONS

2–2) Specifications

ELECTRICAL SPECIFICATIONS

Defrost Control ..... From 12 to 22 hrs(comp.run time)
Thermo Bimetal Protector .....140°F(60°C)(off) 104°F(40°C)(on)
Defrost Thermistor(502AT) ..... F: 50°F(10°C)(off)
R: 59°F(15°C)(off)
Electrical Rating ..... 11.6 Amps
Maximum Current Leakage .....0.25 mA
Maximum Ground Path Resistance .....0.1 Ohm
Energy Consumption.....562kWh/year

NO LOAD PERFORMANCE

Ambient Temperature	70°F(21°C)	90°F(32°C)
Refrigerator	44°F(7°C) ~	34°F(1°C)
	34°F(1°C) ~	46°F(7°C)
Flex Zone	29°F(–1°C) ~	42°F(5°C)
	29°F(–1°C) ~	42°F(5°C)
Freezer	5°F(–15°C)	–8°F(–23°C)
	–8°F(–22°C)	8°F(–14°C)
Run Time,%	〈 60	〈 80

REFRIGERATION SYSTEM

Refrigerant Charge (R134a) ..... 5.64 oz(160g)
MKV190C–L2B/MKV190G–L2B ..... 1314 Btu/hr(0.385kw)
Compressor oil ..... Freol α 15c
R Capillary tube(Dia, Length ..... 0.032 " ,118 "
(0.82mm,4000mm)

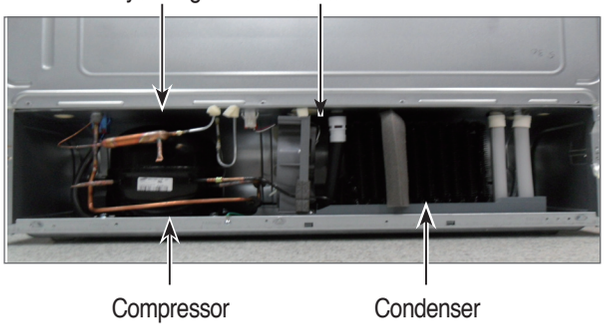

INSTALLATION

Clearance must be provided for air circulation

AT TOP	2"(50mm)
AT SIDES	3¾"(95mm)
AT REAR	2"(50mm)
.....	

REFRIGERATOR

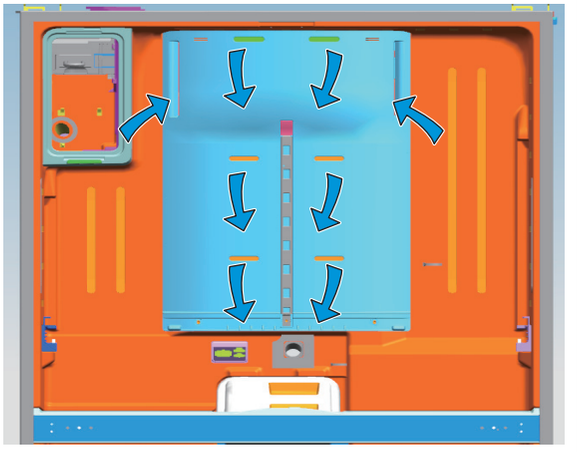

FLEX ZONE

FREEZER

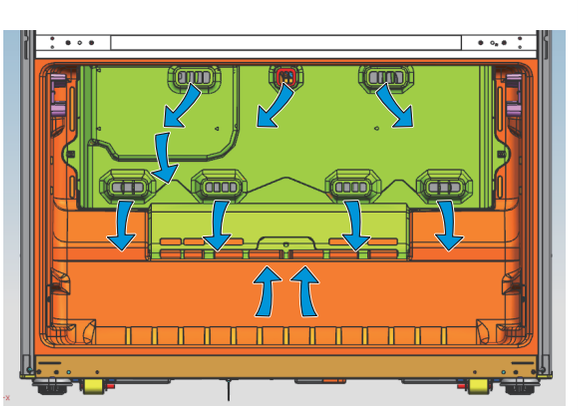

PRODUCT SPECIFICATIONS

2–3) Interior Views

Model : RF30HB*

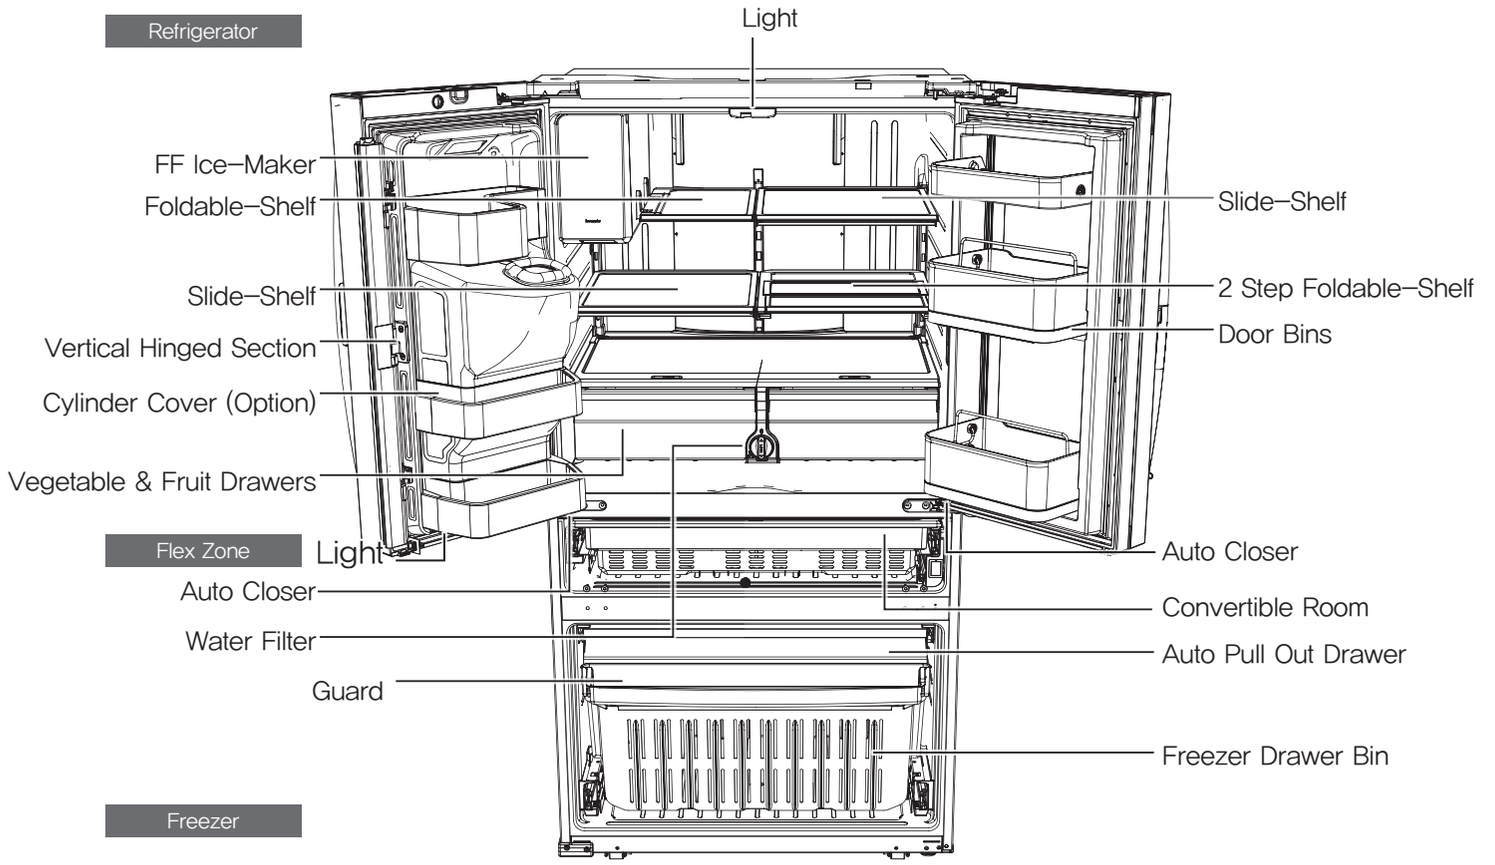

PRODUCT SPECIFICATIONS

2-4) Model Specification & Specification Chart

ITEM	Model		RF30HB*	
			① ICE&WATER DISPENSER& SPARKLING WITH FLEX ZONE ② ICE&WATER DISPENSER WITH FLEX ZONE	
External size	W		35 6/8 Inch (908mm)	
	D	On Cabinet	31 Inch (788mm)	
		W/O Handle	35 1/2 Inch (901mm)	
		With Handle	37 7/8 Inch (963mm)	
	H	W/O Hinge Cap	68 7/8 Inch (1749mm)	
		With Hinge Cap	70 Inch (1777mm)	
Net Capacity	Total		29.5 (835.5 ℓ)	
	Freezer		9.0 (254.9 ℓ)	
	Flex Zone		4.09 (115.8 ℓ)	
	Refrigerator		16.41 (464.8 ℓ)	
Efficiency of Volume With Handle			59.60%	
Weight	Set		185kg	181kg
	Packing		196kg	192kg
Packing	Width		38 1/4 Inch (972mm)	
	Depth		38 1/4 Inch (972mm)	
	Height		76 Inch (1931mm)	
Compressor			RECIPROCATE	
Rated Frequency and Frequency			AC 115V/60Hz	
Refrigerant			R134a	
Foaming Agent			C-PENTANE	
Refrigerant Input Amount			5.29 oz (160g)	
Type Refrigerator			INDIRECT COOLING METHOD REFRIGERATOR	
Motor Rated Consumption Power			115W	
Electric Heater Rated Consumption Power			490W	

PRODUCT SPECIFICATIONS

Items				Specification
Model				RF30HB*
Components for Freezer	Compressor		Model	MKV190CL2B/E01
			Starting type	BLDC
			Oil Charge	FREOL α – 15c
	Evaporator		Freezer	SPLIT FIN TYPE
			Refrigierator	SPLIT FIN TYPE
	Condenser			Forced and Natural Convection Type
	Dryer			Molecular shieve XH–9
	Capillary tube (Dia x Length)			R:0.032" (0.082mm x 3500mm)
	Refrigerant			R134a
Room Temperature Sensor Components	Freezer	Model	Temperature Selection	On(˚F)
		THERMISTOR (F–SENSOR)	–8˚F (–23˚C)	–5˚F (–21˚C)
			–0˚F (–18˚C)	3˚F (–16˚C)
			5˚F (–15˚C)	8˚F (–12˚C)
	Refrigerator	Model	Temperature Selection	On(˚F)
		THERMISTOR (R–SENSOR) 502AT	34˚F (1˚C)	36˚F (2˚C)
			37˚F (3˚C)	39˚F (4˚C)
			44˚F (7˚C)	46˚F (8˚C)
Defrost Related Components	Defrost Cycle	First Defrost Cycle (Concurrent defrost of F and R)		6hr ± 10min
		Defrost Cycle (FRE)		12~30hr (vary according to the conditions used)
		Defrost Cycle (REF)		6~15hr (vary according to the conditions used)
		Pause Time		12 ± 1min
	Defrost Sensor	F Defrost–Sensor	Model	THERMISTOR (502AT)
			SPEC	5.0 kΩ at 77˚F (25˚C)
		R Defrost–Sensor	Model	THERMISTOR (502AT)
			SPEC	5.0 kΩ at 77˚F (25˚C)
	Bimetal	F Bimetal–thermo Protector	Rated	AC 125V, 6A / AC 250V 3A
			Operating temperature	Off : 140˚F (60˚C) / On : 104˚F (40˚C)
		R Bimetal–thermo Protector	Rated	AC 125V, 6A / AC 250V 3A
			Operating temperature	Off : 140˚F (60˚C) / On : 104˚F (40˚C)

PRODUCT SPECIFICATIONS

Items			Specification
Model			RF30HB*
Electric Components	Defrost Heater (FRE)	Heated at F Defrost	AC 120V, 230W
	Defrost Heater (REF)	Heated at R Defrost	AC 120V, 100W
	Heater-Ice Maker		F/S : AC 120V, 141W C/D : AC 120V, 120W
	DISPENSER Heater	Interlock with French Heater	AC 120V, 2.5W
	FRENCH Heater	-	AC 120V, 10W
	Heater Water Pipe	-	DC12V, 2.3W
	Heater Ice room	-	DC12V, 2W
	Bimetal Thermo For Preventing of Refrigerator Heater		AC 125V 6A / AC 250V 3A Off : 140°F(60°C), On : 104°F(40°C)
	Over Load Relay	Model	4TM445PHBYY-82
		Temp. ON	156.2 ± 16.2°F (69 ± 9°C)
		Temp. OFF	257 ± 9°F (125 ± 5°C)
	Rated Voltage		AC 115V/60Hz
	Motor-BLDC(FRE)		DC 12V / DREP5020LC
	Motor-BLDC BOX FAN		DV 12V, 0.1A / 2606JL-04W-S39-UQ1
	Motor-BLDC BOX FAN		DC 12V, 0.16A / 2606JL-04W-S39-UQ1
	Motor-BLDC(CIRCUIT)		DC 12V, 0.14A / DRCP8020LA
	Lamp LED(FRE)		DC 12V / 85 ~ 130mA
	Lamp LED(REF)		DC 12V, 85~130mA DC 12V, 40~80mA
	Lamp LED(VEG)		DC 12V / 95~145mA
	Lamp LED(MID)		DC 12V / 85 ~ 130mA
	Lamp LED(Door)		DC 12V / 272~368mA
	Door Switch	FRE	DC 200V 1.0A / MS-406-SS-01 (1EA)
		REF	DC200V 1.0A / MS-406-SS-01 (2EA)
		REF (ICE ROOM)	125VAC 5A, 250VAC 2.5A
		MID	DC 200V 1.0A / MS-406-SS-01 (1EA)
	Power Cord		AC 125V 15A
	Earth Screw		BSBN (BRASS SCREW)

2–5) Dimensions of Refrigerator (Inch, mm)

Model : RF30HB*

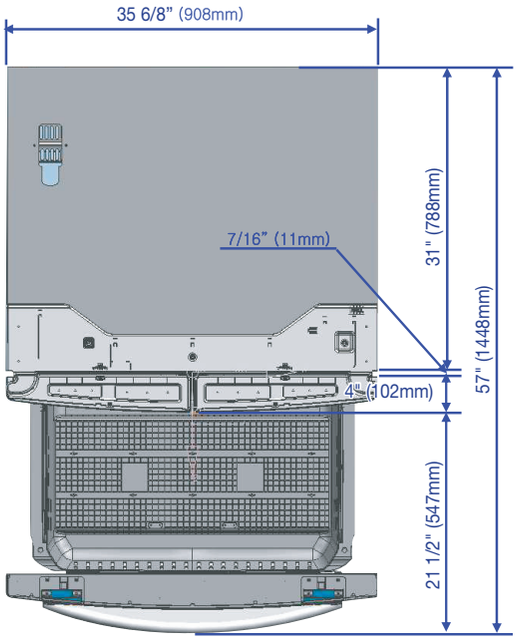

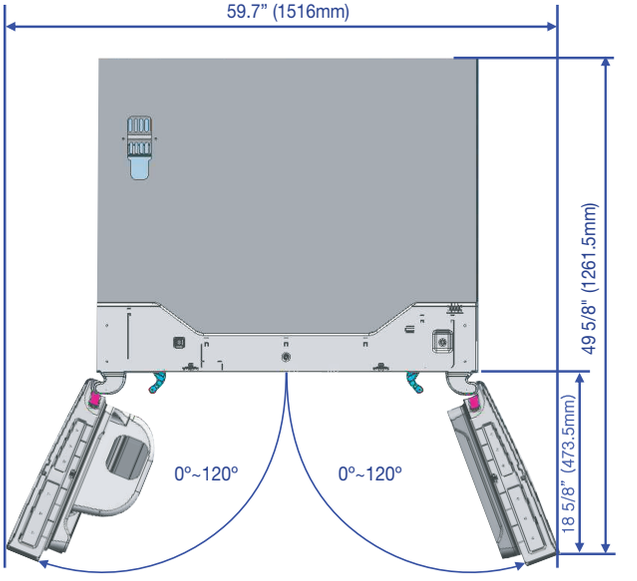

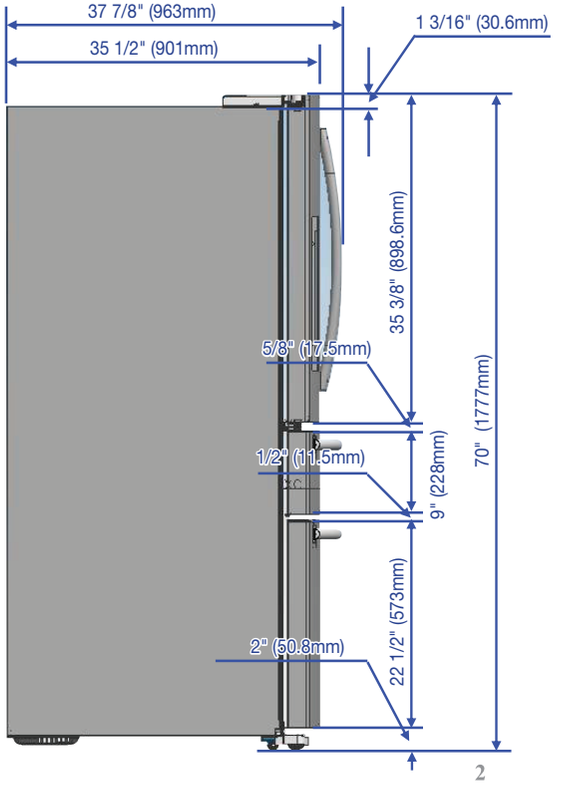

2-6) Optional Material Specification

	Part Name	Part Code	AMOUNT
	FILTER WATER-ASSY	DA29-00019A	1
	ASSY-PACKING SUB	DA99-03490Q	1
	LED LAMP REF	DA97-12606A	1
	LED LAMP CASE-VEG R, L	DA41-00519S	1
	LED LAMP FRE	DA41-00676G	1
	LED LAMP MID	DA41-00676G	1
	LED LAMP REF(SIDE)	DA41-00519Q	2
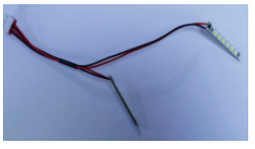	LAMP LED Door	DA96-01060B	2

2-7) Refrigerant Route in Refrigeration cycle

Compressor → Condenser → Hot Pipe → Back Cluster Pipe → Dryer → Capillary Tube → Refrigerator Evaporator → Pipe Direct Ice → Freezer Evaporator → Suction Pipe → Compressor

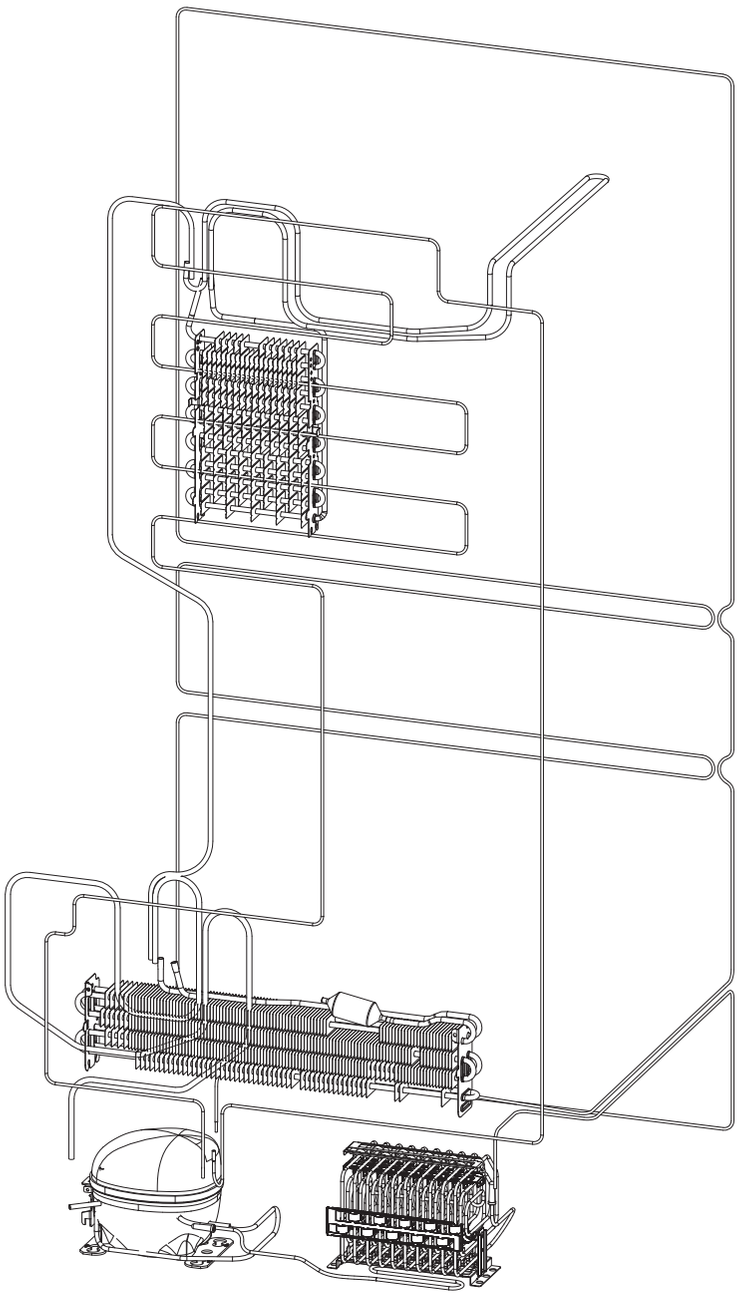

2-7-1. Principle of freezeer

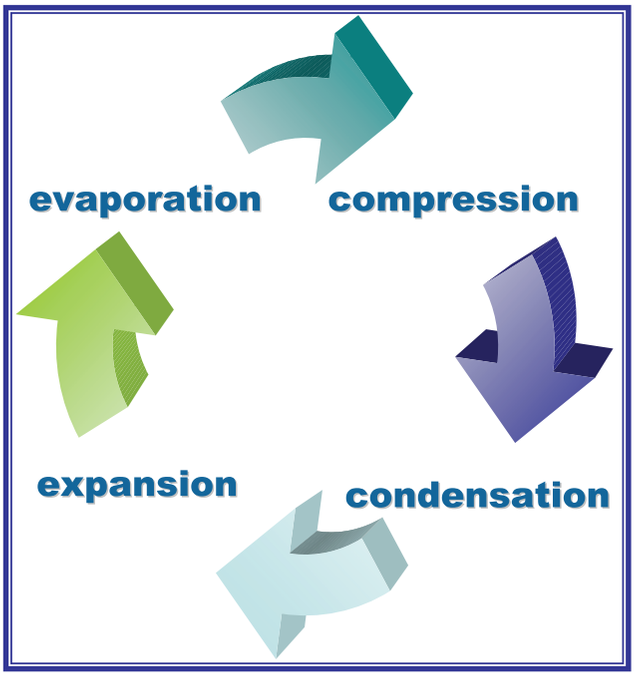

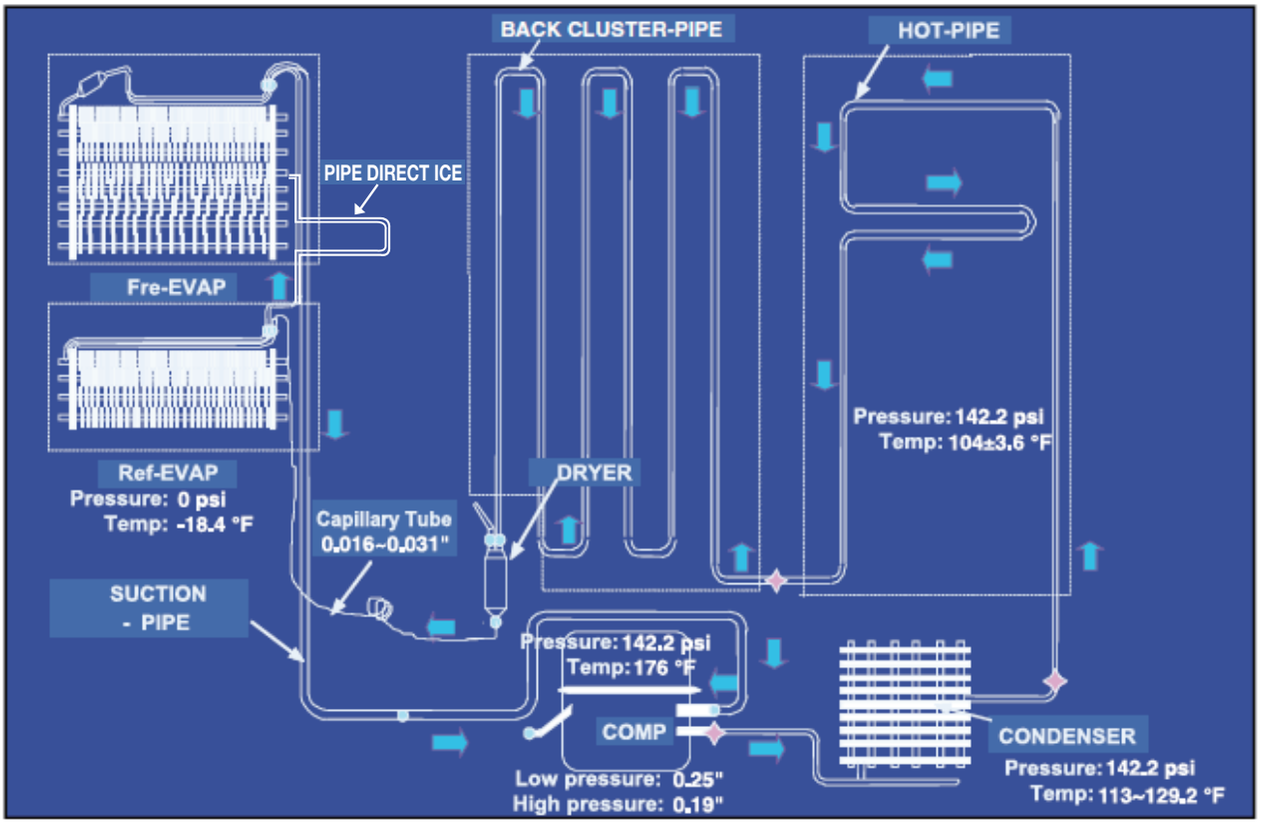

2–7–2. Operation theory of refrigeration cycle components

■ Condenser

1) Role: A device which radiates heat to the outside (water/air) to make liquid state for the high temperature / high pressure gas refrigerant discharged from compressor

2) Types

A. Air-cooling Type : Condense air by circulating naturally or manually.

1) Natural Convection Type : Used for the household refrigerator which has small condensing capacity.

2) Manual Convection Type : Circulate air manually by FAN-Motor (Large capacity)

B. Water-cooling Type : Make cooling water pass through the pipe in the condenser (Large capacity)

※ Location

① CLUSTER heat-radiating type : All Pipes effective for radiating heat are formed in the right/left, and front side of refrigerator with hard urethanes and radiate heat through the whole surfaces of cabinet to ambient air.

② Install the condenser on the outside of the product. (An old model)

③ Make them cluster at the lower part of product and radiate heat manually by fan.

※ Radiate condensed potential heat up to liquefy completely and make change the state without changing the gas temperature itself.

※ Pipe thickness

① Low pressure : 0.7mm ② High pressure : 0.7mm ③ Capillary : About 0.4~0.8mm

※ Condenser length : 32.75m

① SUB-CONDENSER : 14.25m ② HOT-PIPE : 10.7m ③ CLUSTER-PIPE : 7.8m

■ Capillary

1. Role: A device which makes low temperature and pressure refrigerant by reducing the pressure the normal temperature / high pressure liquid refrigerant condensed from condenser, and supply it to the evaporator.

A. To evaporate more lower temperature in case of evaporation.

B. It flows to the evaporator without back flowing to condenser, if compressor stops, and the difference of pressure between high pressure and low pressure is small so it is easy to operate the compressor again.

2. Outline

A. Thickness : About 0.4~0.8mm

B. Length : It is changeable to low temperature and pressure (10->5ß∏/ß≤) depends on the 2M of thin and long copper pipe wall resistance.

■ Evaporator

1. Role: As the low pressure liquid refrigerant flowed from capillary absorbs heat inside of the refrigerator, it becomes low pressure gas and refrigerate the foods.
2. Theory: The low pressure refrigerant flowed to evaporator operates cooling which takes ambient evaporated potential heat with maintaining the evaporation up to evaporate completely.
3. Type

A. ROLL-BOND Evaporator ⋯› Direct Cooling ONE-DOOR Type

☞ Rolled and adhere the 2 aluminum plate and then make refrigerant passage.

B. FIN-PIPE Evaporator ⋯› Indirect cooling TWO-DOOR Type

☞ a small aluminum plate on the aluminum pipe to increase the cooling effect.

■ Compressor

1. Role: It operates same as pump which pull out the subterranean water. It inhales the low temperature and pressure refrigerant gas (flowed out) from evaporator and make high temperature and pressure refrigerant liquid in the compressor and send it to the condenser.
2. Type

a. Back-and-forth motion type: A method that pistol makes back-and-forth motion through shaft and cylinder of motor rotation and compresses.
※ Used for household refrigerant

b. Rotary Type: A method that inhales the refrigerant gas through the gap between the outside of rotor electric attached on the shaft and the inside of cylinder and compresses.

c. Centrifugal Type

■ Dryer

1. Role: Absorb the moisture from the refrigerant that refrigeration cycle circulates and eliminate the foreign substance.
2. Structure: If even some moisture is included refrigerant is impossible to circulate by freezing the small capillary outlet, so silica gel or molecular sieve is (included and) sealed to absorb the internal moisture, and install a minute net to eliminate the foreign substance.

※. Influence of moisture

① Moisture precipitation - Blocked by ice
② Refrigerant and reaction
③ Life reduction of oil
④ Acceleration of oxidization
⑤ Copper plating phenomenon
⑥ Gas dissolution by the interaction of synthetic insulating material (insulator)

※. Influence of foreign substance

① Increase of condensed temperature.
② Increase of temperature.
③ Decrease of cooling efficiency
④ Shorten the life by friction between oil and foreign substance in the compressor.

■ Accumulator

1. Role : To send a pure refrigerant gas to compressor by removing completely the refrigerant liquid from evaporator.

※ If a refrigerant liquid go into the compressor, overload is occurred.

2–7–3. Refrigeration Cycle Type

HM Cycle

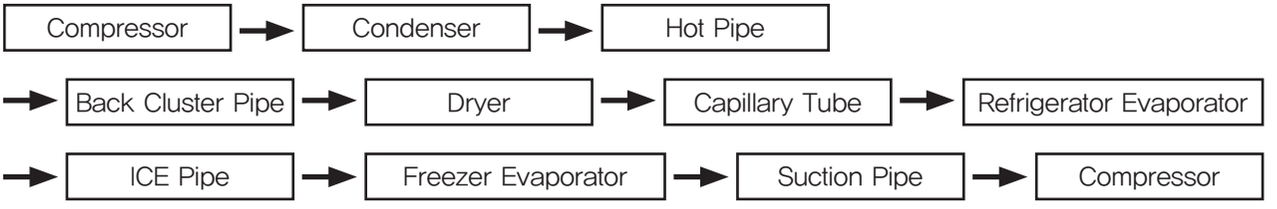

2-8) Cooling Air Circulation

Refrigerator

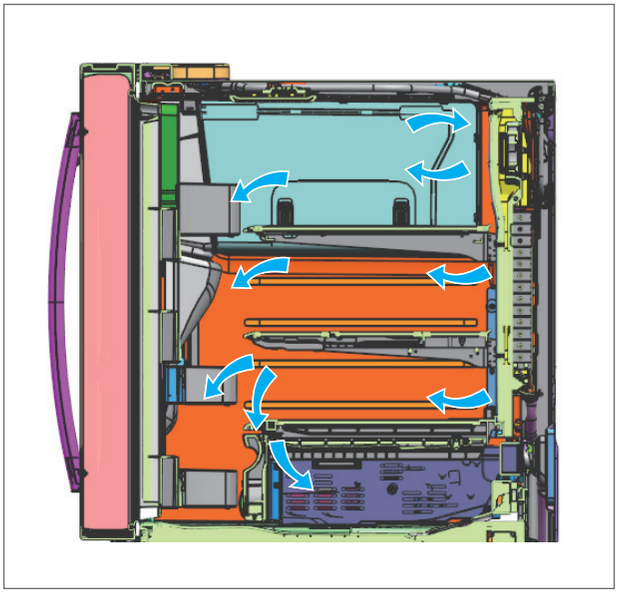

Flex Zone

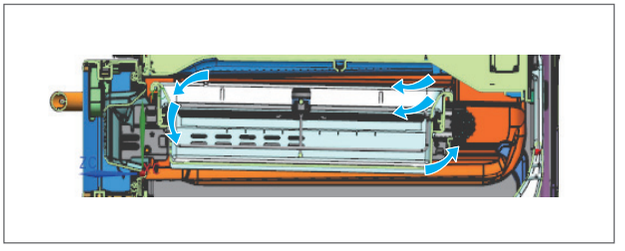

Freezer

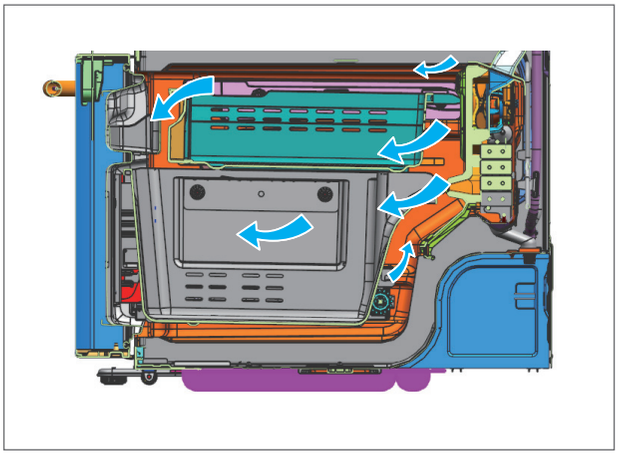

Ice Maker Air-flow

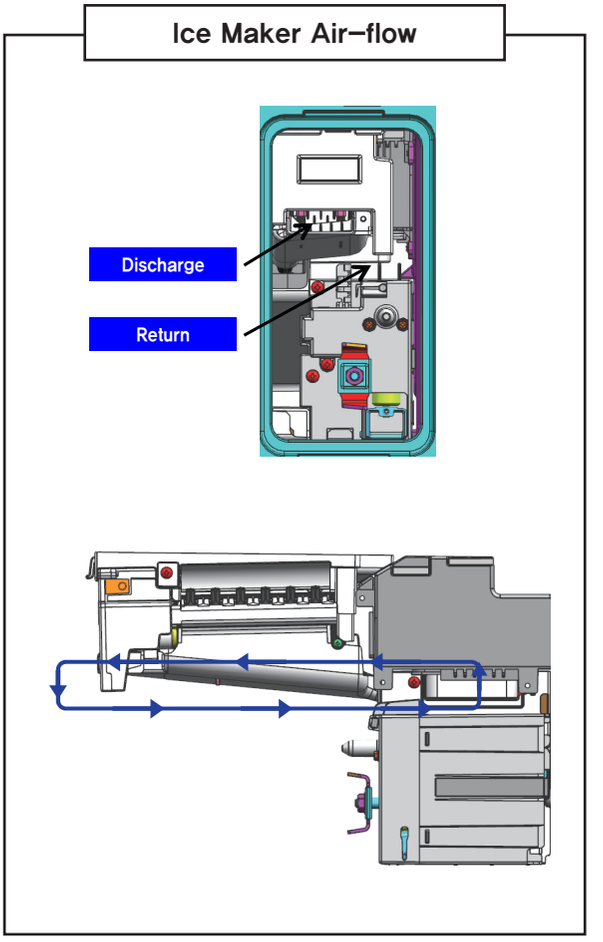

3. DISASSEMBLY AND REASSEMBLY

3–1) PRECAUTION 26
3–2) Refrigerator Door 27
3–3) Door Handle Refrigerator 29
3–4) Door Handle Freezer & Flex zone 29
3–5) Refrigerator Light 30
3–6) Cover–Display & Water–Dispenser 30
3–8) Water–Dispenser 31
3–9) Glass Shelf 32
3–10) Foldable Glass Shelf 32
3–11) Vegetable & Fruit Drawers Shelf 32
3–12) Case Water Filter 33
3–14) Motor Damper 35
3–15) Water Filter (Assembly & Disassembly) 36
3–17) Gallon Door Bin (RF30HB*) 37
3–18) Vertical Hinged Section 38
3–19) Evaporator Cover In Refrigerator 39
3–20) Evaporator In Refrigerator 40
3–21) Freezer Door 41
3–22) Convertible Door 42
3–23) Ice–Maker 43
3–24) Auger Motor Fan 45
3–25) Flex Zone Light 46
3–26) Freezer Light 46
3–27) Side Light 47
3–28) Door Switch In Freezer 47
3–29) Evaporator Cover In Freezer 48
3–30) Evaporator In Freezer 48
3–31) Comp Cooling Fan 49
3–32) Comp Cooling Fan Motor 50
3–33) Relay O/L 51
3–34) COMPRESSOR 52
3–35) Electric Box 53
3–36) ASSY TOP TABLE 54

DISASSEMBLY AND REASSEMBLY

3–1) PRECAUTION

- Unplug the refrigerator before cleaning and making repairs.
- Remove any foreign matter or dust from the power plug pins.
  – Otherwise there is a risk of fire.
- Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- Do not plug several appliances into the same multiple power board. The refrigerator should always be plugged into its own individual electrical which has a voltage rating that matched the rating plate.
  – This provides the best performance and also prevents overloading house wiring circuits, which could cause a fire hazard from overheated wires.
- Do not install the refrigerator in a damp place or place where it may come in contact with water.
  – Deteriorated insulation of electrical parts may cause an electric shock or fire.
- The refrigerator must be grounded.
  – You must ground the refrigerator to prevent any power leakages or electric shocks caused by current leakage from the refrigerator.
- Do not put bottles or glass containers in the freezer.
  – When the contents freeze, the glass may break and cause personal injury.
- Do not store volatile or flammable substances in the refrigerator.
  – The storage of benzene, thinner, alcohol, ether, LP gas and other such products may cause explosions.

- Required Tools

IMAGE	ITEM	USE
	Phillips Head Driver	Use for assembling and disassembling of screw
	Flat Head Driver	Use for assembling and disassembling of HomeBar, Dispenser, Deli Cartessen Box, Main PBA etc...
	Hex Wrench ø2mm	Use for assembling and disassembling of Handle
	Socket Wrench ø10mm	Use for assembling and disassembling of Door Hinge

- Water whitening phenomenon

All water provided to refrigerators flows through the core filter which is an alkaline water filter. In this process, the pressure in the water that has flowed out of the filter gets increased, and massive oxygen and nitrogen become saturated. When this water flows out in the air, the pressure plummets and the oxygen and nitrogen get supersaturated so that they turn into gas bubbles. The water could look misty due to these oxygen bubbles. It is not because dust or chemicals, just a few seconds later, it will be clean again.

3–2) Refrigerator Door

Part Name	How To Do	Descriptive Picture
Refrigerator Door	1. Remove the 3 screws holding down the Top Table and remove the Top Table (I)	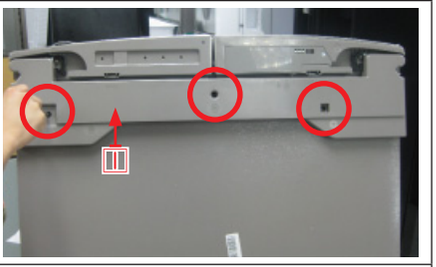
	2. Disconnect the electrical (2) above the upper left door hinge To disconnect the connector (2) more easily, press the end of the hook (3) and pull connector. CAUTION Make sure unit is unplugged.	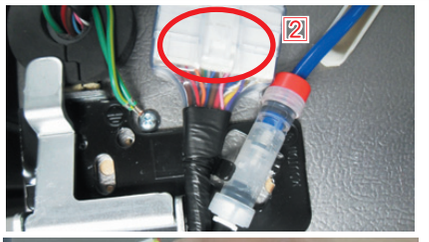
	3. As shown in the picture, Remove water tube from hinge (4) by holding at the both sides of the Tube Fitting and pulling it out. And, remove the Tube Fitting (5) by pulling the water hose after pushing in the locking ring tab at the end of the Tube Fitting.	
	4. After pulling the Hinge Lever, remove the Hinge.	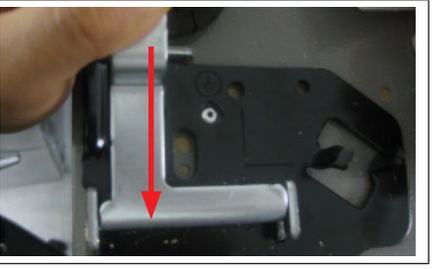

Part Name	How To Do	Descriptive Picture
Refrigerator Door	5. Lift the door straightly up to remove while opening it more than 90°. CAUTION Be careful not to drop the door.	
	6. With a Philips head screwdriver, remove the screw (6) attatched to the lower left and right door hinges. With a 3/16"(0.2) in Hex wrench, remove the 2 flat head screws (7) Remove the lower left and right door hinges (8).	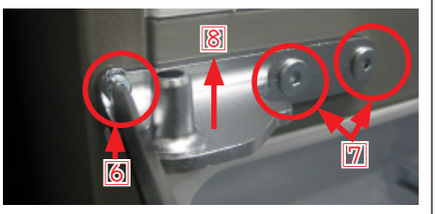
	7. With a Philips head screwdriver, remove the screw(9). After, With Flat Head Driver(10), Lift up and remove the Auto Hinge (11)	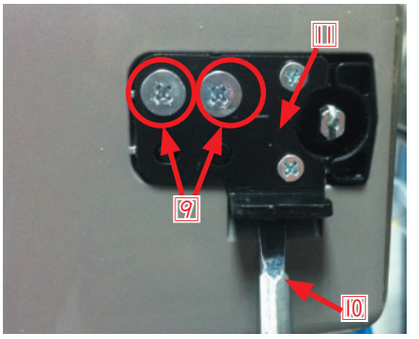
	8. If the Auto Closing Hinge is aligned to be vertical as shown in the figure, align it to be parallel by using the Door Middle Hinge. (Refer to No.5 for the disassembly of the Door Middle Hinge) CAUTION Do not use a flat head screwdriver to align the Auto close Hinge. It may get damaged. Use the Door middle Hinge instead.	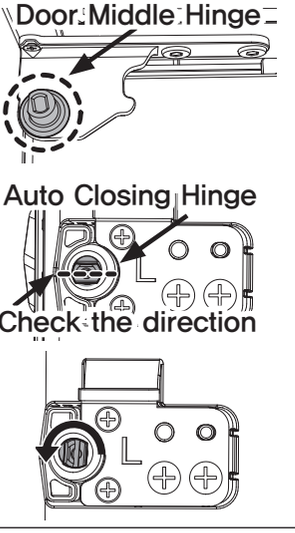

3–3) Door Handle Refrigerator

Part Name	How To Do	Descriptive Picture
Door Handle Fridge	1. Loosen the Set Screw situated at the end of the inner part of handle about 0.1in by using Hex wrench.	
	2. Pull the Set handle out by moving it straight up. CAUTION Be careful not to scratch or break the parts.	

3–4) Door Handle Freezer & Flex zone

Part Name	How To Do	Descriptive Picture
Door Handle Freezer	1. Loosen the Set Screw situated at the bottom right of the appliance about 0.1in by using Hex wrench.	
	2. Pull the Set handle out by moving it to the right side. CAUTION Be careful not to scratch or break the parts.	

3–5) Refrigerator Light

Part Name	How To Do	Descriptive Picture
Refrigerator Light	1. Press the tabs on the back of the Lamp Cover and take it off.	
	2. Remove the 2 screws And separate the LED panel.	

3–6) Cover–Display & Water–Dispenser

Part Name	How To Do	Descriptive Picture
Cover–Display	1. Remove a screw under the display cover.	
	2. Remove the display cover by pulling it up. Put the thumbs on the surface door and hold the bottom of the Display Panel with four fingers. And then, pull out the Display Panel as shown in the photo to remove it. CAUTION Take care not to break the Locking Tabs.	

3–8) Water–Dispenser

Part Name	How To Do	Descriptive Picture
Water–Dispenser	1. Disengage the Housing Connector by pushing a flat–blade screwdriver.	
	2. Remove 2 screws of the Case Ice Route Assy.	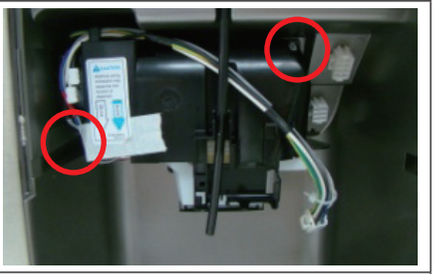
	3. Pull the Case Ice Route Assy.	
	4. Assembly shall be in order from the disassembly. Make sure to fix the hose to the Case Ice Route before assembling the Display.	
	5. When assembling Cover–Display, first insert it from upper side and then assemble to bottom side. Otherwise, the hook can be broken.	

3–9) Glass Shelf

Part Name	How To Do	Descriptive Picture
Glass Shelf	Remove the shelf by lifting the front part of the shelf up and pulling it out.	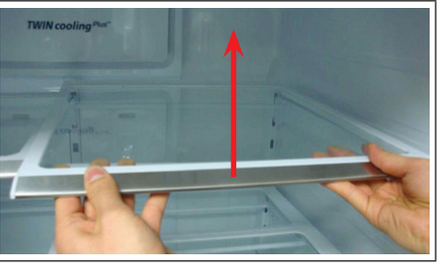

3–10) Foldable Glass Shelf

Part Name	How To Do	Descriptive Picture
Foldable Glass Shelf	1. Remove 2 screws of the Folderble Glass Shelf.	

3–11) Vegetable & Fruit Drawers Shelf

Part Name	How To Do	Descriptive Picture
Vegetable & Fruit Drawers Shelf	1. Remove the vegetable & fruit drawer by pulling the roller part and lifting it up.	
	2. While pressing the button on the left of the shelf in the picture, lift up the Vegetable & Fruit Drawer Shelf. (Refer to the picture)	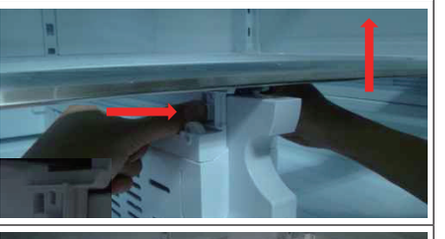
	3. Remove the vegetable & fruit drawer shelf by pulling it out. (Refer to the picture)	

3–12) Case Water Filter

Part Name	How To Do	Descriptive Picture
Case Water Filter	To disassemble the Case Water Filter, remove the water filter and all drawers and shelves.	
	1. Remove the 3 screws holding down the Top Table and remove the Top Table (1).	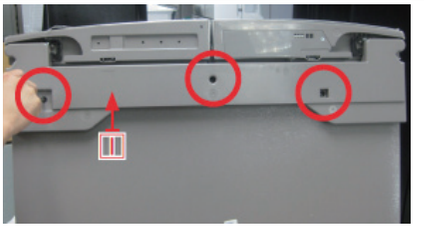
	2. a. Remove Cover Tube Fitting (1). b. Remove the Water tube (blue) from the tube fitting by pushing in on the locking ring (2) and pulling out the tube.	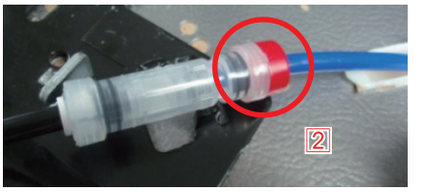 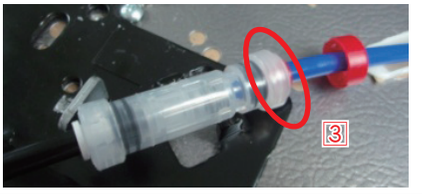
	3. Remove three screws securing the water tubes.	
	4. a. Pull the Water blue hose out. b. Push the Tube Fitting (4) and pull the grey hose out.	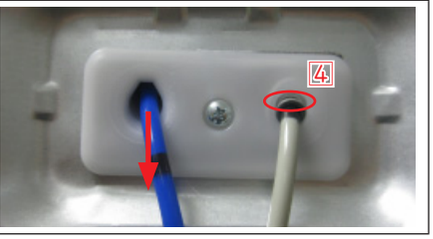

DISASSEMBLY AND REASSEMBLY

Part Name	How To Do	Descriptive Picture
Case Water Filter	5. Disconnect the 2 Housing connectors (5).	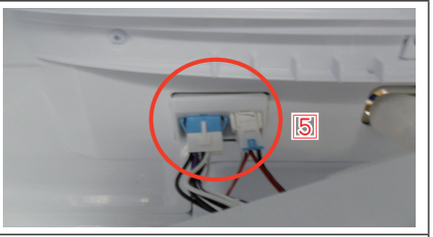
	6. Lift and pull the Case Water Filter out.	

3-14) Motor Damper

Part Name	How To Do	Descriptive Picture
Motor Damper	1. Remove the 2 screws under the. water filter case and take off the cover damper (②).	
	2. Disengage 2 housing connector.	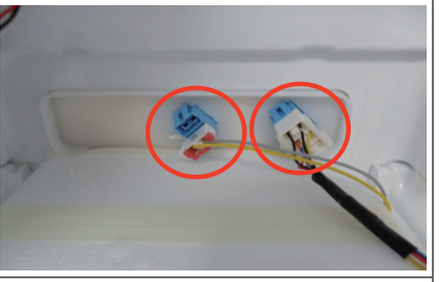
	3. Take off the Motor Damper by pulling a flat-blade screwdriver.	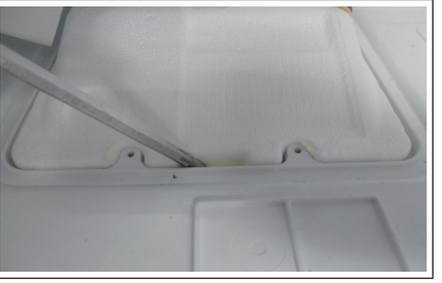

3–15) Water Filter (Assembly & Disassembly)

Part Name	How To Do	Descriptive Picture
Water Filter	1. Turn the water filter count–clockwise. (Refer to the picture)	
	2. Remove the water filter by pulling it. (Refer to the picture)	
	3. Push the water filter directly.	
	4. Turn the water filter clockwise until it locked.	

CAUTION

Be sure to flush the dispenser thoroughly (approx. 6 to 7 minutes), otherwise water may drip from the dispenser. This means that there is still air in the line.

3–17) Gallon Door Bin (RF30HB*)

Part Name	How To Do	Descriptive Picture
Gallon Door Bin (Right)	1. Remove the door bin by moving straight up.	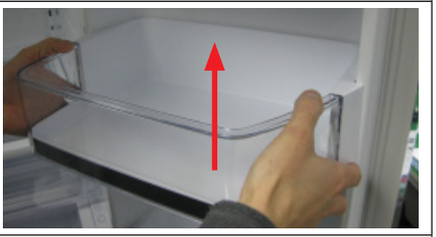
Gallon Door Bin (Left)	2. a. Remove dis door bin by moving straight up. b. Remove by moving up the left side of door bin.	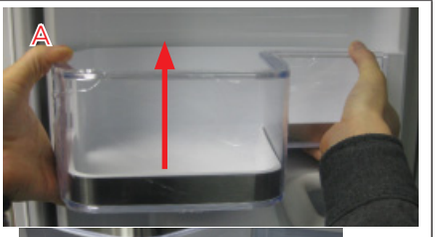

3–18) Vertical Hinged Section

Part Name	How To Do	Descriptive Picture
Vertical Hinged Section (center mullion attached to left side refrigerator door)	1. Remove 2 screw cap parts with a flat–blade(–) screwdriver. (Refer to the picture) CAUTION Before doing the above, make sure that the unit is unplugged.	
	2. Unscrew 2 screws.	
	3. Disengage the internal housing connector of the vertical hinge. CAUTION Before doing the above, make sure that the unit is unplugged.	
	4. Remove the vertical hinged section by lifting the vertical hinge up. (Refer to the picture)	

3–19) Evaporator Cover In Refrigerator

Part Name	How To Do	Descriptive Picture
Evaporator Cover In Refrigerator	1. Remove the angle cap with a flat–blade screwdriver. (Refer to the picture) CAUTION Be careful not to scratch or break the parts	
	2. Loosen the 4 screws, which fix the Evaporator cover	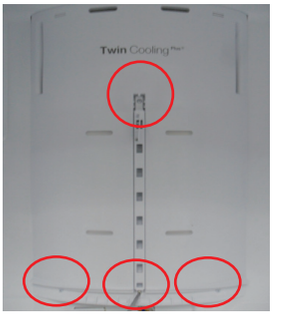
	3. Remove the the lower part of angle mid by pulling it out and pushing it down. (Refer to the picture)	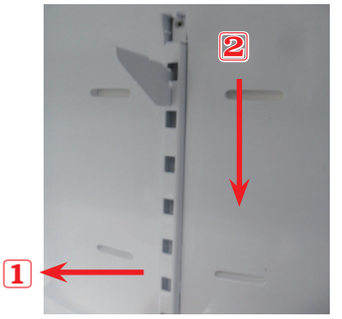
	4. Lift up the evaporator cover.	
	5. Disconnect the 2 housing connectors. (Refer to the picture) CAUTION Before doing the above, make sure that the unit is unplugged.	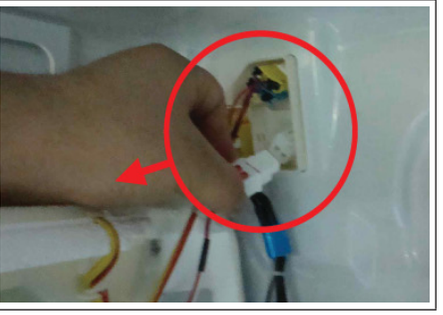

3-20) Evaporator In Refrigerator

Part Name	How To Do	Descriptive Picture
Evaporator In Refrigerator	1. Disconnect the housing connector part on left side. CAUTION Before doing the above, make sure that the unit is unplugged.	
	2. Disconnect the housing connector on right side.	
	3. Remove the evaporator by moving it up while holding both of bottom sides	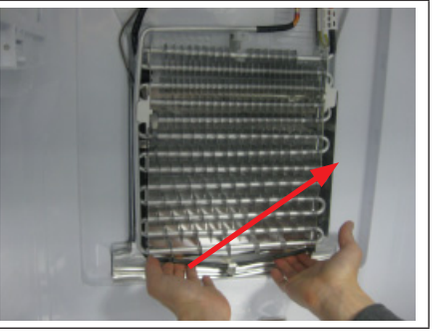

3-21) Freezer Door

Part Name	How To Do	Descriptive Picture
Freezer Door	1. Pull out the Pull Out Drawer by maximum.	
	2. After lifting the Pull Out Drawer up holding both sides, remove it at the rail system.	
	3. Remove the Tilting Pocket(Ⅰ) by lifting it up	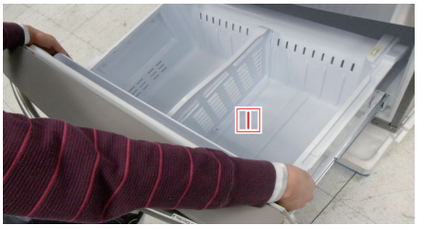
	4. After lifting the Freezer Guard up holding both sides, remove it at the rail system.	
	5. Press the fixing hook of rail system.	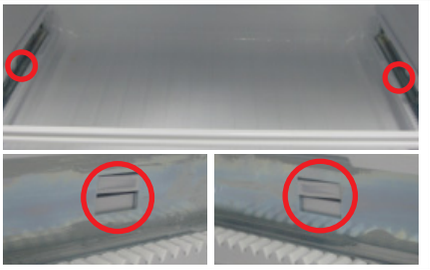
	6. After holding and pulling out the top of Freezer Door, remove it at the rail system.	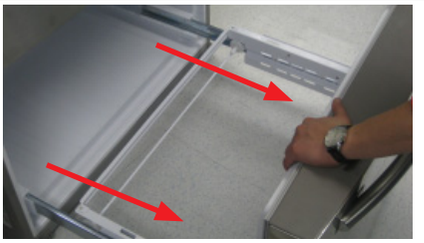
	CAUTION Make sure there is no scratch at the end of Sliding Rail by being dented from the floor .	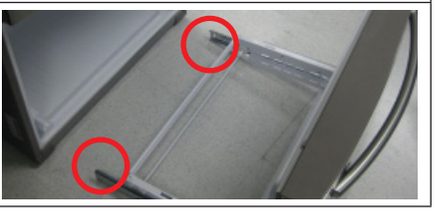

3–22) Convertible Door

Part Name	How To Do	Descriptive Picture
Mid drawer	1. Pull the and remove the convertible room (②) by pulling it to your body with both hands. open to full extension.	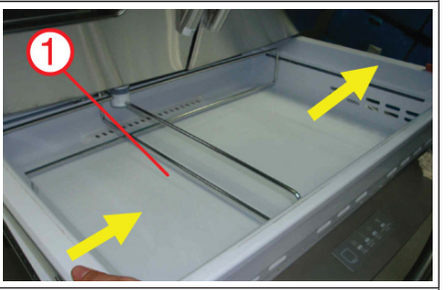
	2. Remove the cover housing (②) by a flat–blade screwdriver.	
	3. Disengage the housing.	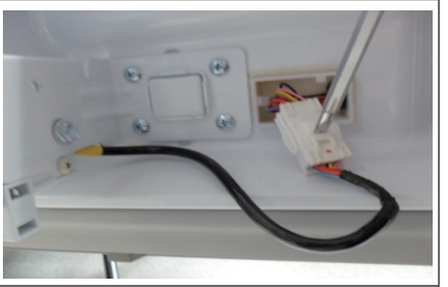
	4. Unscrew 4 bolts. (1 bolts each on the both sides)	
	5. Lifting up the convertible door. Remove the convertible door from the rail.	

3-23) Ice-Maker

Part Name	How To Do	Descriptive Picture
Ice Maker	1. When pressing the Energy-Saver and the Fridge buttons on the Display together for 8 seconds at the same time, it will convert to the Test Mode and the entire Display function will be off.	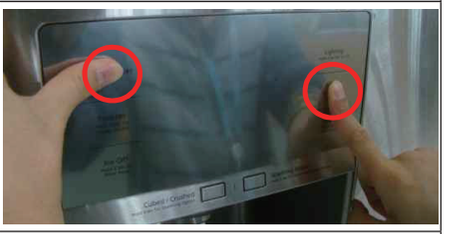
	2. When pressing any button within 15 seconds after it is shifted to the Test Mode, its function will change in the following order. Manual operation1(FF) Manual operation2(0F-r) → manual defrost of fresh food compartments(rd) → manual defrost of fresh and freezer compartments(fd) → cancel(Display all off). ● Set unit to Fd for 5 minutes. This will allow for easy removal of the ice maker.	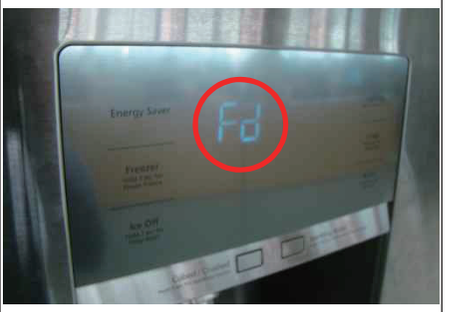
	3. While pressing the tab on the top right side, lift up the Ice Bucket and pull it out	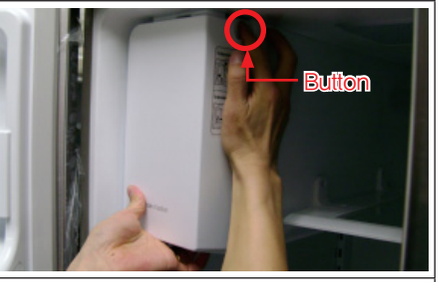
	4. Remove the screw from the Wire Housing Cover.	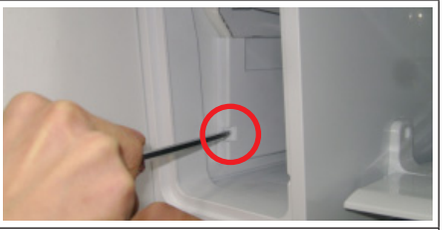
	5. Remove the Wire Housing Cover.	
	6. Disconnect the Ice Maker Housing Connector.	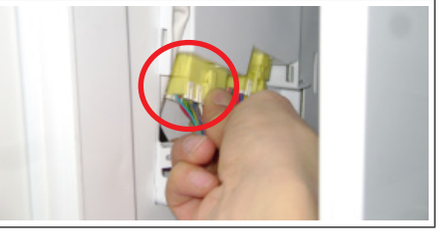

3–23) Ice–Maker

Part Name	How To Do	Descriptive Picture
Ice Maker	7. Remove the screw from the Duct Tray–ice.	
	8. With a flat blade screwdriver, push the duct to the right and remove it from the locking tab. (Refer to the image.)	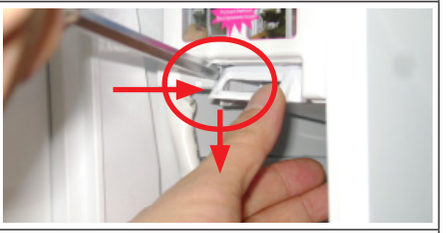
	9. With a flat blade screwdriver, pry down on the refrigerant tube to separate it from the bottom of the ice maker. (Refer to the image.)	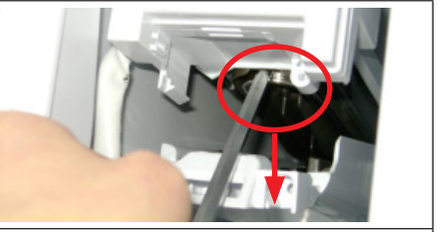
	10. Push down the refrigerant pipe slightly and separate the refrigerant pipe and the Ice Maker Assembly completely.	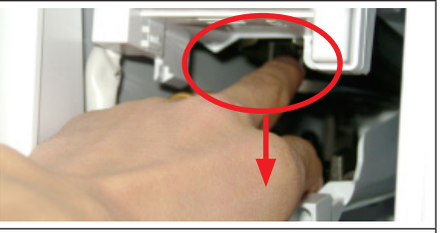
	11. While pressing the Hook, pull out the Ice Maker.	
	12. While pushing down the Duct–Tray–Ice, pull out the Ice Maker carefully and remove it. ※ When removing the ice maker, be careful not to damage the grommets on the tray or the refrigerant tube. (Refer to the dotted parts on the right side photo.)	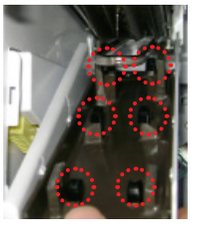

3–24) Auger Motor Fan

Part Name	How To Do	Descriptive Picture
Auger Motor Fan	1. Disconnect the FAN–AUGER–ASSY Connector.	
	2. Hold the Hook on the bottom of the FAN–AUGER–ASSY and lift it up to make it free from the Locking Tab.	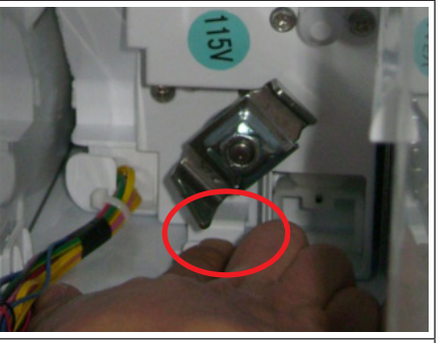
	3. While lifting it up, take the FAN–AUGER–ASSY out of the Ice Maker Compartment.	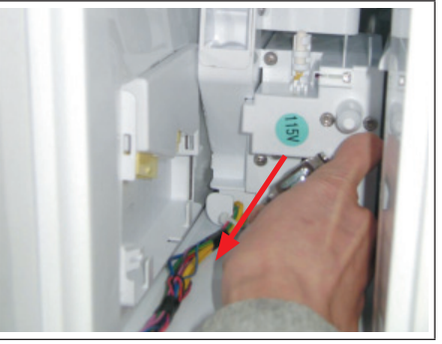

3-25) Flex Zone Light

Part Name	How To Do	Descriptive Picture
Flex Zone Light	1. Remove the cover Flex zone lamp (①) by a flat-blade screwdriver.	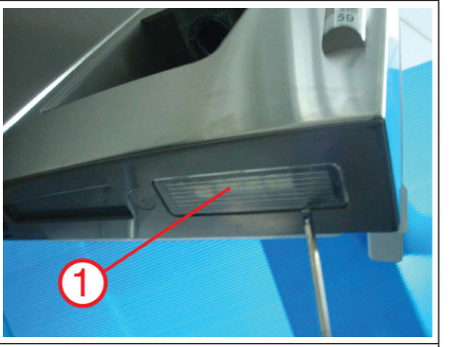
	2. Disengage the housing.	

3-26) Freezer Light

Part Name	How To Do	Descriptive Picture
Freezer Light	1. Remove the cover Freezer lamp like the way disassembling the Flex zone lamp.	
	2. Disengage the housing.	

3-27) Side Light

Part Name	How To Do	Descriptive Picture
Refrigerator Light	1. Remove the cover Side lamp (③) by a flat-blade screwdriver.	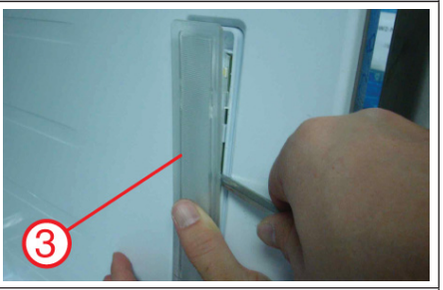
	2. Separate the Side lamp from the case.	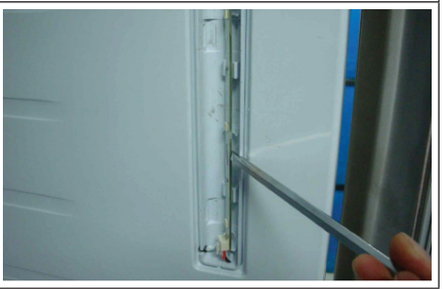
	3. Disengage the housing.	

3-28) Door Switch In Freezer

Part Name	How To Do	Descriptive Picture
Door Switch In Freezer	1. Remove the freezer drawer bin by using a flat-blade(-) screwdriver. (Refer to the picture)	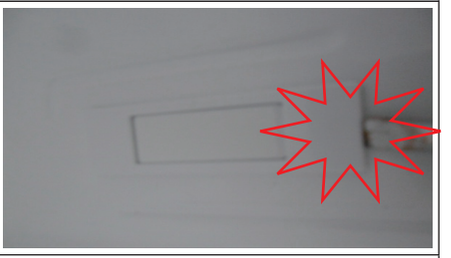
	2. Disconnect the housing connector part.	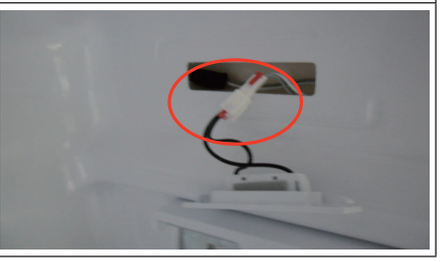

3-29) Evaporator Cover In Freezer

Part Name	How To Do	Descriptive Picture
Evaporator Cover In Freezer	1. Remove the freezer door and freezer drawer by pulling out the drawer and then unscrewing 2 screws.	
	2. Lift up the evaporator cover.	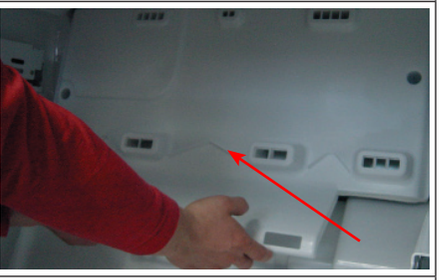
	3. Disengage the 3 housing connectors and remove the evaporator cover.	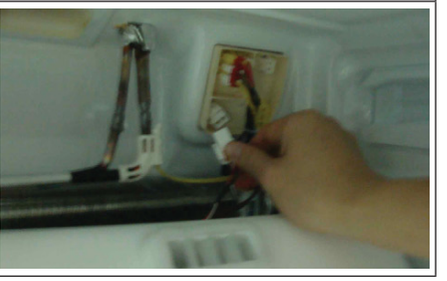

3-30) Evaporator In Freezer

Part Name	How To Do	Descriptive Picture
Evaporator In Freezer	1. Remove the housing connector part left one.	
	2. Remove the evaporator by pulling the lower part of the evaporator while lifting it up.	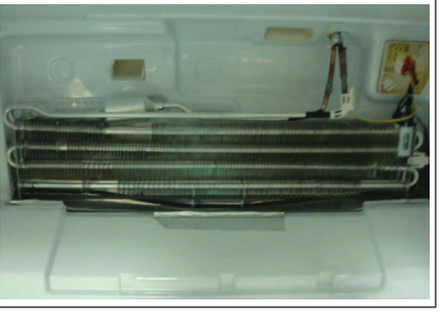

3-31) Comp Cooling Fan

Part Name	How To Do	Descriptive Picture
Comp Cooling Fan	1. Unscrew 5 screws of COVER COMP.	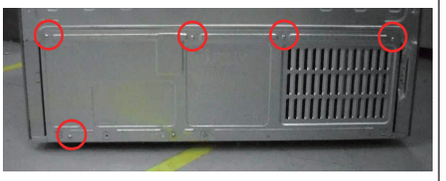
	2. Remove the DRAIN HOSE.	
	3. Remove 1 screw.	
	4. Disengage the HOUSING CONNECTOR. (Refer to the picture)	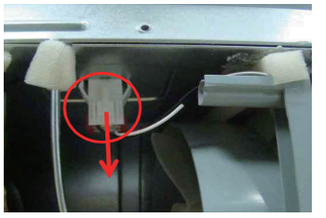
	5. Pull it forward and lean against the DRAIN HOSE.	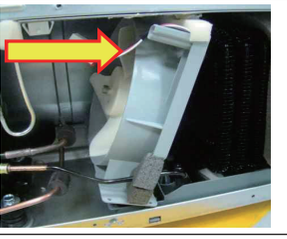
	6. Rotate it based on the PIPE.	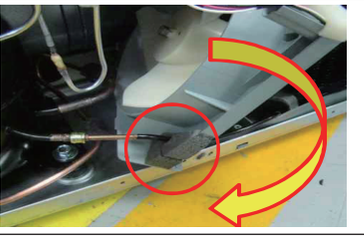
	7. The FAN is disassembled. / Assembly it in reverse order.	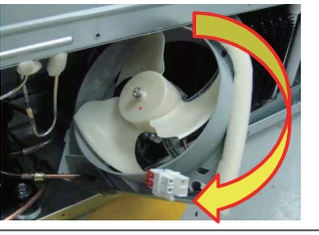

3-32) Comp Cooling Fan Motor

Part Name	How To Do	Descriptive Picture
Comp Cooling Fan Motor	1. Remove the screw with a flat blade screwdriver.	
	2. Remove the motor fan by pulling the fan out while graping the motor part.	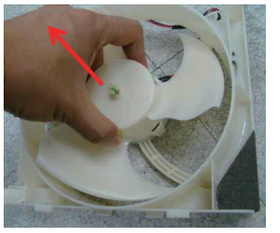
	3. Unscrew 2 screws fixed in the motor.	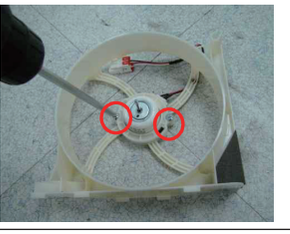
	4. Remove the BRACKET MOTOR with a flat blade screwdriver.	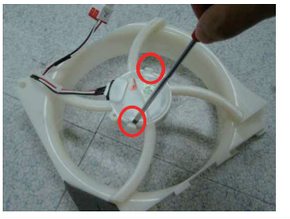
	5. Remove the MOTOR after pulling the BRACKET MOTOR out.	

3-33) Relay O/L

Part Name	How To Do	Descriptive Picture
Relay O/L	1. Remove Cover Relay.	
	2. Remove the relay O/L with a flat-blade screwdriver. (Refer to the picture)	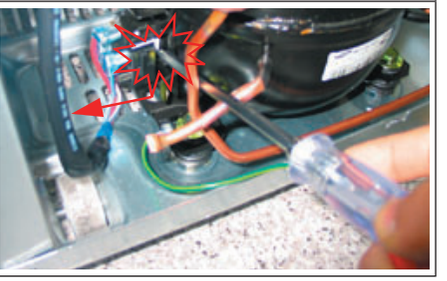

3-34) COMPRESSOR

Part Name	How To Do	Descriptive Picture
COMPRESSOR	1. Cut off the LOKRING connecting the COMP and the CONDENSER with a Pipe Cutter. (Red-line marking points)	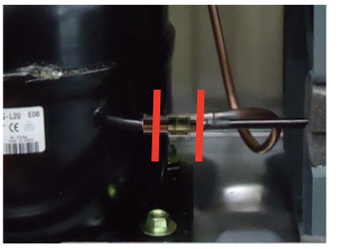
	2. Cut off the LOKRING connecting the CONDENSER and the HOT PIPE with a Pipe Cutter. (Red-line marking points)	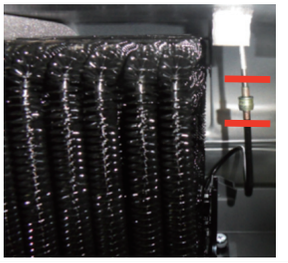
	3. Link the COMP and the CONDENSER with a PIPE-CONNECTOR by brazing the joint areas.	
	4. Link the CONDENSER and the HOT PIPE with a PIPE-CONNECTOR by brazing the joint areas.	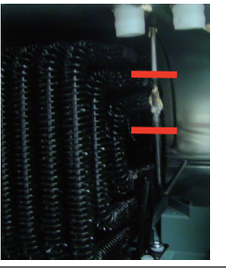

3-35) Electric Box

Part Name	How To Do	Descriptive Picture
PBA Main	1. Remove the 3 screw attached to the upper left and right Case PCB Panel with a phillips screwdriver(+).	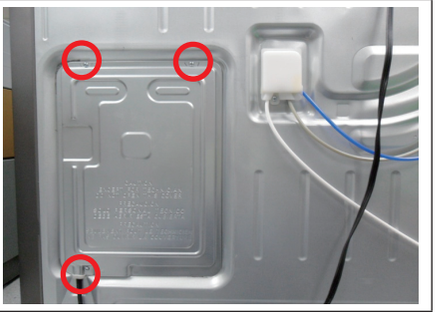
	2. Disengage all housing connectors from the main PCB. CAUTION Before doing the above, make sure that the unit is unplugged.	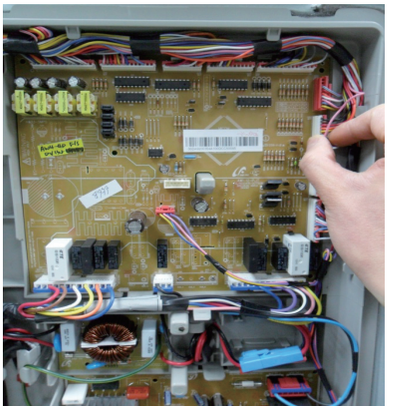
	3. Press the lower locking hook down and remove the Main PBA by pulling it out. (Refer to the picture)	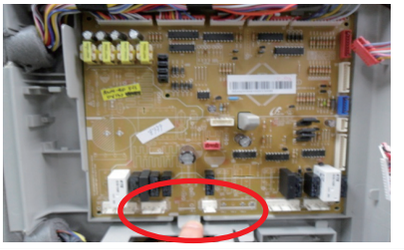
PBA INVERTER	1. Remove the INVERTER PBA by lifting the upper part of the hook up.	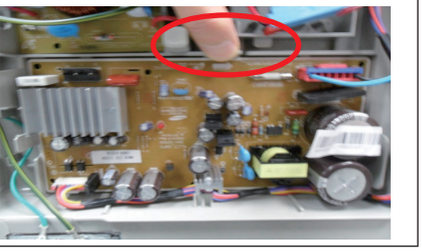

3-36) ASSY TOP TABLE

Part Name	How To Do	Descriptive Picture
ASSY TOP TABLE	1. Remove the 3 screw holding down the Top Table and remove the Top Table (①).	
	2. Remove the ground screw (②) attached to the top of the cabinet using a screwdriver.	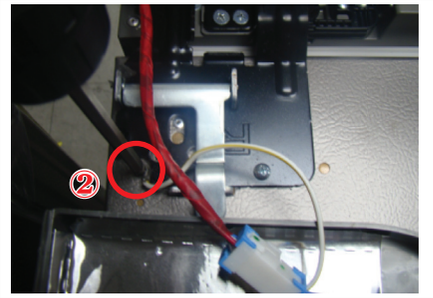
	3. Remove the left and right housings connected to the cabinet wire by pushing and pulling them backwards.	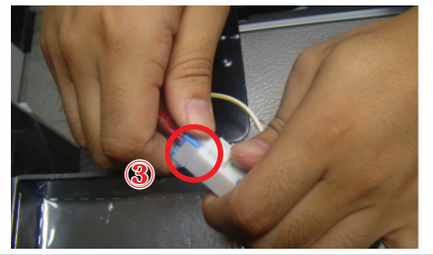
	4. Remove the two screws (④) for fixing voltage-dropped PBA using a screw driver.	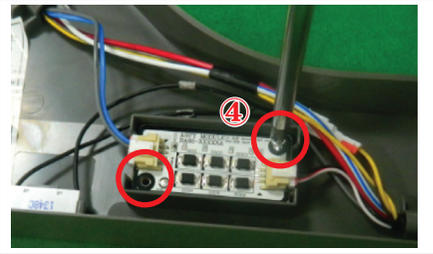
	5. Remove the two housings (⑤) attached to the left and right side of the voltage-dropped PBA by pushing and pulling them backwards.	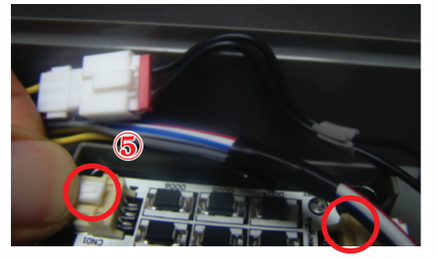

4. TROUBLESHOOTING

4–1) Function for failure diagnosis 56
4–1–1. Test mode (manual operation / manual defrost function) 56
4–1–2. Display function of Communication error 57
4–1–3. Self–diagnostic function 58
4–1–4. Display function of Load condition 61
4–1–5. Cooling OFF mode setting function North American(US, Canada) Models Only 63
4–1–6. Exhibition mode setting function (All Regions Except for North America) 63
4–1–7. Option setting function 64
4–1–8. Option TABLE 66
4–2) Diagnostic method according to the trouble symptom(Flow Chart) 70
4–2–1. If the trouble is detected by self–diagnosis 72
4–2–2. If FAN does not operate 82
4–2–3. If ICE Room Fan does not operate 83
4–2–4. When ICE MAKER(FF) does not operate 84
4–2–5. If defrost does not operate (F,R DEF Heater) 85
4–2–7. When Compressor does not run (Inverter COMP.) 86
4–2–8. When alarm sounds continuously without stop(related with buzzer sound) 87
4–2–9. When the Panel PBA does not operate normally 89
4–2–10. If Mid drawer Panel PCB is not working normally 90
4–2–11. When refrigerator ROOM Lamp does not light up 91
4–2–12. If ICE Water is not supplied 92
4–2–13. If Cubed or Crushed Ice is not supplied 93
4–2–14. If Cover Ice Route Motor(Geard Motor) is not working normally 94
4–2–15. IR Sensor Trouble–Shooting 95
4–2–16. LED blinking frequency depending on protecting functions 96

TROUBLESHOOTING

4–1) Function for failure diagnosis

4–1–1. Test mode (manual operation / manual defrost function)

- If Energy Saver Key + Fridge/Hold 3 sec for Power Cool Key on the front of panel are pressed simultaneously for 8 seconds , it will be changed to the test mode and all displays on the front of panel will be off.
- If any key on the front of panel is pressed within 15 seconds after the test mode, it will be operated as below sequence : Manual operation1(FF) Manual operation2(OF r) -> manual defrost of fresh food compartments(rd) -> manual defrost of fresh and freezer compartments(Fd) -> cancel(Display all off)
- If any key on the front of panel is not pressed within 15 seconds after the test mode, the test mode will be canceled and it will be returned to previous mode.

1) Manual operation function

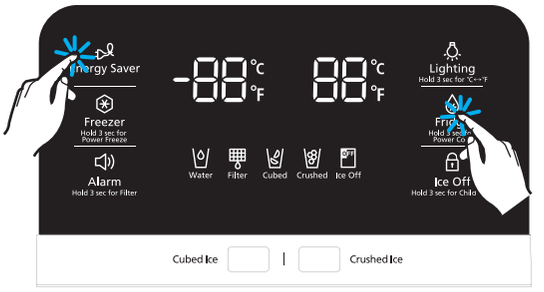

Energy Saver Key + Fridge/Hold 3 sec for Power Cool Key are pressed simultaneously for 8 seconds, (displays are all off) It will be changed to the test mode (manual operation) by pressing any key.

1-1) If any key is pressed once in test mode, blinks "FF" on the display and it indicates the refrigerator has entered the manual operation. At this moment, buzzer beeps as an alarm.
1-2) If any key is pressed once at the manual operation1 status, OF-r will be displayed. FF and OF-r means manual operation 1 and 2 separately. These 2 functions operate with same RPM of COMP.
1-3) If manual operation is selected, compressor will run at once without 7 minutes delay in any mode. If the refrigerator is on the defrost cycle at the moment, defrost will be finished and manual operation will begin. (Be careful if manual operation get started at the moment of compressor off, over load could be occurred)

Compulsion working 1 : 3600RPM

Compulsion working 2 : 3600RPM

1-4) If manual operation works, compressor & f-fan operate continuously for 24 hours and fresh food compartment will be controlled by the setting temperature.
1-5) When the manual operation runs, setting temperature will be selected automatically as below: freezer compartment -8°F(-23°C), fresh food compartment 34°F(1°C).
1-6) During manual operation, Freezer Key & Power Cool function will not be work.
If a function is selected, the power function icon of the selected function will be off automatically after 10 seconds.
1-7) Manual operation can be canceled by removing power from the unit, then resupplying power.
1-8) Alarm(0.25 sec ON/ 0.75 sec OFF) will beep continuously until manual operation is completed and there is no function to make the sound stop.

2) Forced Defrost

2-1) When you press any key one more time at Fridge off Forced Operation [OF r], rd lights up on the Display Panel. At this time, the Forcd Operation stops immediately and R-Defrost will be performed at the same time.

2-2) When you press any key one more time at Forced R-Defrost [rd], Fd lights up on the Display Panel. At this time, FR-Defrost will be performed at the same time.

2-3) At this time, it will send out “Beep” sound for 2 seconds and then it will perform Forced F/R Defrost while sending out “0.5 sec On and 0.5 sec Off” sound.

3) Test cancel mode

3-1) During the simultaneous defrosting of fresh food and freezer compartments, if the display panel change to the test mode and test button is pressed one more time, defrosting of fresh food and freezer compartments will be canceled and the unit will return to the normal operation.
Or, all test functions will be canceled by turning main power ON and OFF.

4–1–2. Display function of Communication error

1) Display function when Panel ↔ MAIN MICOM communication has error

1-1) If there is no answer for 10 seconds after the panel micom received the requirement of communication, "Pc - Er" display on the panel PCB will be ON/OFF alternately until the communication error is canceled. (0.5 sec ALL ON, 0.5 sec ALL OFF alternately)

1-2) “Pc - Er” display on the Flex Zone Temp. Display will be ON/OFF alternately until the communication error is canceled. (0.5 sec ALL ON, 0.5 sec ALL OFF alternately)

2) Display function when Panel ↔ MAIN MICOM OPTION has error

2-1) ”OP - Er” code is repeatedly ON/OFF until Option error settles down.

4–1–3. Self–diagnostic function

1) Self-diagnostic function in the Initial power ON

1-1) Micom operates self-diagnostic function to check the temperature sensor condition within 1 second when the refrigerator turned On initially.
1-2) If bad sensor is detected by the self-diagnostic function, the applicable display LED will blink for 0.5 sec. At this moment, there is no beep sound.(Refer to self-diagnostic CHECK LIST)
1-3) Self-diagnostic button is recognized only when the error is displayed by the bad sensor. Display does not operate normally but temperature control will be controlled by the emergency operation.
1-4) When the error is detected by self-diagnosis, the error can be canceled automatically if all troubled sensors are corrected or Self-diagnostic function key (Energy Saver Key + Lighting Key) are pressed simultaneously for 8 seconds.
(Return to normal display mode)

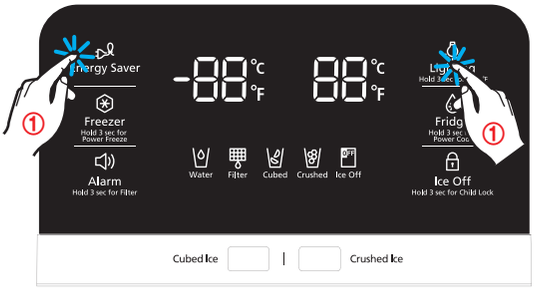

① If Energy Saver Key + Lighting Key are pressed simultaneously for 8 seconds, the error mode by self-diagnosis will be canceled.

2) Self-diagnostic function during normal operation

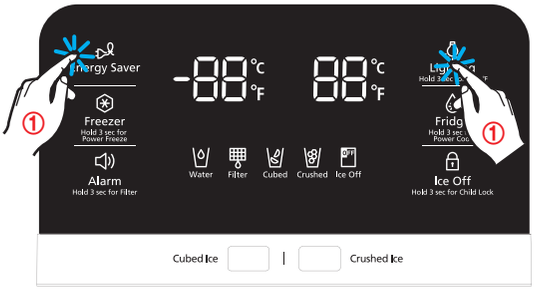

② If Energy Saver Key + Lighting Key are pressed simultaneously for 8 seconds, the error mode by self-diagnosis will be canceled.

2-1) If Energy Saver Key + Lighting Key are pressed simultaneously for 6 seconds during normal operation, the temperature setting display will operate for 2 seconds (ON/OFF 0.5sec each).
If Energy Saver Key + Lighting Key are pressed simultaneously for 8 seconds (including above 2 seconds), self-diagnostic function will be selected.
2-2) At this moment, self-diagnostic function will be returned with buzzer sound 'ding-dong'.
If there is an error, display of error will be operated for 30 seconds and then return to normal condition whether problem is corrected or not.
(Refer to self-diagnosis CHECK LIST)
2-3) Input by button is not accepted during self-diagnostic function.

TROUBLESHOOTING

※ R Self-diagnostics check list

LED		Item	Trouble contents	Diagnostic method
F	R			
		FZ–Sensor Error	Display error : separation of sensor housing part, contact error, disconnection, short circuit. Display error of detecting temperature of sensor : more than 149°F(+65°C) or less than –58°F(–50°C)	The voltage of MAIN PCB CN30– “4” N76–”1”: shall be between 4.5V∼1.0V
		FF–Sensor Error		The voltage of MAIN PCB CN30– “6” N76–”1”: shall be between 4.5V∼1.0V
		FZ–DEF–Sensor Error		The voltage of MAIN PCB CN30– “5” N76–”1”: shall be between 4.5V∼1.0V
		FF–DEF–Sensor Error		The voltage of MAIN PCB CN30– “8” N76–”1”: shall be between 4.5V∼1.0V
		Ambient–Sensor Error		The voltage of MAIN PCB CN78– “8” CN78–”12”: shall be between 4.5V∼1.0V
		Flex room–Sensor Error		The voltage of MAIN PCB CN78– “9” CN76–”1”: shall be between 4.5V∼1.0V
		Humidity–Sensor Error	Separation of sensor housing part, contact error, disconnection, short circuit	The voltage of MAIN PCB CN30– “1” CN30–”3”: shall be between 4.5V∼1.0V
		Ice Maker(FF) Sensor Error	Display error : separation of sensor housing part, contact error, disconnection, short circuit. Display error of detecting temperature of sensor : more than 149°F(+65°C) or less than –58°F(–50°C)	The voltage of MAIN PCB CN90– “1”↔ CN90–”7”: shall be between 4.5V∼1.0V
		Ice Room Sensor Error		The voltage of MAIN PCB CN78– “10” CN76–”1”: shall be between 4.5V∼1.0V
		Sparkling–Sensor Error	Display error : separation of sensor housing part, contact error, disconnection, short circuit. Display error of detecting temperature of sensor : more than 149°F(+65°C) or less than –58°F(–50°C)	The voltage of ASSY KIT PCB CN32– “1” CN32–”3”: shall be between 4.5V∼1.0V
		FZ–FAN Error	Display error during operation of applicable fan motor : Feed back signal line contact error, motor wire separation, motor error	The voltage of MAIN PCB CN76– “3”(Yellow) ↔ CN76–”1”(Gray): shall be between 7V∼12V
		FF–FAN Error	Display error during operation of applicable fan motor : Feed back signal line contact error, motor wire separation, motor error	The voltage of MAIN PCB CN76– “4”(Orange) ↔ CN76–”1”(Gray): shall be between 7V∼12V
		C–FAN Error	Display error during operation of applicable fan motor : Feed back signal line contact error, motor wire separation, motor error	The voltage of MAIN PCB CN76– “5”(Sky–blue) ↔ CN76–”1”(Gray): shall be between 7V∼12V
		FZ–DEF Error	Separation of freezer compartment defrost heater housing part, contact error, disconnection, short circuit or temperature fuse error. Display error : the defrosting does not finish though freezer compartment defrost is heating continuously for more than 70 minutes.	After separating MAIN PCB CN70 wire from PCB, resistance value between CN70 Brown ↔ CN70 Gray shall be 63(230) ohm ± 7%. (Resistance value is varied by input power) 0 ohm : heater short, ∞ ohm : wire/bimetal open (Must power off)
		FF–DEF Error	Separation of fresh food compartment defrost heater housing part, contact error, disconnection, short circuit or temperature fuse error. Display error : the defrosting does not finish though fresh food compartment defrost is heating continuously for more than 80 minutes.	After separating MAIN PCB CN70 wire from PCB, resistance value between CN70 White ↔ CN70 Gray shall be 120(440) ohm±7%. (Resistanc e value is varied by input power) 0 ohm : heater short, ∞ ohm : wire/bimetal open (Must power off)

TROUBLESHOOTING

※ R Self-diagnostics check list

LED		Item	Trouble contents	Diagnostic method
F	R			
29		Flex Zone–Damper–Heater Error	Display error when open error is detected by damper heater : separation of Damper Heater housing part, contact error, disconnection, short circuit.	After separating MAIN PCB CN77 wire from PCB, resistance value between Black ↔ Brown wire shall be 135 ohm± 7%. 0 ohm : heater short, ∞ Ohm : wire / bimetal Open.
39		Ice Maker(FF) Function Error	Display error when open error is detected by Heater : separation of Ice Pipe Heater housing part, contact error, disconnection, short circuit.	After changing the Ice Maker(R), plug the refrigerator power code again, and check the operation.
40		Ice Room–FAN Error	Display error when the Ice Maker(FZ) kit operate moving ice over 3 times or it is not leveled.	The voltage of MAIN PCB CN76–"2"(Black) ↔ CN76–"1" (Gray): shall be between 7V∼12V
41		Display ↔ Main Micom Communication Error	Main mycom ↔ Display "41–E" message and make a buzzing sound when the communication between displays does not work.	Actually, If there is not a problem, it is desirable to replace Main and Panel PCB With the oscilloscope after a cable problem confirming.
69		FF Ice Pipe Heater Error	Display error when open error is detected by ice duct heater : separation of FF Ice Pipe Heater housing part, contact error, disconnection, short circuit.	After separating MAIN PCB CN79 / CN51 wire from PCB, resistance value between CN51 Brown ↔ CN79 Orange shall be 135 ohm ± 7%. (Resistance value is varied by input power) 0 ohm : heater short, ∞ ohm : (Must power off)
65	4E	Ice Room Bucket Heater Error	Display error when open error is detected by ice room bucket heater : separation of Ice Room Bucket Heater housing part, contact error, disconnection, short circuit.	After separating MAIN PCB CN79 wire from PCB, resistance value between Brown ↔ Orange wire shall be 135 ohm± 7%. 0 ohm : heater short, ∞ Ohm : wire.
81		Comp starting Failure Error	When the Compressor fails starting	Check if there is a short between compressor terminals. Check IPM Voltage [Under 13.5V] Check if there is a short between IPM Pins [#1∼33] Check the Compressor and the Cycle
82		IPM Fault Error	When there is a IPM Fault error	
83		Comp Abnormal current Detection Error	When there is abnormal current detected at the Compressor	Check the Compressor connections Check the voltage of Resistance of R308 [0.09Ohm] Check the Compressor and the Cycle
84		Motor Locked Over RPM Error	When there is a Compressor restriction error	Check the voltage of Resistance of R308 [Short/Open] Check the voltage of both of C103 terminals [Unstable Voltage] Check the Compressor and the Cycle
85		Comp under voltage Error	When there is a low voltage error	Check the voltage of Resistance of R513 [Short/Open]
86		Comp over voltage Error	When there is a over voltage error	Check the voltage of Resistance of R501, R505, R509 [Short/Open]

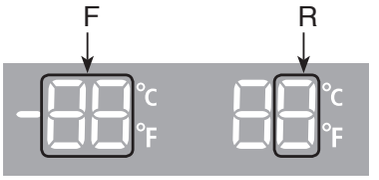

4–1–4. Display function of Load condition

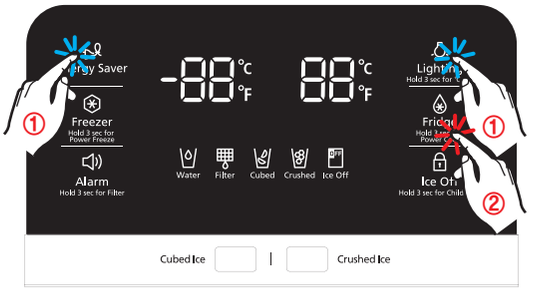

① If Energy Saver Key + Lighting key are pressed simultaneously for 6 seconds, ALL ON/OFF will blink with 0.5interval for 2 seconds.
② If take the finger off from above keys and press Fridge, load condition mode will be started.

1) If Energy Saver Key + Lighting key are pressed simultaneously for 6 seconds during normal operation, the temperature setting display of fresh food and freezer compartments will blink ALL ON/OFF with 0.5 for 2 seconds.
2) At this moment, If Fridge Key after Energy Saver Key + Lighting Key is pressed, load condition display mode will be returned with alarm. At LED all on state, only load condition display will blink ON/OFF with 0.5 seconds interval.
3) Load condition display mode shows the load that micom signal is outputting.
However, It means that micom signal is outputting, it does not mean whether load is operating or not. That is to say that though load operation is displayed, load could not be operated by actual load error or PCB relay error etc. (This function would be applied at A/S.)
4) Load condition display function will maintain for 30 seconds and then normal condition will be returned automatically.
5) Load condition display is as below. Only the load control LED will blink with 0.5interval in "Display LED"

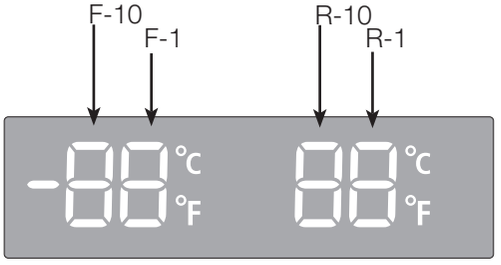

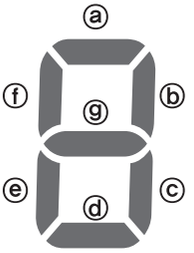

TROUBLESHOOTING

※ Load mode Check list

Display LED	Display contents	Operation contents	Etc
R–1–ⓐ	R–FAN High	When FF compartment FAN operates with high speed, applicable LED Blink	
R–1–ⓑ	R–FAN Low	When FF compartment FAN operates with low speed, applicable LED Blink	
R–1–ⓒ	R–DEF Heater	When FF compartment defrost heater operates, LED Blink	
R–1–ⓓ	Showcase Door Heater	When Showcase Door heater operates, applicable LED ON.	
R–1–ⓔ	Overload condition	When ambient temperature is more than 93°F(35°C), LED Blink	
R–1–ⓕ	Low temperature condition	When ambient temperature is less than 72°F(21°C), LED Blink	
R–1–ⓔ,ⓕ (ALL LED Off)	Normal Condition	When ambient temperature is between 73°F(22°C) and 91°F(34°C)	
R–1–ⓖ	Exhibition Mode	LED Blink at the display mode.	
F–1–ⓐ	COMP.	When COMP operates, applicable LED Blink	
F–1–ⓑ	F–FAN High	When FZ compartment FAN operates with high speed, applicable LED Blink	
F–1–ⓒ	F–FAN Low	When FZ compartment FAN operates with low speed, applicable LED Blink	
F–1–ⓓ	F–DEF Heater	When FZ compartment defrost heater operates, LED Blink	
F–1–ⓔ	C–FAN High	When C–FAN operates with high speed, applicable LED Blink	
F–1–ⓕ	C–FAN Low	When C–FAN operates with low speed, applicable LED Blink	
R–10–ⓐ	Damper Open	When damper open, applicable LED Blink	
R–10–ⓒ	I–DEF HEATER (Ice Maker HEATER)	When ice maker heater operates, LED Blink	
R–10–ⓓ	Full Ice	When the Ice Maker's Bucket is full, applicable LED Blink	
F–10–ⓓ	Ice Room–FAN High	When Ice Room–FAN operates with high speed, applicable LED Blink	
F–10–ⓔ	Ice Room–FAN Low	When Ice Room–FAN operates with low speed, applicable LED Blink	
F–10–ⓖ	French Heater	When French Heater operates, applicable LED Blink	

4–1–5. Cooling OFF mode setting function North American(US, Canada) Models Only

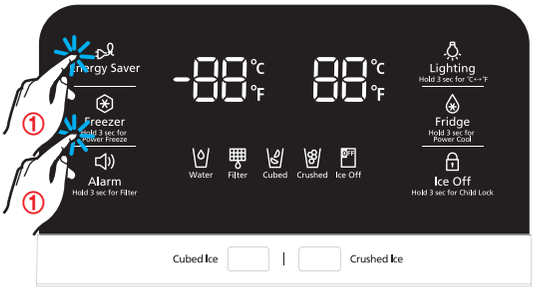

① If Energy Saver Key + Power freeze Key are pressed for 5 seconds, Cooling Off mode will be started.

1) If Energy Saver Key + Power freeze are pressed simultaneously for 5 seconds during normal operation, Cooling Off mode will be started with buzzer sound(ding-dong).
2) If above Energy Saver Key + Power freeze Key are pressed one more time, Cooling Off mode will be canceled.
3) If Cooling Off mode is selected, blinks "O-FF" on the temperature setting display of the panel and it indicates the refrigerator has entered the Cooling Off mode.
4) During Cooling Off mode, if fresh food and freezer compartments sensors are higher than 149°F (65°C) Cooling Off mode will be canceled automatically and freezing operation will be returned. (There is no buzzer sound when the Cooling Off mode is canceled by the temperature)
5) Operation contents of Cooling Off mode
   - Display, Fan motor and etc operate normally, not to operate compressor only.
   - Defrost is not operated. (including french heater)
   - Display function of the initial real temperature is finished.
   - Under the condition of Cooling Off mode, Cooling Off mode will be operated when Power On after Power OFF.

4–1–6. Exhibition mode setting function (All Regions Except for North America)

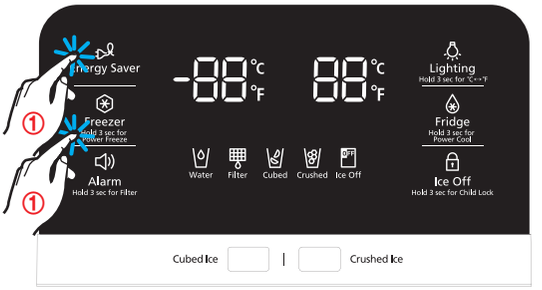

1) If Energy Saver Key + Power freeze are pressed simultaneously for 5 seconds during normal operation, Exhibiton mode will be started with buzzer sound(ding-dong).
2) If above Energy Saver Key + Power freeze Key are pressed one more time, Exhibition mode will be canceled.
3) If Exhibition mode is selected or canceled by key, displays "on" or "oF" for 5 seconds on the temperature setting display of the panel and it indicates the refrigerator has entered or exited the Exhibition mode. After 5 seconds, the display panel will work normally.
4) During Exhibition mode, if fresh food and freezer compartments sensors are higher than 149°F (65°C) Exhibition mode will be canceled automatically and freezing operation will be returned. (There is no buzzer sound when the Cooling Off mode is canceled by the Temperature)
5) Operation contents of Cooling Off mode
   - Display, Fan motor and etc operate normally, not to operate compressor only.
   - Defrost is not operated. (including french heater)
   - Display function of the initial real temperature is finished.
   - Under the condition of Exhibition mode, Exhibition mode will be canceled when Power On after Power OFF

4–1–7. Option setting function

• If Freezer Key+ lighting Key are pressed simultaneously for 12 seconds during normal operation, fresh food and freezer compartments temperature display will be changed to option setting mode.

KEY operation method for changing to option mode

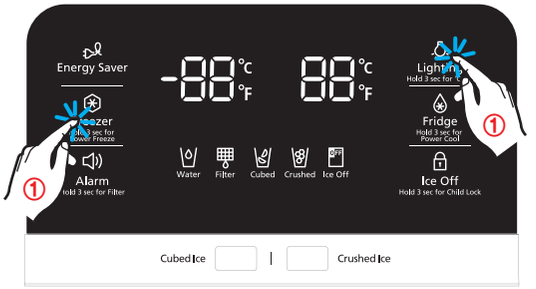

① If Freezer Key+ lighting Key are pressed simultaneously for 12 seconds, option setting mode will be started.

KEY control method after converting to option mode

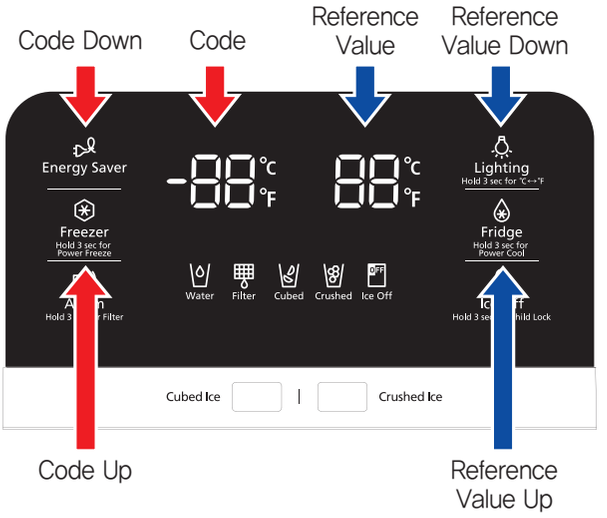

※ Key control in option mode

Energy Saver Key	Code Down key
Power Freezer Key	Code Up key
Lighting Key	Reference Value down key
Power Cool Key	Reference Value Up key

• If the display changes to option setting mode, all displays will be off except freezer and fridge compartments temperature display as below.
(Fresh food and freezer compartments case will be explained only because all options are operated with the same method according to the option table.)

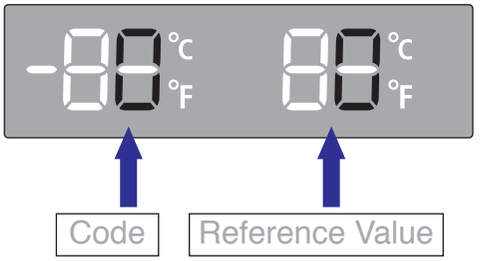

1) For example, if you want to change freezer compartment standard temperature to -4℉(-2°C) by operating option, do as below. This function is for changing the standard temperature.
In -2℉(-19°C) of current temperature of freezer compartment, if you make the temperature lower to -4℉(-2°C) by the option, the standard temperature would be controlled -6℉(-21°C)
Therefore, if you change the setting of temperature option to -2℉(-19°C) on the panel, the appliance will be operated with -6℉(-21°C). It means that standard temperature is controlled -4℉(-2°C) less than setting temperature in the display.

NOTE

Basically, all the data in option has cleared from the factory.
Therefore, almost all setting value are "0".
But, some setting values could be changed for the purpose of improving performmance.
You need to check the product manual and/or specification.

2) After changing to the option mode, fresh food compartment "0" , freezer compartment "0" will be displayed.
(Basically fresh food compartment "0", freezer "0" would be set at shipping process, but setting value could be changed for the purpose of improving product at mass producing process.)
- If fresh food compartment "0" shows only, temperature reference value of freezer compartment will be set and current freezer compartment temperature code will be displayed on the freezer temperature display.

3) If freezer compartment "4" is set as below freezer compartment code after fresh food compartment "0 is set, standard temperature of freezer compartment will be lower than -4℉(-2.0°C).
(Refer to the picture "changing the freezer compartment temperature")

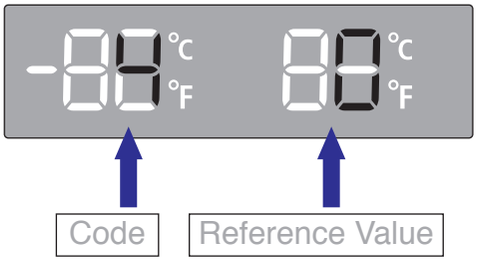

: If you wait for 20 seconds after completing the setting, MICOM will save the setting value to the EEPROM and normal display will be returned and the option setting mode will be canceled.

4) Option changing method as above is the same as all RFG29** model.
5) By the same method as above, it is possible to control the fresh food compartment temperature, water supply, ice-maker harvest temperature/time, defrost return time, hysteresis by temperature, notch gap by temperature etc.
6) Option function is set in the EEPROM at shipping process in the factory.
You would better not to change the option of your own.
Completing the setting is that option function return to normal display after 20 seconds.
Do not turn off the appliance before returning to the normal display mode.

NOTE

Option setting function exists in the other items.
We will skip the explanation of the other functions by the option because it is associated with refrigerator control function and is not needed at SERVICE.
(Please do not set the other options except above SERVICE Manual.)

4-1-8. Option TABLE

1) Temperature changing table of freezer compartment

Set item	Freezer Temp Shift
Reference	Fridge Room 7-SEG
Value	0

Setting value	
FZ compartment Code	Temp. compensation
0	0°F(0.0℃)
1	-1°F(-0.5℃)
2	-2°F(-1.0℃)
3	-3°F(-1.5℃)
4	-4°F(-2.0℃)
5	-5°F(-2.5℃)
6	-6°F(-3.0℃)
7	-7°F(-3.5℃)
8	+1°F(+0.5℃)
9	+2°F(+1.0℃)
10	+3°F(+1.5℃)
11	+4°F(+2.0℃)
12	+5°F(+2.5℃)
13	+6°F(+3.0℃)
14	+7°F(+3.5℃)
15	+8°F(+4.0℃)

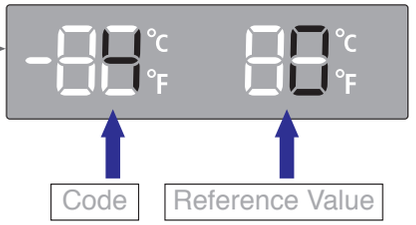

ex) If you want to adjust the freezer standard temperature -4°F(-2°C).

2) Temperature changing table of fresh food compartment

Set item	fresh food Temp Shift
Reference	Fridge Room 7-SEG
Value	1

Setting value	
FZ compartment Code	Temp. compensation
0	0°F(0.0℃)
1	-1°F(-0.5℃)
2	-2°F(-1.0℃)
3	-3°F(-1.5℃)
4	-4°F(-2.0℃)
5	-5°F(-2.5℃)
6	-6°F(-3.0℃)
7	-7°F(-3.5℃)
8	+1°F(+0.5℃)
9	+2°F(+1.0℃)
10	+3°F(+1.5℃)
11	+4°F(+2.0℃)
12	+5°F(+2.5℃)
13	+6°F(+3.0℃)
14	+7°F(+3.5℃)
15	+8°F(+4.0℃)

ex) If you want to adjust the fresh food standard temperature +4°F(+2°C).

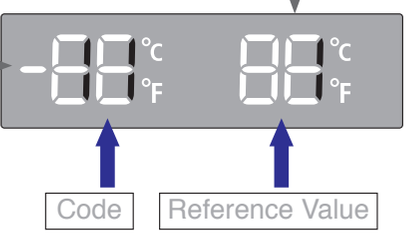

3) Operation rate changing table of dispenser heater

Set item	Dispenser Heater Rate
Reference	Fridge Room 7-SEG
Value	19

Setting value	
FZ compartment Code	Rate change
0	+0.0%
1	+ 20% operation (up to 100%)

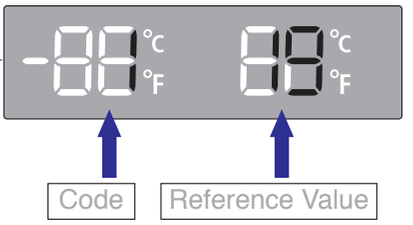

Code Reference Value

ex) If you want to adjust the dispenser heater rate +20%.

4) Temperature changing table of Pantry/Mid Drawer Room

Set item	Pantry/Mid Drawer Room Temp Shift
Reference	Fridge Room 7-SEG
Value	20

Setting value	
FZ compartment Code	Temp. compensation
0	0°F(0.0°C)
1	-1°F(-0.5°C)
2	-2°F(-1.0°C)
3	-3°F(-1.5°C)
4	-4°F(-2.0°C)
5	+1°F(+0.5°C)
6	+2°F(+1.0°C)
7	+3°F(+1.5°C)

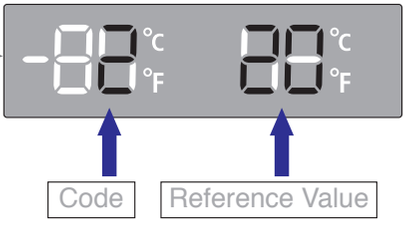

Code Reference Value

ex) If you want to adjust the mid drawer standard temperature -2°F(-1°C).

5) Amount of water supply to ice tray

Set item	Amount of Water Supply
Reference	Fridge Room 7-SEG
Value	32

Setting value	
FZ compartment Code	Amount of water supply
0	setting value
1	Setting value + 10cc
2	-
3	-
4	-
5	-
6	-
7	-

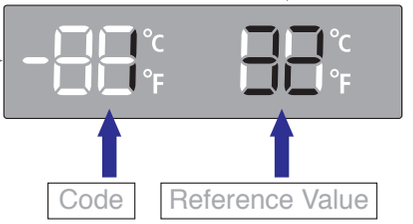

ex) If you want to change the amount of water supply to ice tray to Setting value + 10cc

6) Time changing table of ice maker dropping standby time

Set item	Ice Maker Standby Time
Reference	Fridge Room 7-SEG
Value	33

Setting value	
FZ compartment Code	Temp. compensation
0	14min.
1	13min.
2	12min.
3	11min.
4	10min.
5	15min.
6	16min.
7	17min.
8	18min.
9	19min.
10	20min.
11	21min.
12	22min.
13	23min.
14	24min.
15	25min.

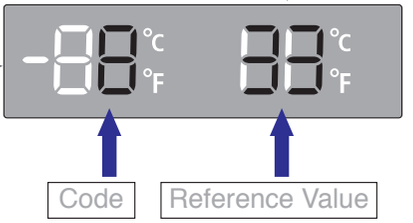

ex) If you want to change the ice maker dropping standby time to 18minutes.

7) Temperature changing table of ice room

Set item	Ice Room Temp Shift
Reference	Fridge Room 7-SEG
Value	34

Setting value	
FZ compartment Code	Temp. compensation
0	0°F(0.0°C)
1	-1°F(-0.5°C)
2	-2°F(-1.0°C)
3	-3°F(-1.5°C)
4	-4°F(-2.0°C)
5	-5°F(-2.5°C)
6	-6°F(-3.0°C)
7	-7°F(-3.5°C)
8	+1°F(+0.5°C)
9	+2°F(+1.0°C)
10	+3°F(+1.5°C)
11	+4°F(+2.0°C)
12	+5°F(+2.5°C)
13	+6°F(+3.0°C)
14	+7°F(+3.5°C)
15	+8°F(+4.0°C)

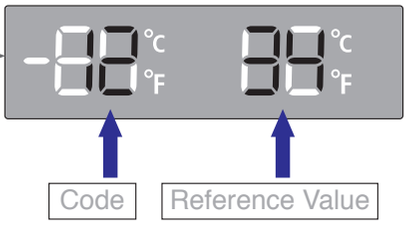

ex) If you want to adjust the ice room compartment standard temperature +5°F(+2.5°C)

8) Temperature changing table of Ice Maker Dropping Temperature

Set item	Ice Maker Dropping Temperature
Reference	Fridge Room 7-SEG
Value	35

Setting value	
FZ compartment Code	Temp. compensation
0	-13°C
1	-12°C
2	-11°C
3	-10°C
4	-14°C
5	-15°C
6	-16°C
7	-17°C

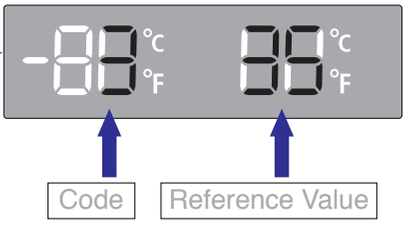

ex) If you want to change the ice maker dropping temperature to -10°C

4–2) Diagnostic method according to the trouble symptom(Flow Chart)

DATA1.Temperature table
Resistance value and MICOM port voltage of sensor according to the temperature
SENSOR CHIP : based on PX41C, PX41C, 502AT/ 103**(ICE MAKER SENSOR(MOLD)/FULL UP, 20Kohm
(Actual measurement = value of the table below X 2)

℃	℉	Voltage	Resistance	℃	℉	Voltage	Resistance	℃	℉	Voltage	Resistance
-50	-58	4.694	153319	-5	23	3.107	16419	40	104	1.153	2997
-49	-56.2	4.677	144794	-4	24.8	3.057	15731	41	105.8	1.124	2899
-48	-54.4	4.659	136798	-3	26.6	3.006	15076	42	107.6	1.095	2805
-47	-52.6	4.641	129294	-2	28.4	2.955	14452	43	109.4	1.068	2714
-46	-50.8	4.622	122248	-1	30.2	2.904	13857	44	111.2	1.040	2627
-45	-49	4.602	115631	0	32	2.853	13290	45	113	1.014	2543
-44	-47.2	4.581	109413	1	33.8	2.802	12749	46	114.8	0.988	2462
-43	-45.4	4.560	103569	2	35.6	2.751	12233	47	116.6	0.963	2384
-42	-43.6	4.537	98073	3	37.4	2.700	11741	48	118.4	0.938	2309
-41	-41.8	4.514	92903	4	39.2	2.649	11271	49	120.2	0.914	2237
-40	-40	4.490	88037	5	41	2.599	10823	50	122	0.891	2167
-39	-38.2	4.465	83456	6	42.8	2.548	10395	51	123.8	0.868	2100
-38	-36.4	4.439	79142	7	44.6	2.498	9986	52	125.6	0.846	2036
-37	-34.6	4.412	75077	8	46.4	2.449	9596	53	127.4	0.824	1973
-36	-32.8	4.385	71246	9	48.2	2.399	9223	54	129.2	0.803	1913
-35	-31	4.356	67634	10	50	2.350	8867	55	131	0.783	1855
-34	-29.2	4.326	64227	11	51.8	2.301	8526	56	132.8	0.762	1799
-33	-27.4	4.296	61012	12	53.6	2.253	8200	57	134.6	0.743	1745
-32	-25.6	4.264	57977	13	55.4	2.205	7888	58	136.4	0.724	1693
-31	-23.8	4.232	55112	14	57.2	2.158	7590	59	138.2	0.706	1642
-30	-22	4.199	52406	15	59	2.111	7305	60	140	0.688	1594
-29	-20.2	4.165	49848	16	60.8	2.064	7032	61	141.8	0.670	1547
-28	-18.4	4.129	47431	17	62.6	2.019	6771	62	143.6	0.653	1502
-27	-16.6	4.093	45146	18	64.4	1.974	6521	63	145.4	0.636	1458
-26	-14.8	4.056	42984	19	66.2	1.929	6281	64	147.2	0.620	1416
-25	-13	4.018	40938	20	68	1.885	6052	65	149	0.604	1375
-24	-11.2	3.980	39002	21	69.8	1.842	5832	66	150.8	0.589	1335
-23	-9.4	3.940	37169	22	71.6	1.799	5621	67	152.6	0.574	1297
-22	-7.6	3.899	35433	23	73.4	1.757	5419	68	154.4	0.560	1260
-21	-5.8	3.858	33788	24	75.2	1.716	5225	69	156.2	0.546	1225
-20	-4	3.816	32230	25	77	1.675	5039	70	158	0.532	1190
-19	-2.2	3.773	30752	26	78.8	1.636	4861	71	159.8	0.519	1157
-18	-0.4	3.729	29350	27	80.6	1.596	4690	72	161.6	0.506	1125
-17	1.4	3.685	28021	28	82.4	1.558	4526	73	163.4	0.493	1093
-16	3.2	3.640	26760	29	84.2	1.520	4369	74	165.2	0.481	1063
-15	5	3.594	25562	30	86	1.483	4218	75	167	0.469	1034
-14	6.8	3.548	24425	31	87.8	1.447	4072	76	168.8	0.457	1006
-13	8.6	3.501	23345	32	89.6	1.412	3933	77	170.6	0.446	978
-12	10.4	3.453	22320	33	91.4	1.377	3799	78	172.4	0.435	952
-11	12.2	3.405	21345	34	93.2	1.343	3670	79	174.2	0.424	926
-10	14	3.356	20418	35	95	1.309	3547	80	176	0.414	902
-9	15.8	3.307	19537	36	96.8	1.277	3428	81	177.8	0.404	877
-8	17.6	3.258	18698	37	98.6	1.253	3344	82	179.6	0.394	854
-7	19.4	3.208	17901	38	100.4	1.213	3204	83	181.4	0.384	832
-6	21.2	3.158	17142	39	102.2	1.183	3098	84	183.2	0.375	810

DATA2. Humidity Sensor table
- Voltage output table @23°…, 5Vdc --- HTG3515CH/HTG3535CH
RH(Temperature compensate) = RH (Relative Humidity) + (Temp(°C) °© 23°C) x 0.05

℃	℉	Voltage	Resistance	℃	℉	Voltage	Resistance	℃	℉	Voltage	Resistance
0	909	186	744	46	2246	460	1839	92	3452	706	2827
1	943	193	772	47	2272	465	1861	93	3478	712	2848
2	977	200	800	48	2298	470	1882	94	3504	717	2870
3	1010	207	827	49	2324	475	1903	95	3530	722	2891
4	1043	213	854	50	2350	481	1925	96	3566	730	2920
5	1076	220	881	51	2376	486	1946	97	3595	735	2944
6	1109	227	908	52	2402	491	1967	98	3624	741	2968
7	1141	233	935	53	2428	497	1989	99	3653	747	2992
8	1173	240	961	54	2454	502	2010	100	3683	754	3016
9	1205	247	987	55	2480	507	2031				
10	1235	253	1011	56	2505	513	2052				
11	1266	259	1037	57	2530	518	2072				
12	1297	265	1062	58	2555	523	2093				
13	1328	272	1088	59	2580	528	2113				
14	1359	278	1113	60	2605	533	2133				
15	1390	284	1138	61	2630	538	2154				
16	1420	291	1163	62	2655	543	2174				
17	1450	297	1188	63	2680	548	2195				
18	1480	303	1212	64	2705	553	2215				
19	1510	309	1237	65	2730	559	2236				
20	1540	315	1261	66	2756	564	2257				
21	1569	321	1285	67	2782	569	2278				
22	1598	327	1309	68	2808	575	2300				
23	1627	333	1333	69	2834	580	2321				
24	1656	339	1356	70	2860	585	2342				
25	1685	345	1380	71	2886	590	2364				
26	1713	350	1403	72	2912	596	2385				
27	1741	356	1426	73	2938	601	2406				
28	1769	362	1449	74	2964	606	2428				
29	1797	368	1472	75	2990	612	2449				
30	1825	373	1495	76	3017	617	2471				
31	1852	379	1517	77	3044	623	2493				
32	1879	384	1539	78	3071	628	2515				
33	1906	390	1561	79	3098	634	2537				
34	1933	395	1583	80	3125	639	2559				
35	1960	401	1605	81	3152	645	2581				
36	1986	406	1627	82	3179	650	2604				
37	2012	412	1648	83	3206	656	2626				
38	2038	417	1669	84	3233	661	2648				
39	2064	422	1690	85	3260	667	2670				
40	2090	428	1712	86	3288	673	2693				
41	2116	433	1733	87	3316	678	2716				
42	2142	438	1754	88	3344	684	2739				
43	2168	444	1776	89	3372	690	2762				
44	2194	449	1797	90	3400	696	2785				
45	2220	454	1818	91	3426	701	2806				

TROUBLESHOOTING

4–2–1. If the trouble is detected by self–diagnosis

- The error of sensor will be displayed on the front of display.
  when the error of sensor is detected at initial power ON, the appliance will not operated and display of abnormal sensor part will blink.
- The appliance will not stop operating when the error of sensor is detected during operation of the appliance.
  But normal freezing might be not operated if the appliance is operated by the emergency operation mode. You would better to check the appliance according to the self-diagnosis of the manual.

1) If ICE Maker(R) Sensor has troubled

ERROR Code



DATA1.
Temperature table

** Measuring point of resistance value according to Sensor **
ICE MAKER: CN90 "1"↔ "7" measuring resistance value ** 0Ω: Short trouble / Ω∞: Open trouble

Refer to circuit diagram in the manual

Sensor MICOM/Connector number	
ICE Maker	Connector CN90-"1"(Brown)and J23 JUMMPER PCB typical Ground

Voltage measured between 4.6V ~ 0.6V.

Measuring voltage of IC01 MICOM #71, CN90 - "1" (Brown) and J23 JUMMPER from PCB typical Ground part are similar.
→ Check the measure on the voltage of Resistance, R914 DUE to the SMD MICOM

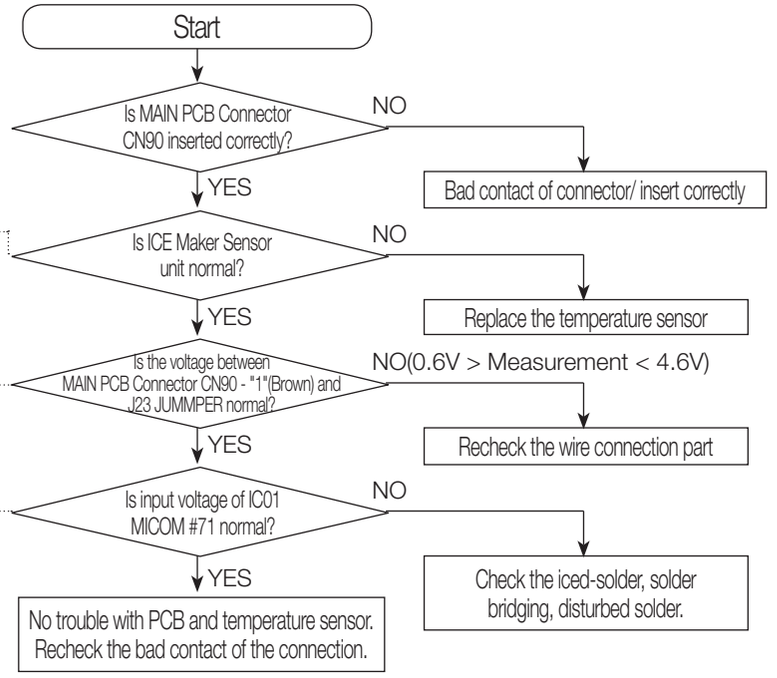

☞ Checking method of ICE Maker Sensor resistance
CN90 "1"(Brown) ↔ "7"(Gray)
- Compare the temperature table after the measure.

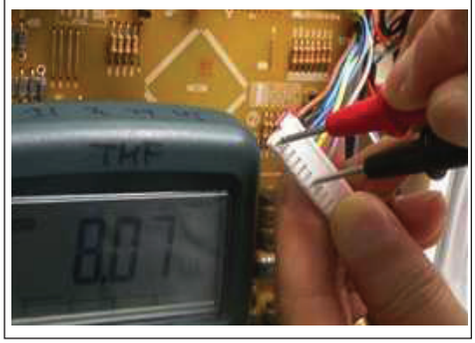

☞ Checking method of ICE Maker Sensor resistance
- Measure the voltage of Resistance R914(IC01 MICOM #71) on PCB or CN90 "1"(Brown) ↔ J23 JUMMPER
- Compare the temperature table after the measure.
Measuring voltage of CN90-"1"(Brown) ↔ J23 JUMMPER are as below.

PCB Typical Ground
J23 JUMMPER

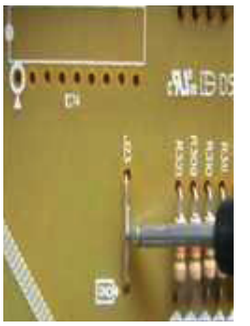

2) If R Sensor has trouble

ERROR Code

DATA1.
Temperature table

** Measuring point of resistance value according to Sensor **
R : CN30 - "6" ↔ CN76-"1" measuring resistance value
** 0Ω : Short trouble / Ω ∞ : Open trouble

Refer to circuit diagram in the manual

Sensor MICOM/Connector number	
R	Connector CN30 - "6"(White) to J23 JUMMPER PCB typical Ground
Voltage measured between 4.6V ~ 0.6V.	

Measuring voltage IC01 MICOM #84, CN30 - "6"(White) and J23 JUMMPER from PCB typical Ground part are similar.
→ Check the measure on the voltage of Resistance, R311 due to the SMD MICOM

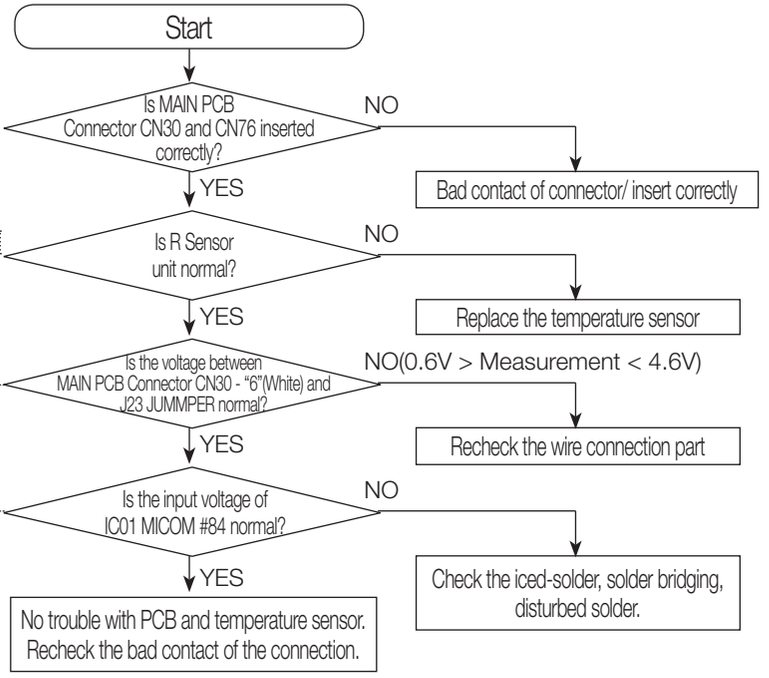

☞ Checking method of R Sensor resistance
CN30 - "6"(White) ↔ CN76-"1"(Gray) Compare the temperature table after measurment.

☞ Checking method of R Sensor resistance
- Measure the voltage of Resistance R311(IC01 MICOM #84) on PCB or CN30 - "6"(White) ↔ J23 JUMMPER
- Compare the temperature table after measurement. Measuring voltage of CN30 - "6"(White) ↔ J23 JUMMPER are as below.

PCB Typical Ground
J23 JUMMPER

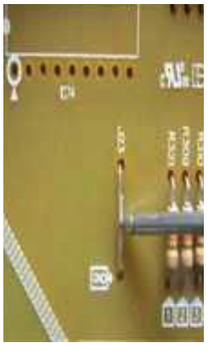

3) If R DEF Sensor has trouble

ERROR Code



DATA1.
Temperature table

** Measuring point of resistance value according to Sensor **
R-DEF : CN30-"8" ↔ CN76-"1" measuring resistance value
** 0Ω : Short trouble Ω ∞: Open trouble

Refer to circuit diagram in the manual

Sensor MICOM/Connector Number	
R DEF	Connector CN30-"8"(Sky-blue) and J23 JUMMPER PCB typical Ground

Voltage measured between 4.6V ~ 0.6V.

Measuring voltage of IC01 MICOM #86 CN30-"8"(Sky-blue) and J23 JUMMPER from PCB typical Ground part are similar.
→ Check the measure on the voltage of Resistance R313 due to the SMD MICOM

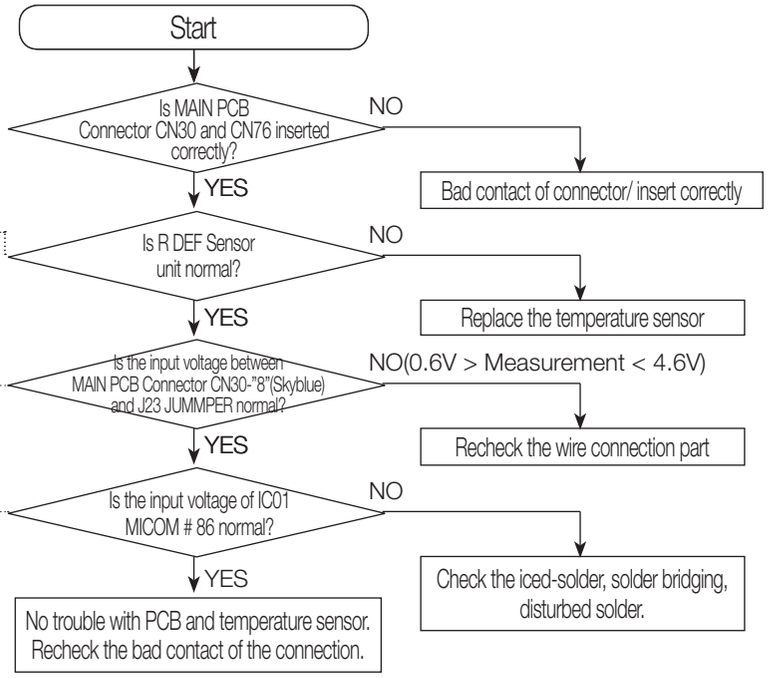

☞ Checking method of R Sensor resistance CN30-"8"(Sky-blue) ↔ CN76-"1"(Gray)
- Compare the temperature table after measurement.

☞ Checking method of R DEF Sensor resistance
- Measure the voltage of Resistance R313(IC01 MICOM #86) on PCB or CN30-"8"(Sky-blue) ↔ J23 JUMMPER
- Compare the temperature table after measurement.
Measuring voltage of CN30-"8"(Sky-blue) ↔ J23 JUMMPER are as below.

PCB Typical Ground
J23 JUMMPER

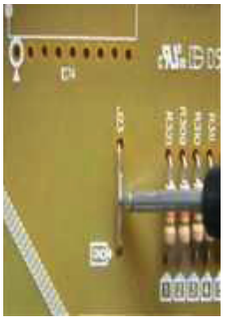

4) If Ambient Sensor has trouble

ERROR Code

DATA1.
Temperature table

** Measuring point of resistance value according to Sensor **
Ambient : CN78-"8"↔ "12" measuring resistance value
** Placed in the right top table of upper hinge.
** 0Ω : Short trouble / Ω ∞ : Open trouble

Refer to circuit diagram in the manual

Sensor MICOM/Connector number	
Ambient	Connector CN78-"8"(Yellow) to J23 JUMMPER PCB typical Ground

Voltage measured between 4.6V ~ 0.6V.

Measuring voltage of IC01 MICOM #93 CN78-"8"(Yellow) and J23 JUMMPER from PCB typical Ground part are similar.
→ Check the measure on the voltage of Resistance, R315 due to the SMD MICOM

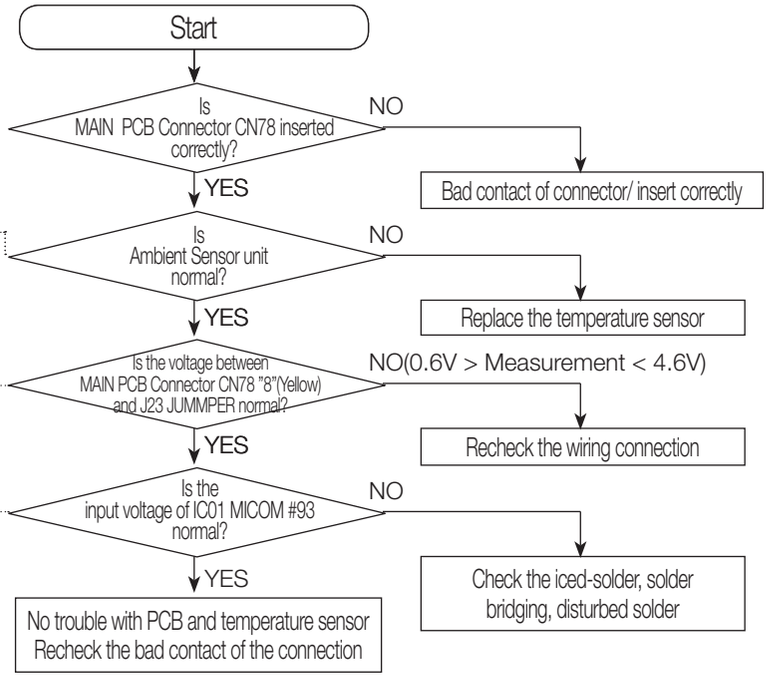

☞ Checking method of Ambient Sensor resistance
CN78-"8"(Yellow) ↔ "12"(Yellow)
- Compare the temperature table after measurement.

☞ Checking method of Ambient Sensor voltage
- Measure the voltage of Resistance R315(IC01 MICOM #93) on PCB or CN78-"8"(Yellow) ↔ J23 JUMMPER
- Compare the temperature table after measurement.
Measuring voltage of CN78-"8"(Yellow) ↔ J23 JUMMPER are as below

PCB Typical Ground
J23 JUMMPER

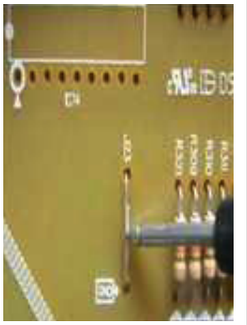

5) If F Sensor has trouble

ERROR Code



DATA1.
Temperature table

** Measuring point of resistance value according to Sensor **
F : CN30-"4" ↔ CN76-"1" measuring resistance value
** 0Ω : Short trouble / Ω∞ : Open trouble

Refer to circuit diagram in the manual

Sensor MICOM/Connector number	
F	Connector CN30-"4"(Red) to J23 JUMMPER PCB typical Ground
Voltage measured between 4.6V ~ 0.6V.	

Measuring voltage of IC01 MICOM #82, CN30-"4"(Red) and J23 JUMMPER from PCB typical Ground part are similar.
→ Check the measure on the voltage of Resistance, R309 due to the SMD MICOM

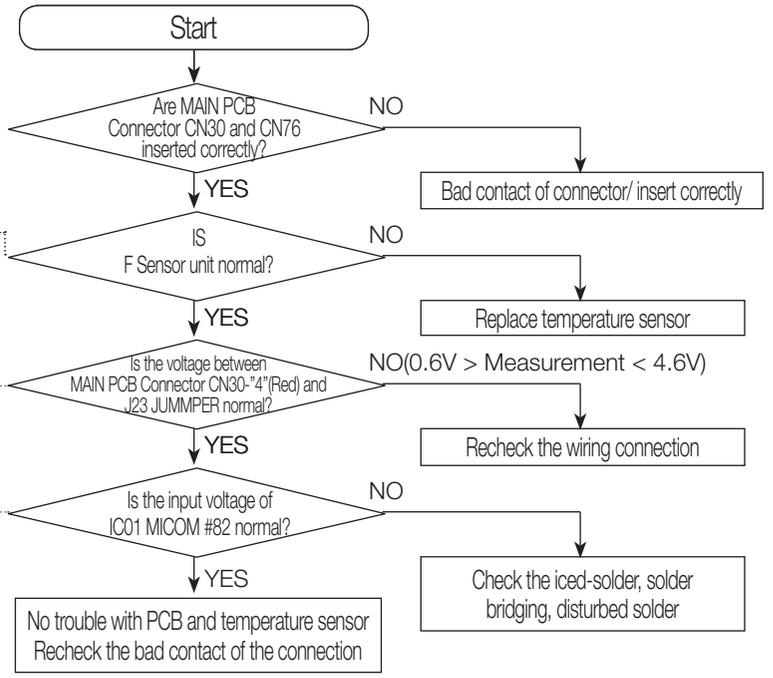

☞ Checking method of F Sensor resistance CN30-"4"(Red) ↔ CN76-"1"(Gray)
- Compare the temperature table after measurement.

☞ Checking method of F Sensor voltage
- Measure the voltage of Resistanec, R309(IC01 MICOM #82) on PCB or CN30-"4"(Red) ↔J23 JUMMPER
- Compare the temperature table after measurement.
Measuring voltage of CN30-"4"(Red)↔J23 JUMMPER are as below.

PCB Typical Ground
J23 JUMMPER

6) If F DEF Sensor has trouble

ERROR Code



DATA1.
Temperature table

** Measuring point of resistance value according to Sensor **
F-DEF : CCN30-"5" ↔ CN76-"1" measuring resistance value
** 0Ω : Short trouble / Ω ∞ : Open trouble

Refer to circuit diagram in the manual

Sensor MICOM/Connector number	
F DEF	Connector CN30-"5"(Orange) to J23 JUMMPER PCB typical Ground

Voltage measured between 4.6V ~ 0.6V.

Measuring voltage of IC01 MICOM #83, CN30-"5"(Orange) and J23 JUMMPER from PCB typical Ground part are similar.
→ Check the measure on the voltage of Resistance, R310 due to the SMD MICOM

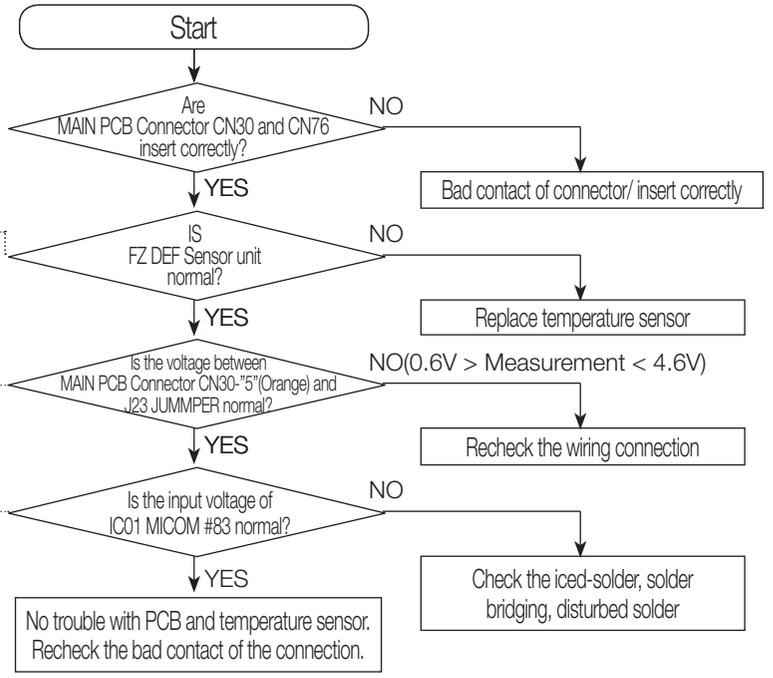

☞ Checking method of F DEF Sensor resistance
CN30-"5"(Orange) ↔ CN76-"1"(Gray)
- Compare the temperature table after measurement.

☞ Checking method of F DEF Sensor voltage
- Measure the voltage of Resistance, R310(IC01 MICOM #83) on PCB or CN30-"5"(Orange) ↔ J23 JUMMPER
- Compare the temperature table after measurement.

Measuring voltage of CN30-"5"(Orange) ↔ J23 JUMMPER are as below

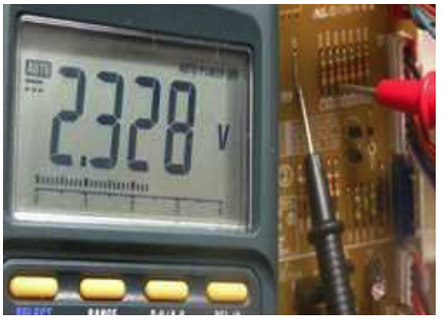

PCB Typical Ground
J23 JUMMPER

7) If Ice Room Sensor has trouble

ERROR Code



DATA1.
Temperature table

** Measuring point of resistance value according to Sensor **
Ambient : CN78 "10"↔ CN76-"1" Measure the voltage of Resistance value
** 0Ω : Short trouble / Ω ∞ : Open trouble

Refer to the circuit diagram in this manual

Sensor MICOM/Connector number	
Ice Room	Connector CN78-"10"(Orange) and J23 JUMMPER from PCB Typical Ground

Voltage measured between 4.6V ~ 0.6V.

Measuring voltage of IC01 MICOM #92, CN78-"10"(Orange) and J23 JUMMPER from PCB Typical Ground are similar.
→ Check the measure on the voltage of Resistance, R316 due to the SMD MICOM

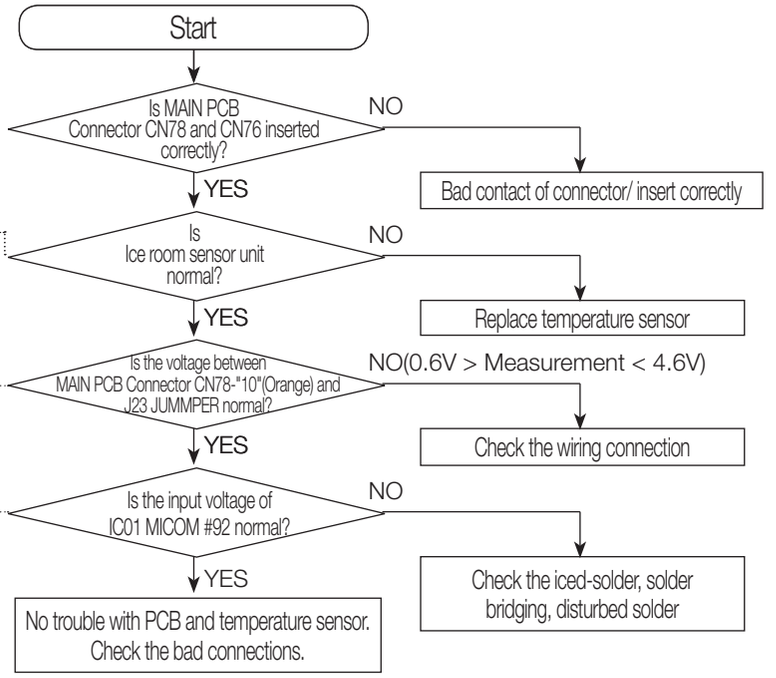

☞Checking Mehod of Ice Room Sensor voltage
CN78-"10"(Orange)↔ CN76-"1" (Gray)
- Compare with the temperature table after measurement.

☞Checking Method of Ice Room Sensor Voltage
- Measure the voltage of Resistance, R316(IC01 MICOM #92) on PCB or CN78-"10"(Orange) ↔J23 JUMMPER
- Compare with the temperature table after measurement.
Measured voltage of CN78-"10"(Orange) ↔ J23 JUMMPER are as below

PCB Typical Ground
J23 JUMMPER

8) Mid Drawer Sensor has trouble

ERROR Code

DATA1.
Temperature table

** Measuring point of resistance value according to Sensor
**
Flex : CN30 "9" ↔ CN76 "1" measuring resistance value
** 0Ω : Short trouble / Ω ∞ : Open trouble

Refer to circuit diagram in the manual

Sensor MICOM/Connector number	
Mid drawer	Connector CN30-"9"(Yellow) to J23 JUMMPER PCB typical Ground
Voltage measured between 4.6V ~ 0.6V.	

Measuring voltage of IC01 MICOM #87,
CN30-"9"(Yellow)and J23 JUMMPER
from PCB typical Ground part are similar.
→ Check the measure on the voltage of Resistance, R314
due to the SMD MICOM

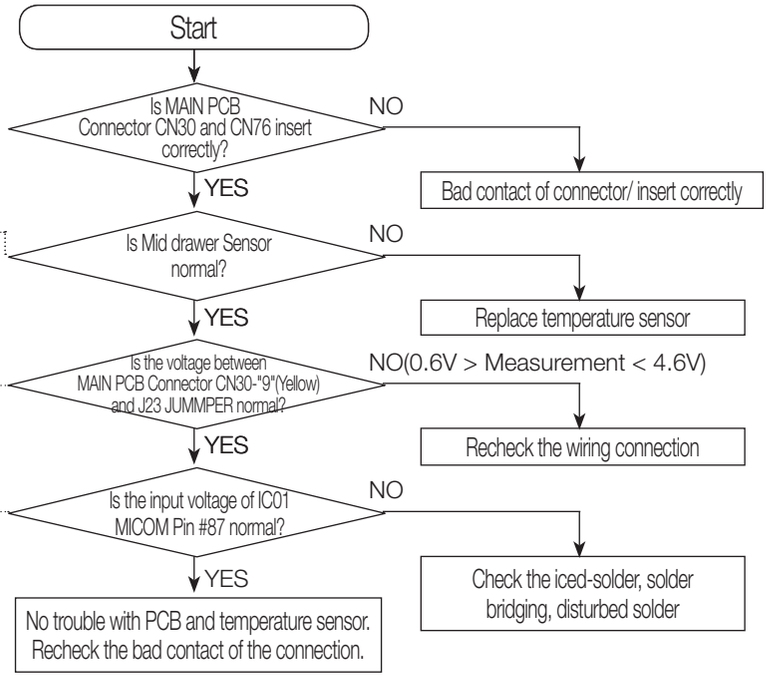

☞ Checking method of Mid drawer Sensor resistance
CN30-"9"(Yellow) ↔ CN76-"1" (Gray)
- Compare the temperature table after measurement.

☞ Checking method of Mid drawer Sensor resistance CN30-"9"(Yellow) ↔ CN76-"1" (Gray)
- Compare the temperature table after measurement.
Measuring voltage of CN30-"9"(Yellow)↔J23 JUMMPER are as below

PCB Typical Ground
J23 JUMMPER

9) If Humidity Sensor has trouble

ERROR Code



** Measuring point of resistance value according to Sensor"
Humidity : CN30 "1" ↔ "3"
Resistance value with opened : about 50Ω
** 0Ω : Short trouble / Ω ∞: Open trouble

Refer to circuit diagram in the manual

Sensor MICOM/Connector number	
Humidity	Connector CN30-"3"(brown) to J23 JUMMPER PCB typical Ground

Voltage measured between 3.5V ~ 1.0V

Measuring voltage of ICO1 MICOM #81, CN30-"3"(Brown) and J23 JUMMPER from PCB typical Ground part are similar.
→ Check the voltage of Resistance, R321

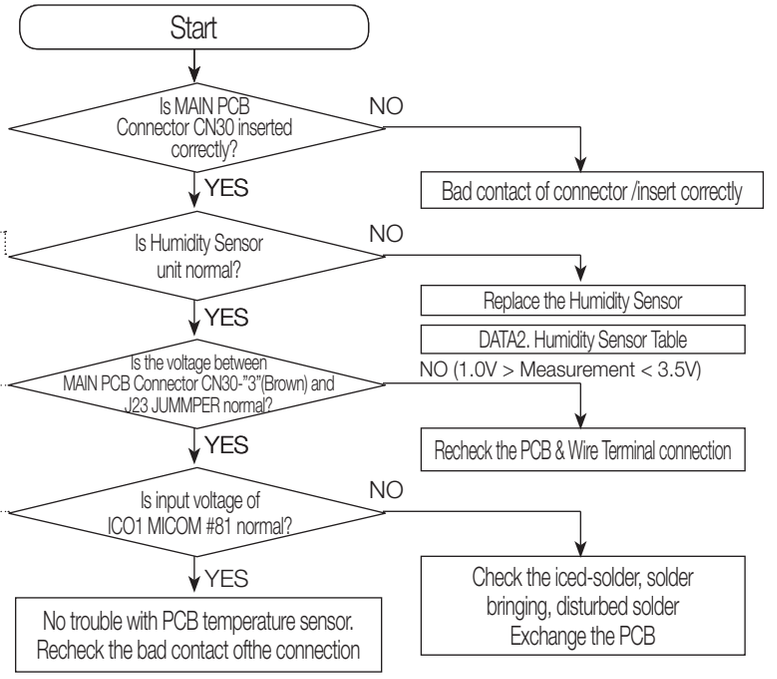

☞ Checking method ofHumidity Sensor resistance
CN30-"3"(Brown) ↔ "1"(Gray)
- Compare the temperature table after the measure.

☞ Checking method ofHumidity Sensor voltage.
- Measure the voltage of Resistance, R321(IC01 MICOM #81) on PCB or CN30-"3"(Brown) ↔ J23 JUMMPER
- Compare the temperature table after the measure.
Measuring voltage of CN30-"3"(Brown) ↔ J23 JUMMPER are below

PCB Typical Ground
J23 JUMMPER

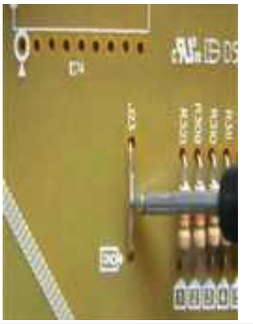

10) Mid Drawer Room Damper Heater has trouble (OPTION)

ERROR Code



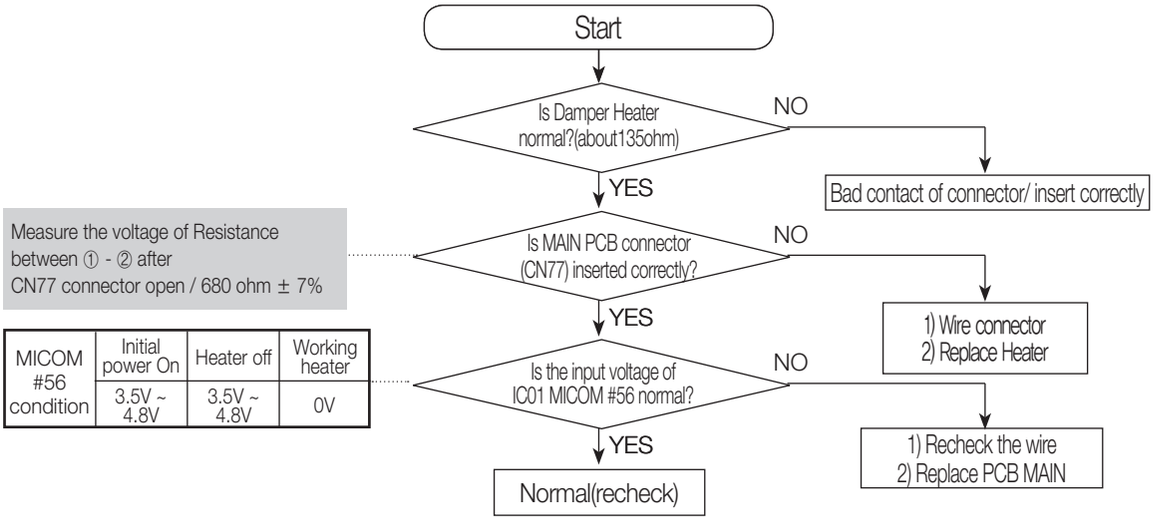

☞ Checking method of Flex Zone Room Damper resistance CN77-"1"(Black) ↔ "2"(Brown)
** Ω∞: Open (wire disconnection, heater disconnection) trouble / 0Ω: Short trouble

4–2–2. If FAN does not operate

- The refrigerator of this model has BLDC FAN motor. BLDC motor is driven by DC 7~12V.
- On the normal condition of COMP ON, it operates together with F-FAN motor.
  If door is opened and closed once at a high ambient temperature, it will be operated after 1 minute delay.
  Therefore, you are advised not to taken it for an error.
-. If there is a trouble, you should select the self-diagnostic function to check the trouble before power off.

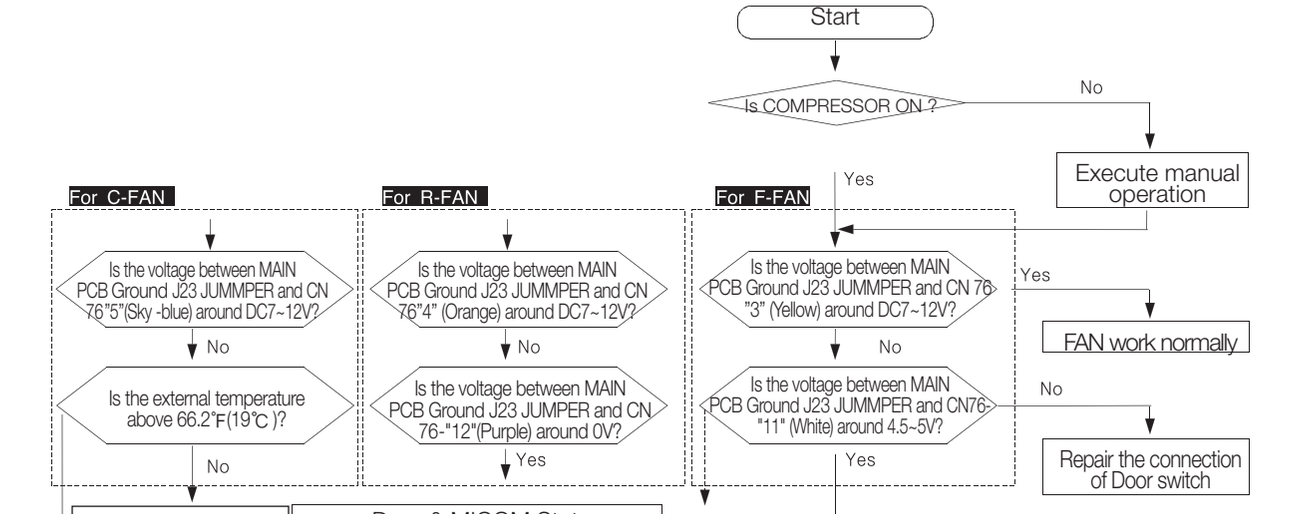

F FAN pulse voltage CN76 "7"(Brown)

PCB Typical Ground J23 JUMMPER

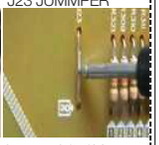

The voltage measured around 2~3V with multi-meter though the voltage is very weak because of pulse signal

Reference

CN76-7(F),8(R),9(C)will generate the pulse signal when motor rotates.
These signals will be inputted into MICOM.
Unless signals are not inputted during motor operating, will be ON 10 seconds after fan Off. But if signals are not still entered, the above operation will restart four times more.
If signals are not entered continuously, the motor will be restarted after 10 Minutes. This function is effective when the normal operation of motor would be restrained by foreign matters such as ice.

- Expected causes
  ① Check that if FAN-MOTOR has failure itself.
  ② Check that if wiring connection has bad contact.
  ③ Check the input of the fan motor rotation pulse when motor fan operates.

☞ Display for checking the self-diagnostic function

R FAN ERROR (Option)	F FAN ERROR	C FAN ERROR

The voltage between PCB typical Ground J23 JUMMPER and
F FAN ; CN76 "3"(Yellow) shall be less than DC 7~12V.
R FAN ; CN76 "4"(Orange) shall be less than DC 7~12V.
C FAN ; CN76 "5"(Sky-blue) shall be less than DC 7~12V.
- Recheck if resistance values are different after measuring.

PCB Typical Ground J23 JUMMPER

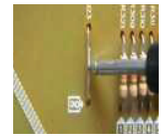

1) F-FAN

2) R-FAN

3) C-FAN

4–2–3. If ICE Room Fan does not operate

- This refrigerator has BLDC FAN motor. BLDC motor is driven by DC7~12V.
- When COMP ON, normally operates with F-FAN motor.
- If there is any trouble, you should select the self-diagnostic function to check the trouble before power off.

- When pressing the ICE TEST S/W for a certain period of time (over 1.5sec), the function is accomplished. After beginning of TEST mode, Ice maker heater turns on for initial 2 minutes, if the ice making temperature is below 0℃.
- If it exceeds 0℃, Ice maker heater turns on for initial 30 seconds.
- After Ice maker heater turns on for 30 seconds, it turns off and then Ice maker motor turns on.
- As the Ice maker motor turns on, TEST MODE COUNT operates. (6 minutes count)

Condition
- Ambient temperature : 32℃/75%
- Notch : 2℉/38℉(-19.0℃/3.3℃)
  Initial full of ice bucket capacity : 794 g, 58ea

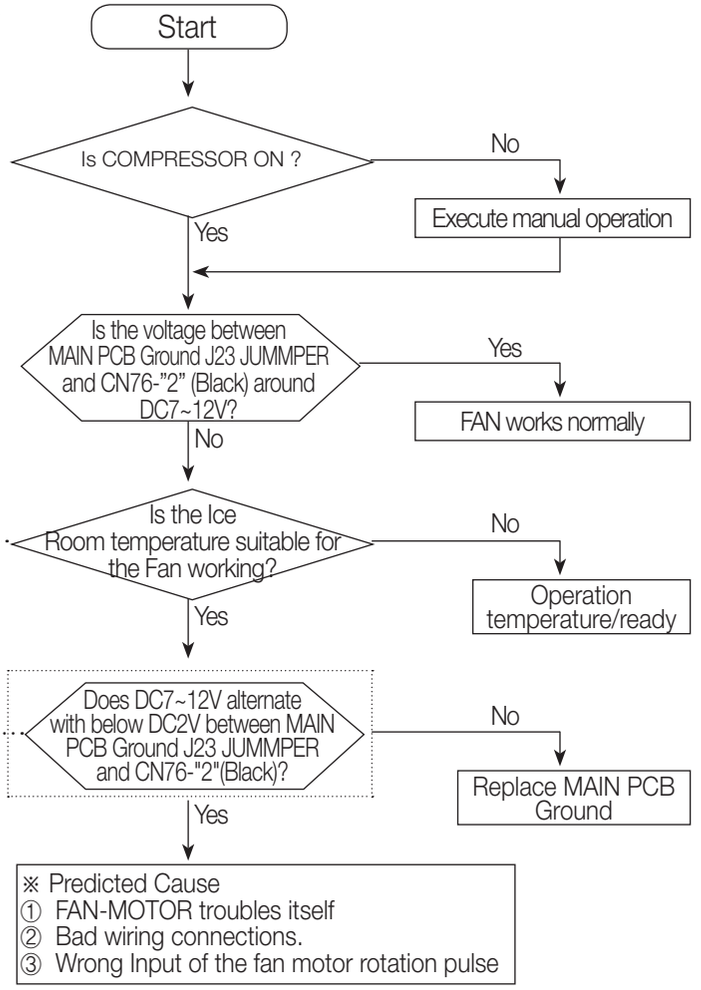

Ice Room control temperature	
Ice ON	8.6℉(-13℃)
Ice OFF	26.6℉(-3℃)

Reference

CN76 "6" will generate the pulse signal when motor rotates.
These signals will be input into MICOM.
Unless signals are not input during motor operating, will be ON 10seconds after fan OFF. But if signals are not still taken, the above operation will be retried four times more. If signals are not taken continuously, the motor will be restarted after 10 minutes.
This function is against the case that motor movement would be restrained by foreign matters like ice.

※ Predicted Cause
① FAN-MOTOR troubles itself
② Bad wiring connections.
③ Wrong Input of the fan motor rotation pulse

FAN pulse voltage CN76-"6"(Pink)

PCB Typical Ground J23 JUMMPER

The voltage is variable due to pulse signal but measured about 2~3V with the Multi-Meter.

☞ Display for checking the self-diagnostic function



☞ Checking method of Ice Room FAN Motor Voltage with the voltage between Ice Room FAN ; CN76-"1"(Gry) shall be less than DC 7~12V.
- Ice Room FAN Motor Voltage shall be less than DC 7~12V.

1) Ice Room - FAN

PCB Typical Ground J23 JUMMPER

4-2-4. When ICE MAKER(FF) does not operate

1. Water will be automatically supplied to the Ice Maker depending on temperature & time conditions, and ice will be produced to dispense.
2. Power is applied to one end of the wires. So, make sure to refer to its Exploded View whenever doing the disassembly.
3. The operation of the Ice Maker shall be done after pressing the Ice Maker Test Button. (Fridge Ice Maker) It is not possible to check when the power is off.
4. Since both of the PCB and the Ice Maker are located at the front and the back each other, make sure to have two people check them.
5. It may cause burn when the Ice Maker Heater heats up. So, please take an extra caution.
6. The Ice Maker has a counter-clockwise rotation function. So, its counter-clockwise rotation is normal.

Displays ERROR Code

Opration Condition while Motor is rotating Micom(IC01) Operation Status		
	Stand-by	On
Motor Load (#74)	0V	5V
Heater Load (#118)	0V	5V
Heater operates differently according to the conditions. Test Mode operation will be 30 sec.		

Micom(IC01) Operation Status		
#7 (Test Switch)	Stand-by	On
	5V	0V

Micom(IC01) Operation Status				
	Standby	Rotation	Before finishing	Completed
#73 (Blade Ice Scoop)	0V	4.9V	4.9V	0V

Ice maker Operation Status
Home → Motor CCW Rotation → Motor CW Rotation → Water Supply → Normal ('Ding Dong' Sound)

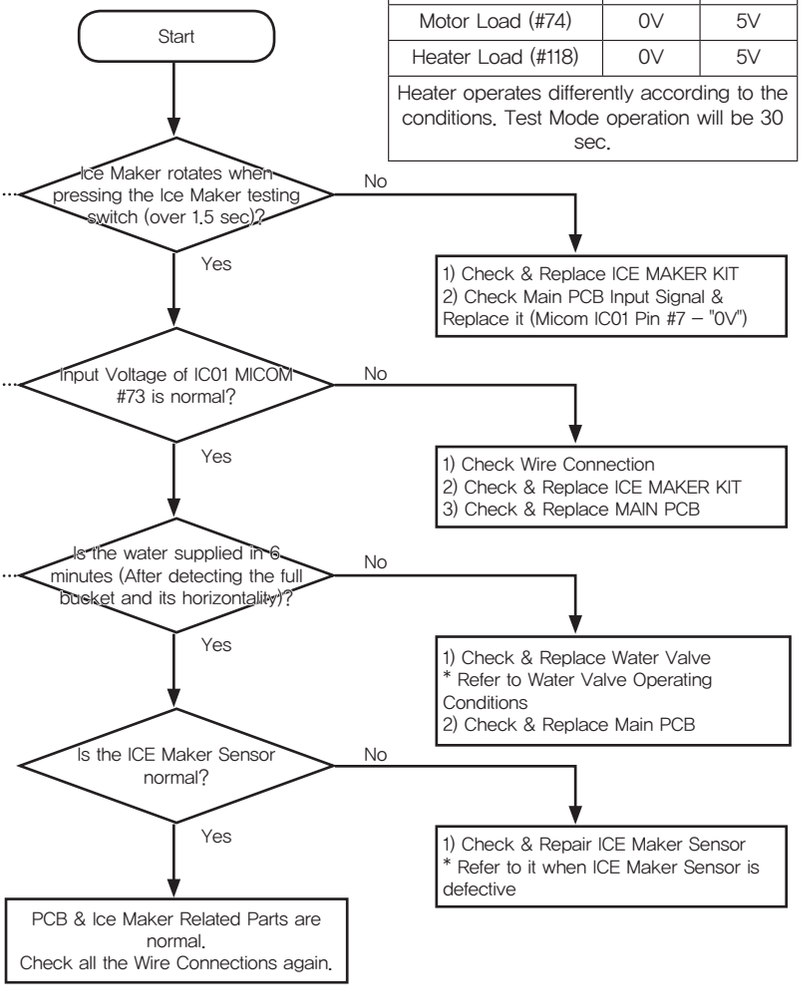

4–2–5. If defrost does not operate (F,R DEF Heater)

R DEF ERROR

F DEF ERROR

Start

Are the all deforst heater normal?

No → Check the bimetal, heater disconnection, wiring connection etc.

Yes

Measuring point of resistance value according to heater
F-DEF : CN70 "3"(Brown) ↔ CN72 "3" (Gray) measuring resistance value(63 ohm ± 7%)
R-DEF : CN70 "1"(White) ↔ CN72 "3"(Gray) measuring resistance value(120 ohm ± 7%)
** 0Ω : Short trouble / Ω∞ : Open(bimetal, heater) trouble

Is defrost sensor by self-diagnostic normal?

No → Refer to self-diagnostic function in the manual → Replace the applicable sensor

Reference to the manual "Self-Diagnostic"

Yes

**Measuring point of resistance value according to sensor **
F-DEF : CCN30-"5" ↔ CN76-"1" measuring resistance value
R-DEF : CN30-"8" ↔ CN76-"1" measuring resistance value
** 0Ω : Short trouble / Ω∞ : Open trouble

Is the temperature of defrost sensor lower than 53.6℉(12℃)?

No → manual operation for a certain time

Yes

Resistance value of sensor according to temperature		
86℉(30℃)	4.22kΩ	If you need the temperature with detail, refer to DATA1. temperature table
68℉(20℃)	6.05kΩ	
50℉(10℃)	8.87kΩ	
32℉(0℃)	13.29kΩ	
14℉-10℃)	20.42kΩ	
-4℉-20℃)	32.23kΩ	
-22℉(-30℃)	52.41kΩ	

Manual defrosting of fresh food and freezer compartments operate simultaneously.

If Energy Saver + Fridge Key are pressed simultaneously for 8 seconds and then select any key, 3rd test mode(manual defrosting) will be operated.

Is power applied to each defrost heaters?

No

Yes

Does the system return to cooling operation after heating for specified time?

No → Recheck the applicable sensor.

Reference If defrost sensor temperatures of fresh food and freezer compartments are higher than 50℉(10℃), 53.6℉(12℃) by the heating from heater, heating would be finished and will return to cooling operation after a pause.

Yes → Normal

Is connection terminal of MAIN PBA part normal?

No → Repair connection terminal

Yes

Check bimetal, heater itself, disconnection etc.

Replace failure Relay or replace PBA ASS'Y

☞ Checking method of F,R DEF Heater resistance value
CN70-"3"(Brown) ↔ CN72 "3"(Gray)
CN70-"1"(White) ↔ CN72 "3"(Gray)
- Recheck if resistance values are different after the test

1) F DEF Heater

2) R DEF Heater

4-2-7. When Compressor does not run (Inverter COMP.)

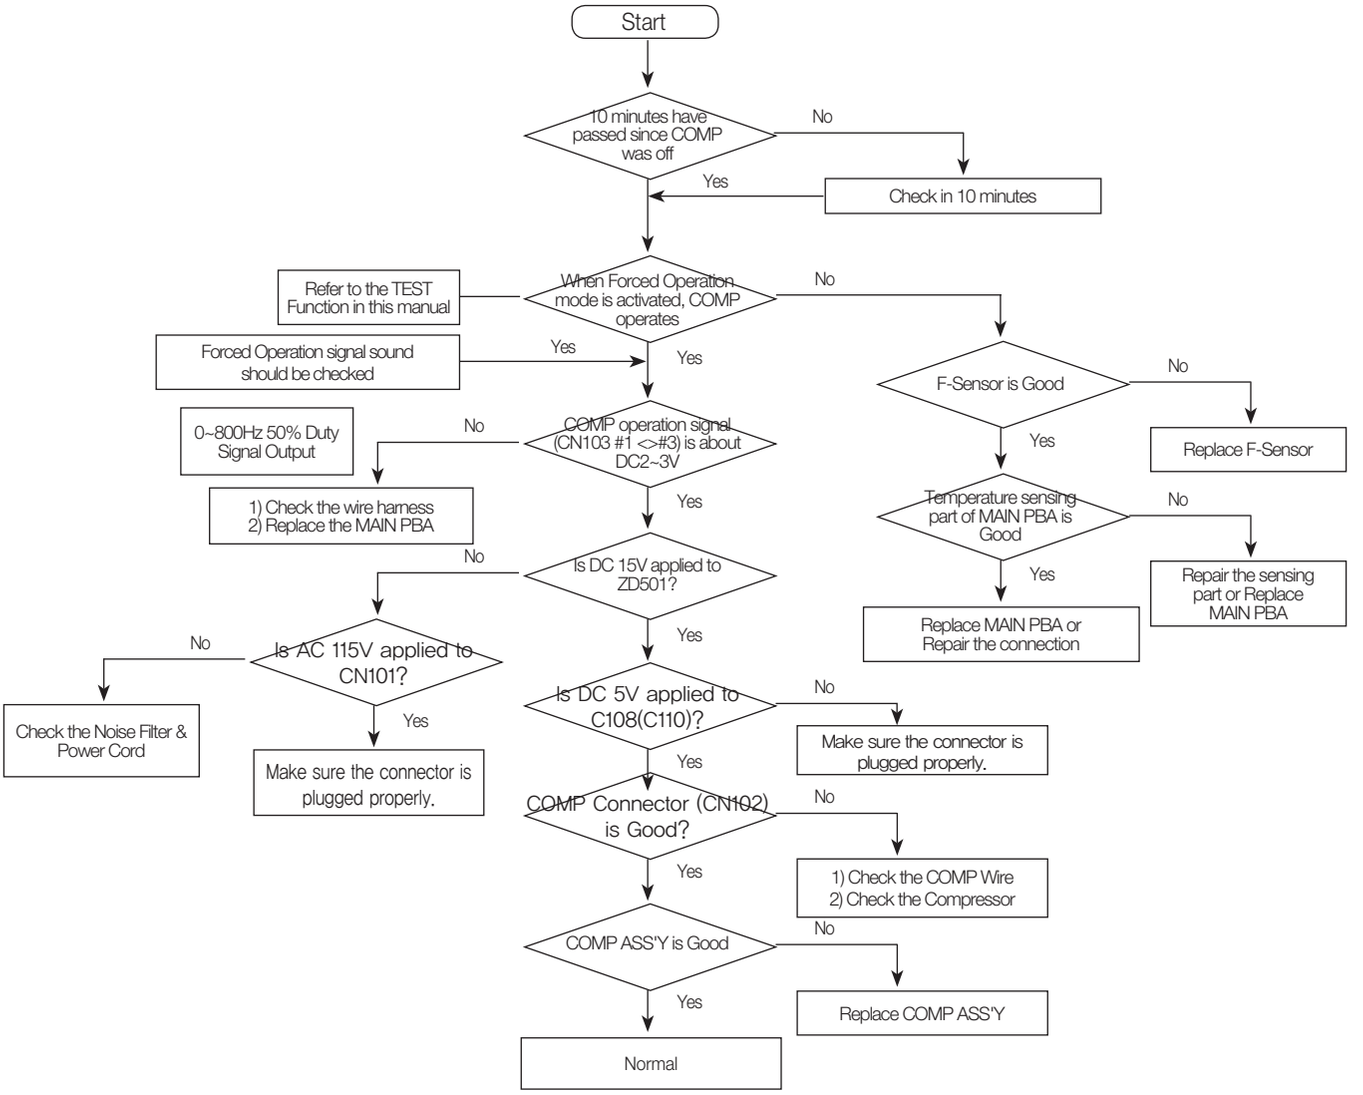

4-2-8. When alarm sounds continuously without stop(related with buzzer sound)

① If 'ding-dong'sound continuously

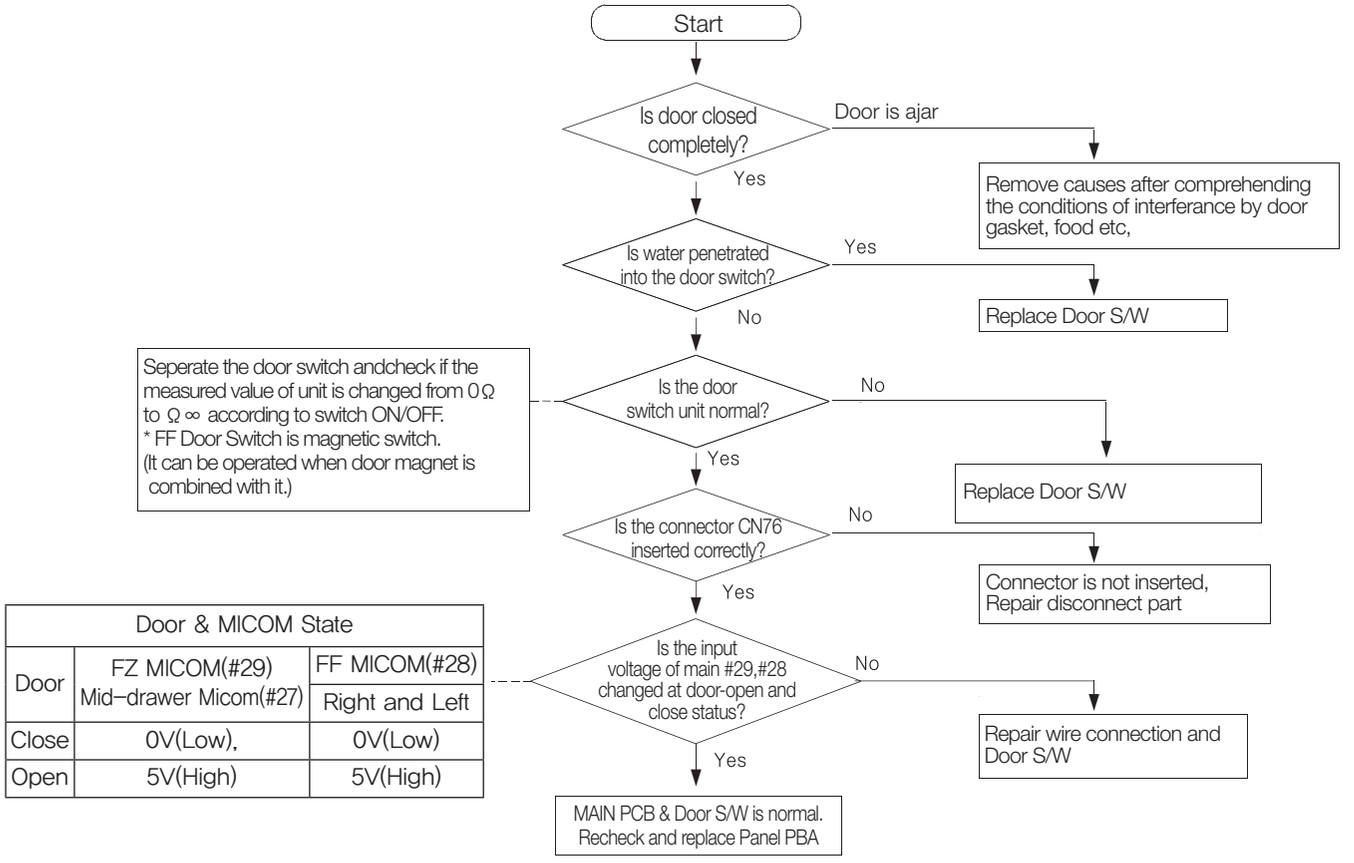

② If 'beep-beep' sounds continuously

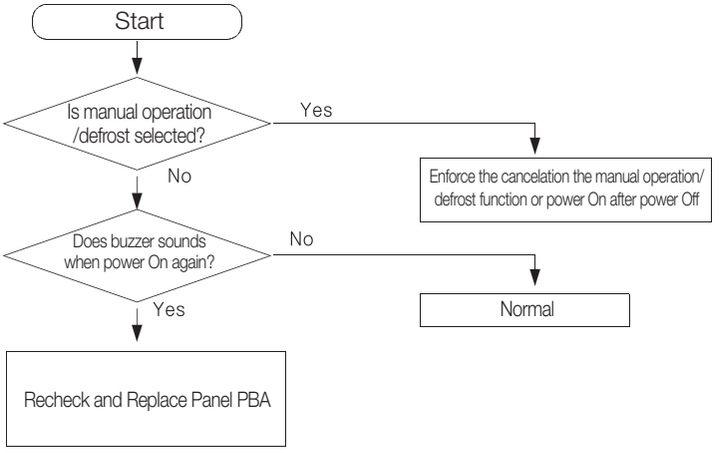

③ If buzzer does not sound

Buzzer is installed on the panel PCB in this model.
If buzzer does not sound even though the button is pressed, manual operation is started and door is opened, it should separate panel PCB and check the breakage of buzzer and bad soldering.
It is very hard to repair the panel PCB because it consists of SMD assemblies.
It is recommended to replace PCB assembly when the failure associated with panel is occurred except the minor error such as switch pressing error, surface peeling off and so on.

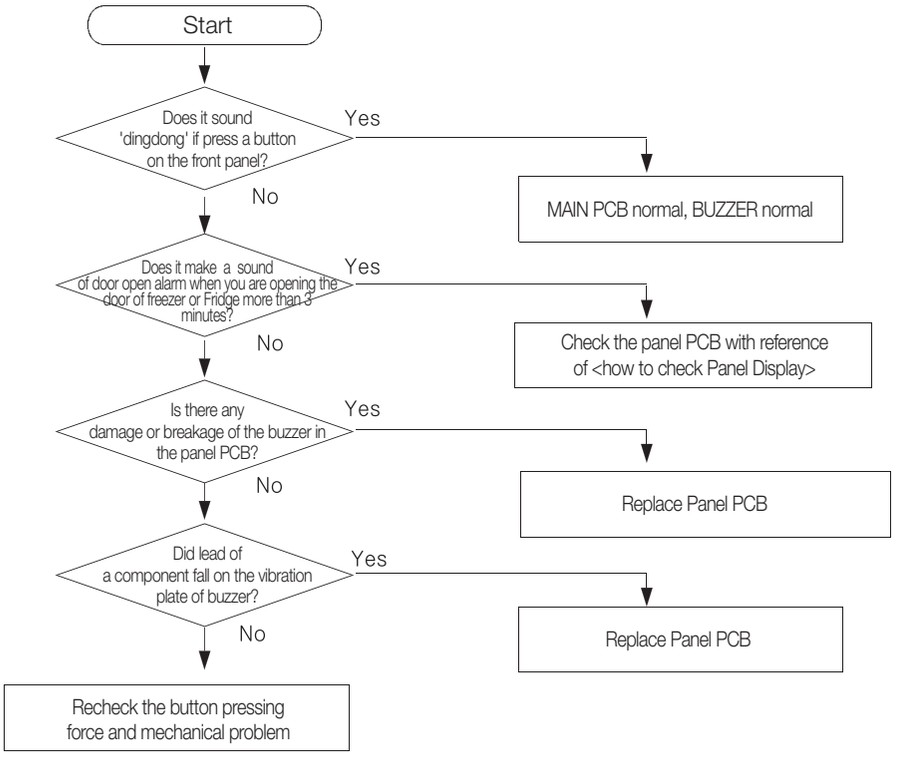

4–2–9. When the Panel PBA does not operate normally

① When the entire or a certain section of the Panel PCB does not light up

- There is a MICOM embedded in the Panel PCB. So, take care when doing repairs. And, except the Solder Touch, replace the PCB.

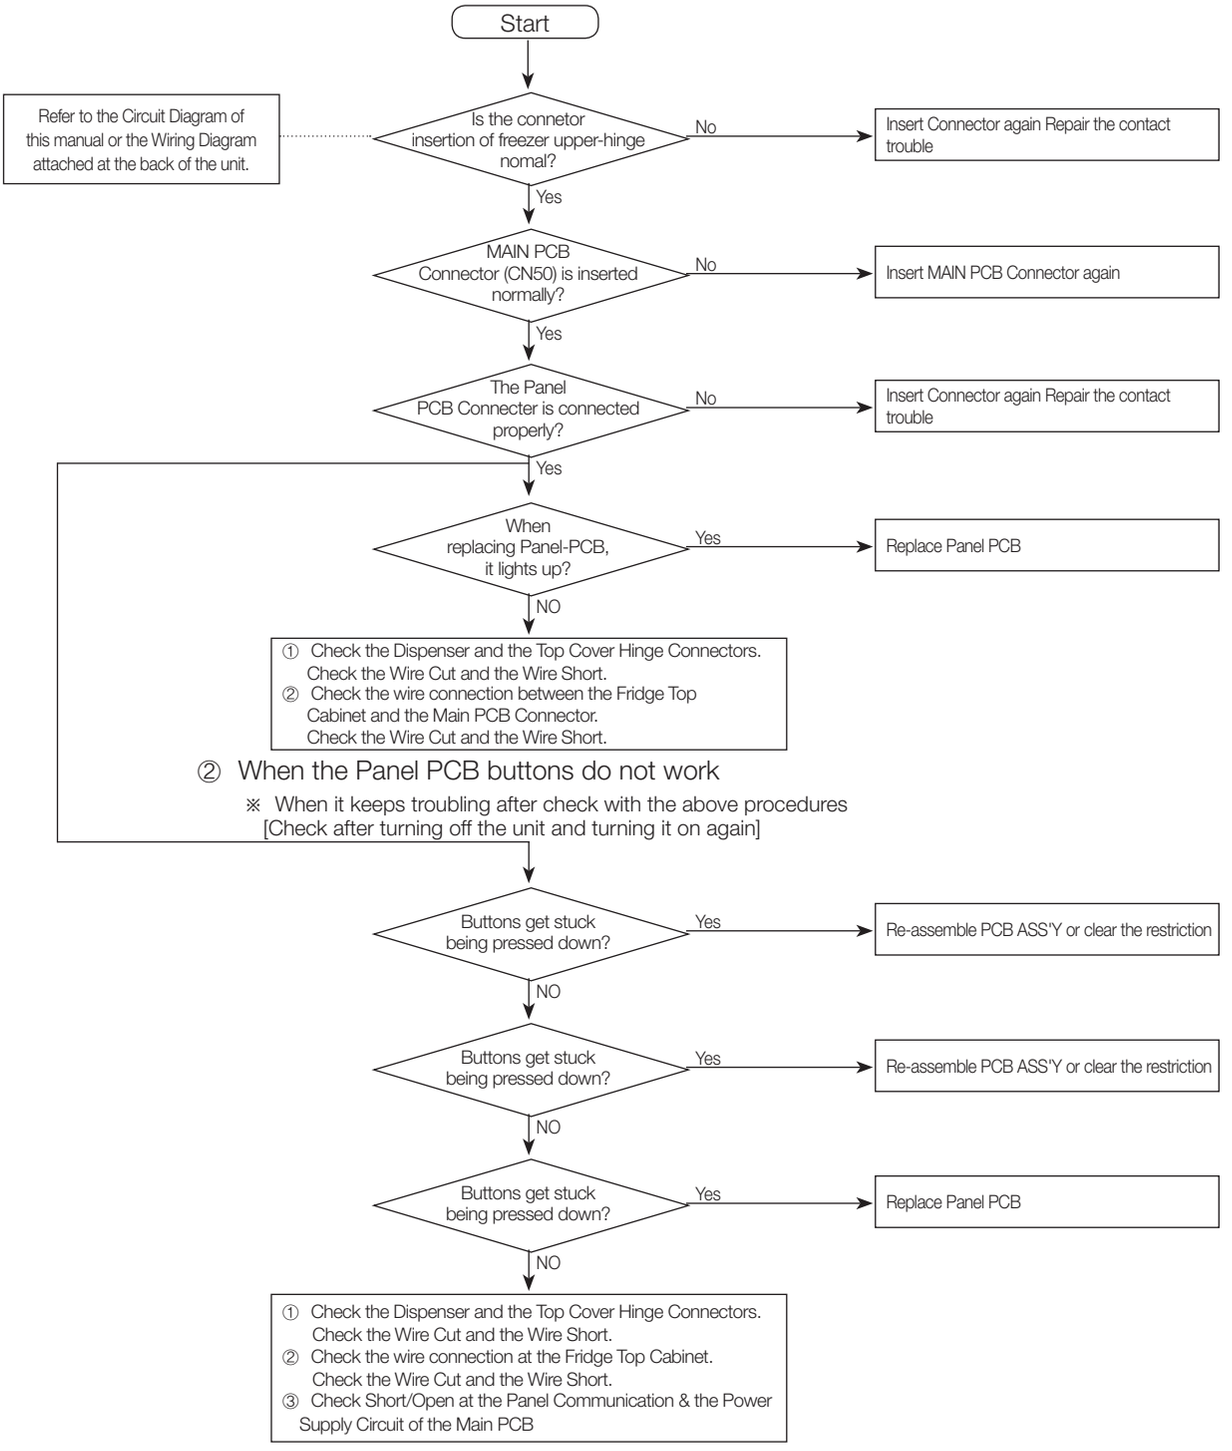

② When the Panel PCB buttons do not work

※ When it keeps troubling after check with the above procedures [Check after turning off the unit and turning it on again]

Since all Touch is used for the Panel PCB Switch, be sure to turn off the unit and turn it on again after doing a repair. [It is to adjust the sensitivity of the Touch Panel.]

4–2–10. If Mid drawer Panel PCB is not working normally

You should check the display after door opening because the display of this model operates only when the fresh food compartment door is opened.

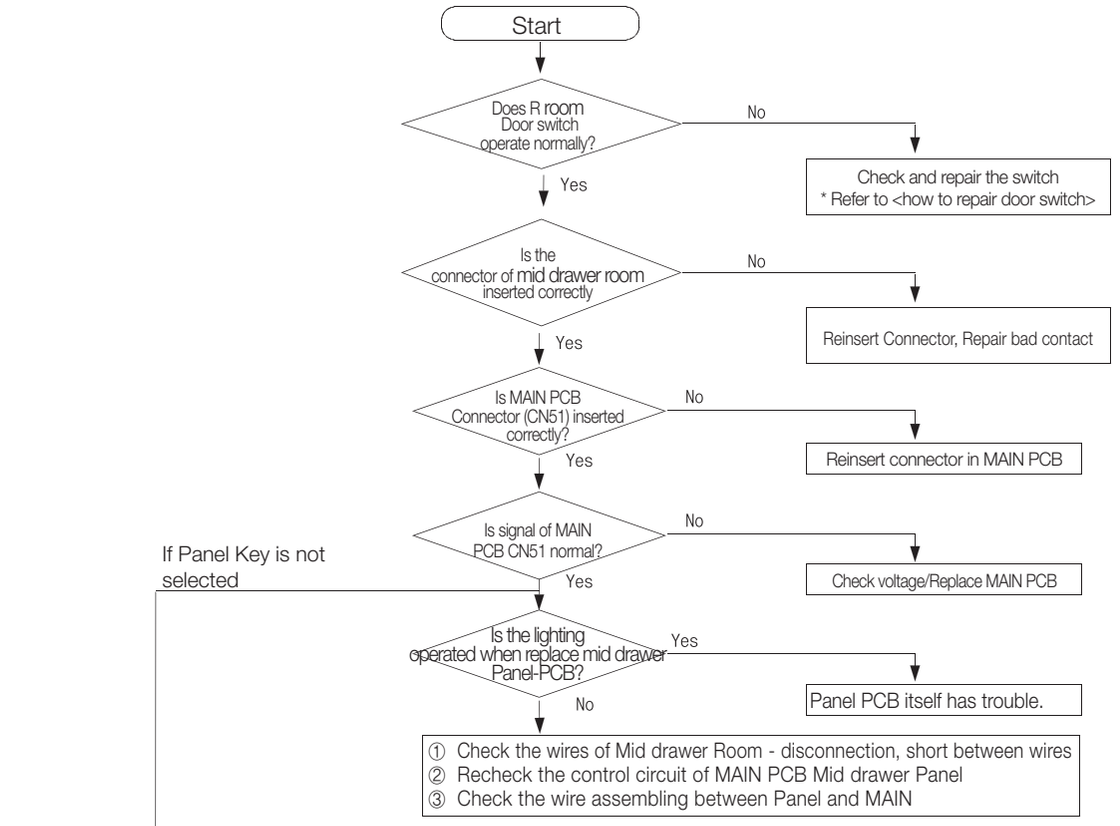

← ② If Panel PCB Key is not selected

※ If it is not repaired with the above basic checking method

PCB Typical Ground J23 JUMMPER

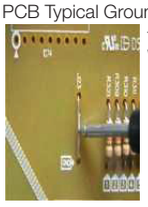

The Voltage of KEY is Working every 2msec/4min

☞ Checking method of voltage Based on PCB typical Ground J23 JUMMPER

1) Key voltage ; CN51-"11"(Sky Blue)

a) Working: 2V±0.5V b) Normal: 0V

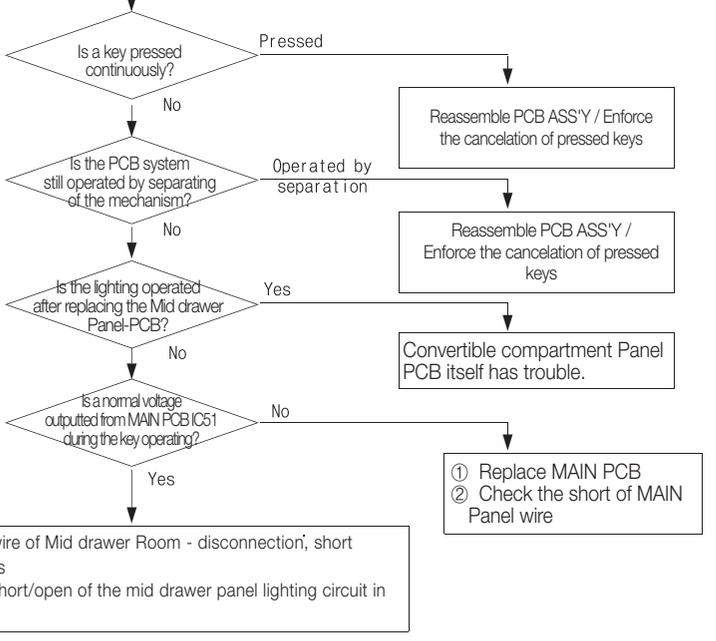

4–2–11. When refrigerator ROOM Lamp does not light up

When controlling the refrigerator light with Regulator(12V) : LED LAMP
→ Applying to the F/R Room compartment (Option)

* If the Vegetable Lamp does not work properly, check the R compartment LED Lamp because it is connected with the R compartment LED Lamp in parallel. Refer to the circuit diagram to repair.

Door & MICOM State	
Door	MICOM(#28)
	Right and Left
Close	0V(Low)
Open	5V(High)

MICOM State		
Door (Right and Left)	FF	FZ
	#28	#29
Close	0V(Low)	0V(Low)
Open	5V(High)	5V(High)

IC76(R)/IC77(F) State	
Micom	IC76(R) / IC77(F)
0V(Low)	0V(Low)
5V(High)	11~12V(High)

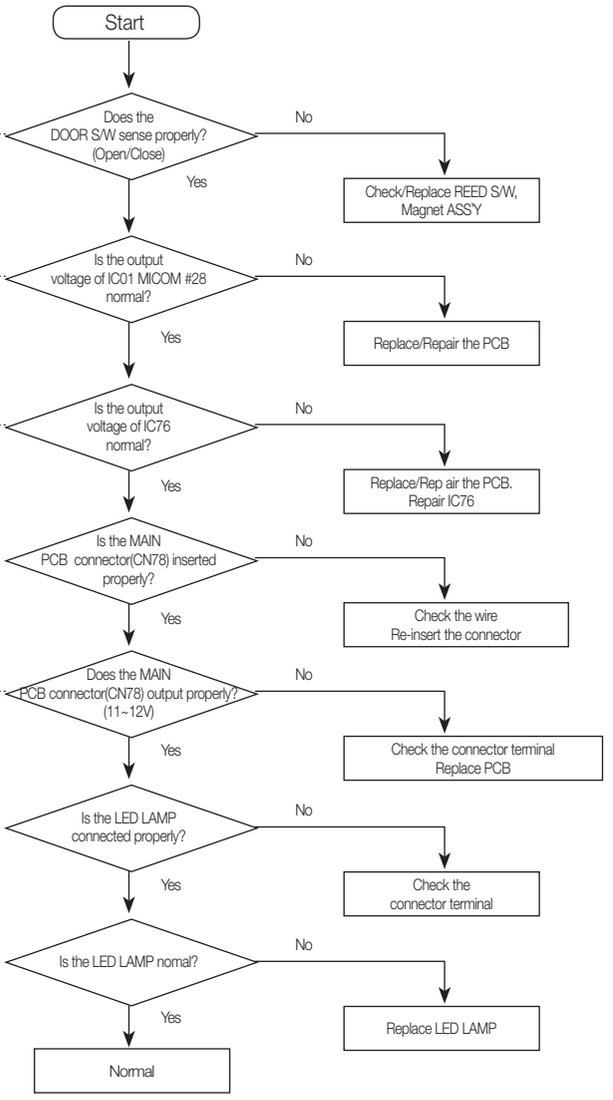

*The Filler lighting LED Lamp is not working.

1) It is connected with the lamp in the fridge and if the lamp in the fridge is not working, please consult the troubleshooting guide for checking the lamps.
2) If the lamps are working properly except the Filler lighting LED Lamp, please disassemble the Top Table and check according to the following procedure.
3) Please turn on the power and check the DC Voltage with TP4 (Red), TP5 (Black, GND) on PBA where the voltage drop occurs.
   - If the voltage is measured at 11V (±2V), please follow the procedure as described in step 4.
   - If you fail to measure the voltage, please check if the connectors and wires are connected properly.
4) Please turn on the power and check the DC Voltage with TP1 (Red), TP5 (Black, GND) on PBA where the voltage drop occurs.
   - If the voltage is measured at 10V (±2V), please check if the connectors and wires are connected properly and replace the Filler lighting LED if necessary.
   - If you fail to measure the voltage, please replace the PBA.

1) Measuring output voltage
   - Measuring the voltage of PCB typical Ground J23 JUMMPER and IC76 voltage(CN78-"3"(Red)/R LED), IC77 voltage (CN78-"1"(Brown)/F LED)

R LED Lamp ON

R LED Lamp OF

Checking method of Door switch voltage.

- Measuring voltage of CN76-"12"(Purple) ↔ PCB typical Ground J23 JUMMPER

Close

Open

PCB Typical Ground J23 JUMMPER

4–2–12. If ICE Water is not supplied

1. Please shut the water supplying prior to repair.
2. Power is applied to the one end of wires. Be careful when disassembling not to get an electric shock.

2) Ice Water(R) Valve

PCB Typical Ground J23 JUMMPER

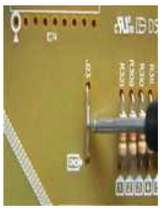

☞ Checking method of voltage Based on PCB typical Ground J23 JUMMPER

1) Check the voltage of IC73-"4"(same voltage as IC01 "104", IC72-"3"(same voltage as IC01 "117")
- ICE Water valve waiting (about 0V)

Based on PCB typical Ground J23 JUMMPER

2) IC73-"13" and IC72-"14" voltage
- ICE Water valve Waiting (about 12V±0.8V)
- ICE Water valve operating (about 0.7V±0.5V)

3) Check the voltage of Water Valve operating (AC voltage)
=> The Relay RY78 and RY73 operating.
CN70-"5"(Red) <->CN73_1-"1"(Purple)
CN72-"3"(Gry) <->CN70_1-"1"(Org)
- ICE Water valve waiting (about AC 0V)

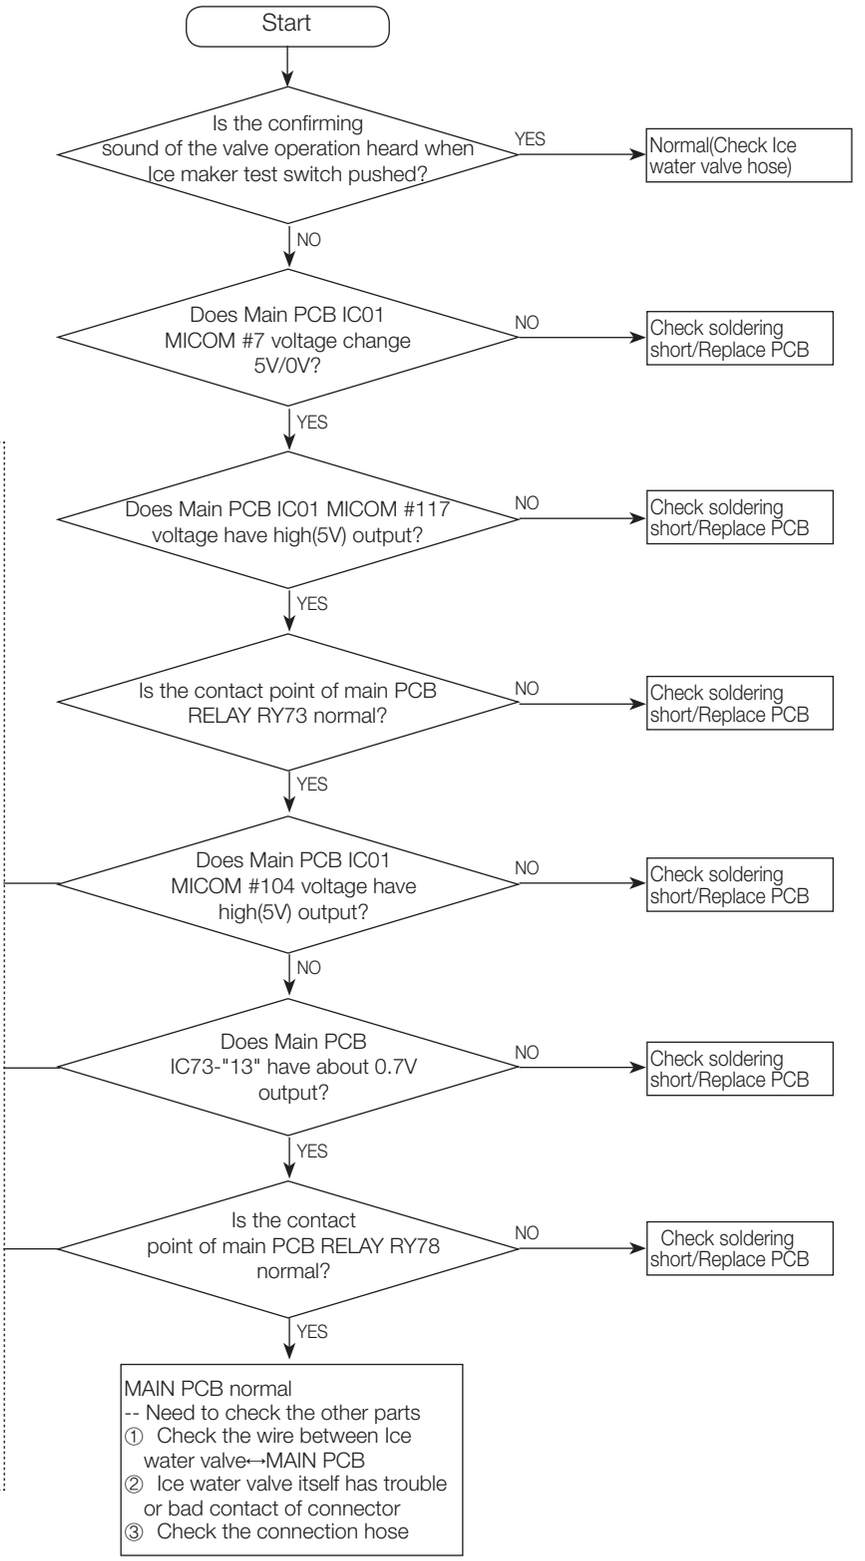

4–2–13. If Cubed or Crushed Ice is not supplied

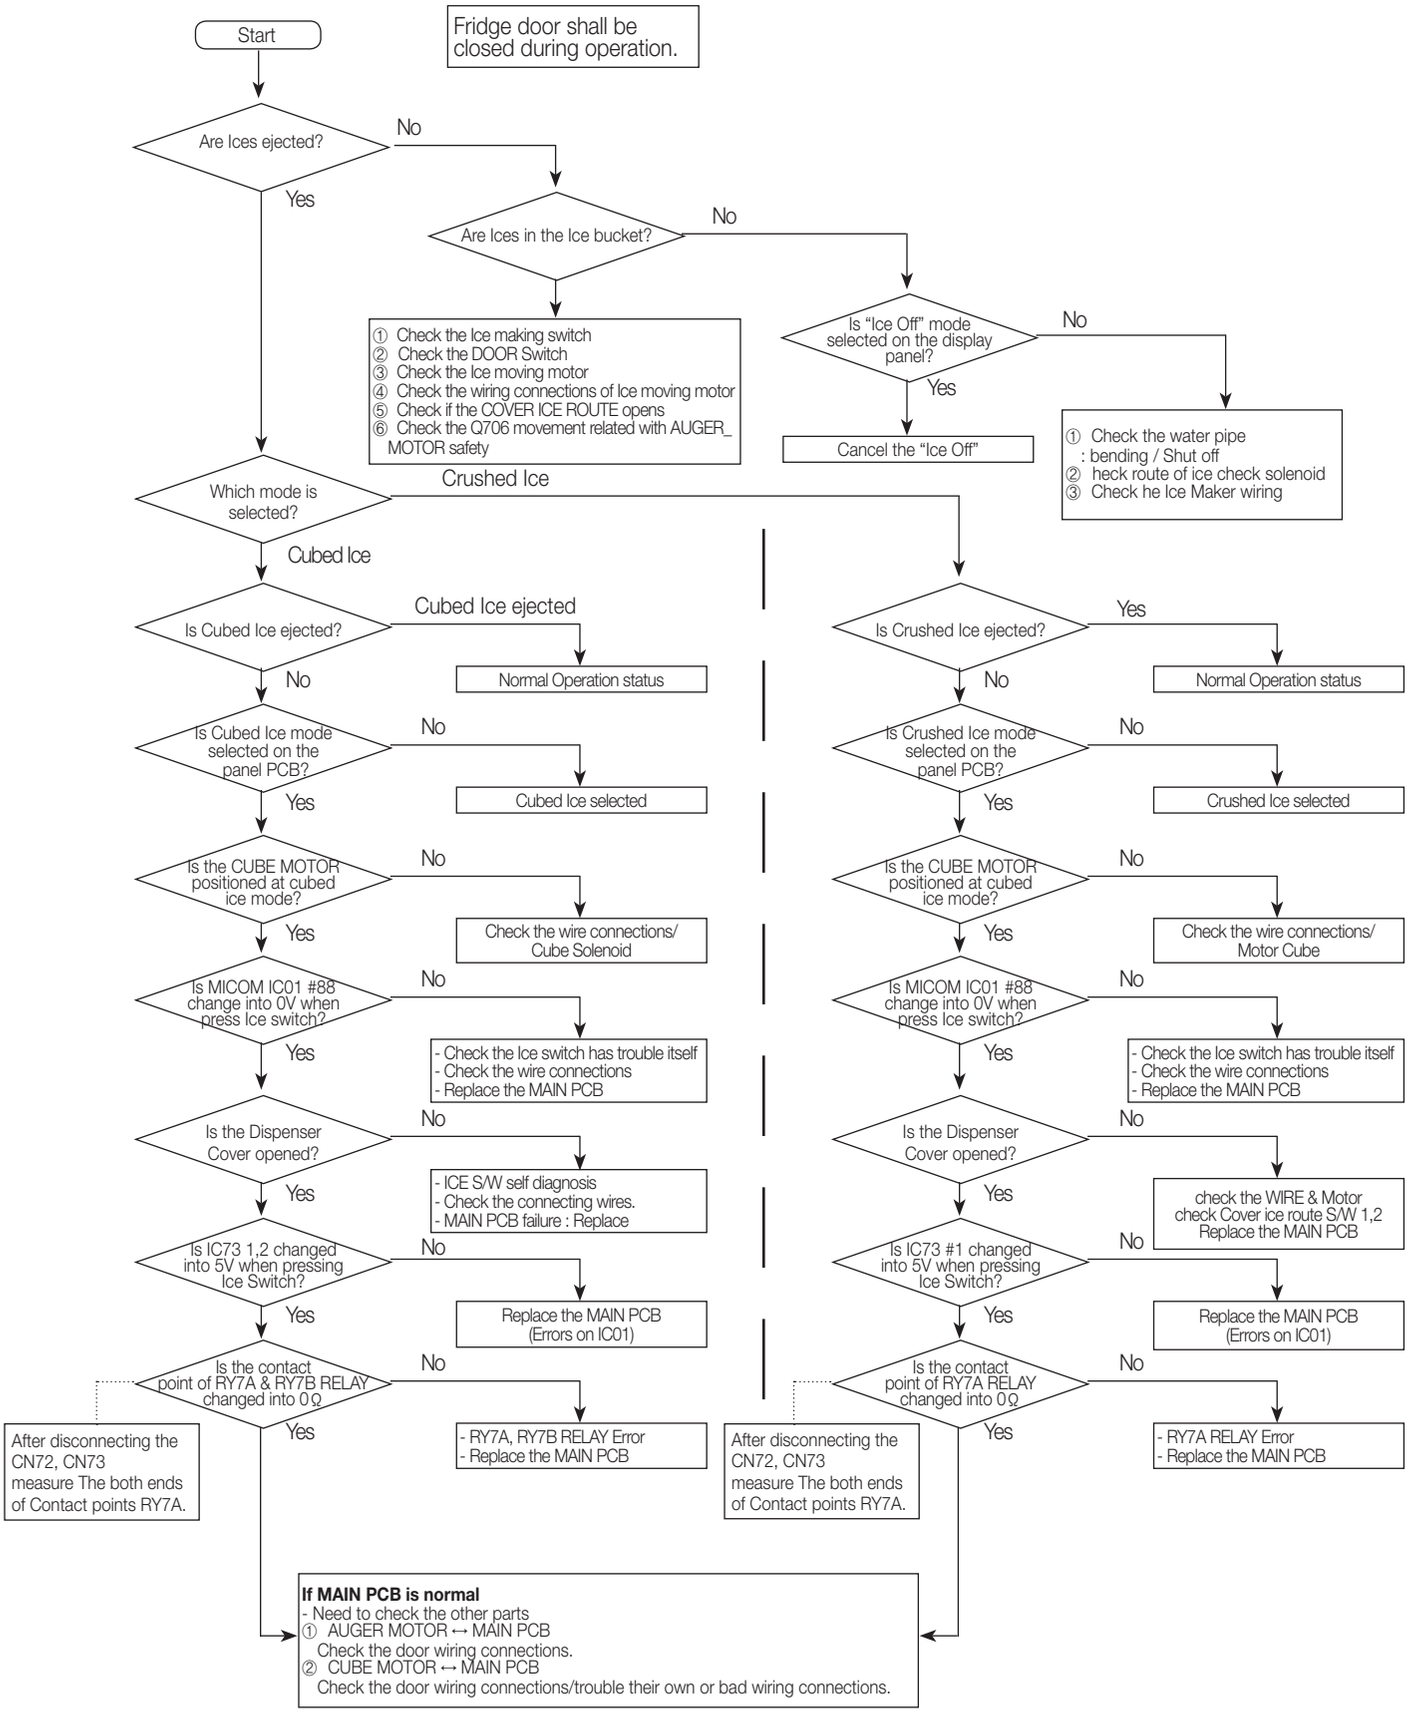

4–2–14. If Cover Ice Route Motor(Geard Motor) is not working normally

Caution
1. When replacing the Cover Ice Motor, pull out the plug to avoid an electric shock.
2. Be careful! When disassemble the Cover Ice Motor, spring can jumped out and may cause personal injury.
3. Motor will rotate continuously when the Motor Switch is not sensed.

☞ Checking Mehod of Cover Ice Route Motor Resistance
(Make sure to work after Power Off)
the voltage of Resistance is variable according to the input voltage.
CN70 -"5" (Red) ↔ CN73_1 -"3" (Blue)
** 0Ω: Short trouble / Ω∞: Open trouble

Start

Does GEARED MOTOR work properly?
- No → Replace the MOTOR
- Yes ↓

Is Cubed or Crushed Ice mode selected on the LED PANEL?
- No → Cubed or Crushed Ice is selected on the LED PANEL PCB
- Yes ↓

Is the DISPENSER switch selected?
- No → Select the DISPENSER switch
- Yes ↓

Does the wiring at the both sides of motor connected properly?
- No → Check the WIRE
- Yes ↓

When the MOTOR rotates.

Is the AC input voltage applied to the both ends of the motor?
- Yes → Check the MOTOR/Check any interference on MOTOR rotation
- No ↓

① Check CN73_1–"3" Connector / Re–connect
② Check the short/open for the SSR75 of Cover Ice Motor on Main PCB.
③ Check the voltage of Resistance of parallel Connector CN73 –"3", CN70 –"5" (Definitely plug out prior to repair)

Is the sensing SWITCH connection normal?
- No → Check/Repair the Housing connector
- Yes ↓

Is the switch pressed area normal when motor rotates?
- No → Check/Repair the Motor Rotation pressing area
- Yes ↓

Are the voltage J23 JUMMPER and CN50-"9", "10" normal?
- Yes → Normal
- No ↓

Operating Condition of Dispenser Open/Close
CN50 - Switch 1,2 Operating

	Close	ing	Open
Ice Route Switch 1 CN50 - "9" (Purple)	0V	5V	0V
Ice Route Switch 2 CN50 - "10" (White)	0V	5V	0V

① Main PCB - Check the wire OPEN/SHORT between the Cover Ice Motor Rotation sensing switches.
② Check the Short of Cover Ice Motor Control Circuit SSR75 in the MAIN PCB.
③ Replace the MAIN PCB or the Dispenser Cover Motor.

4-2-15. IR Sensor Trouble-Shooting

1. When the IR sensor is defective, ice is not produced even if there is no Ice Maker Error, Ice Maker Sensor Error or the Ice Maker Function Error.
   (When turning on the Self Diagnosis Function, it does not produce ice even if there is no 14E, 15E or 39E being displayed.)
2. Proceed with the Fridge Door being open and the Ice Bucket being removed.

Indicator Location for Ice Full in Fridge
Blinking : Ice Full
Keep On : Not Ice Full

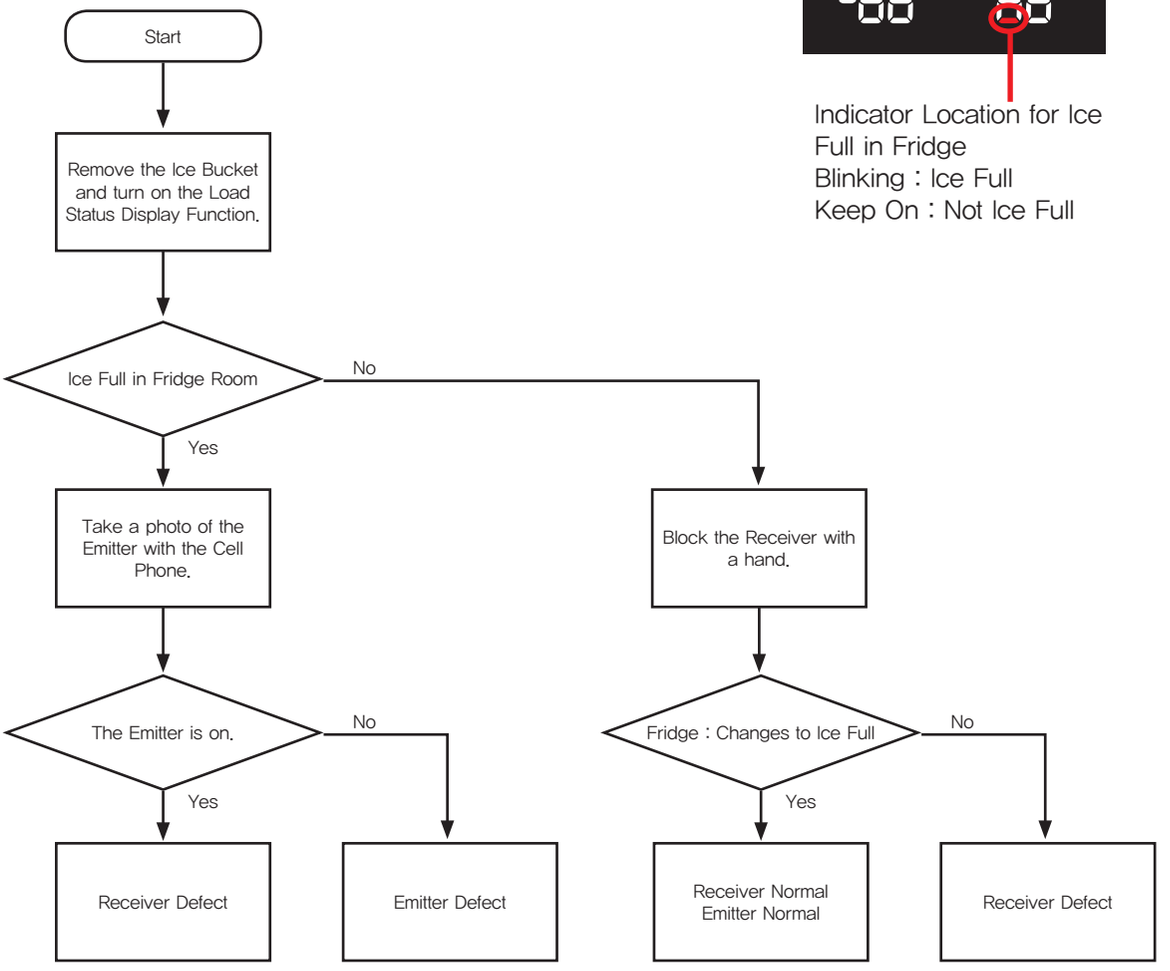

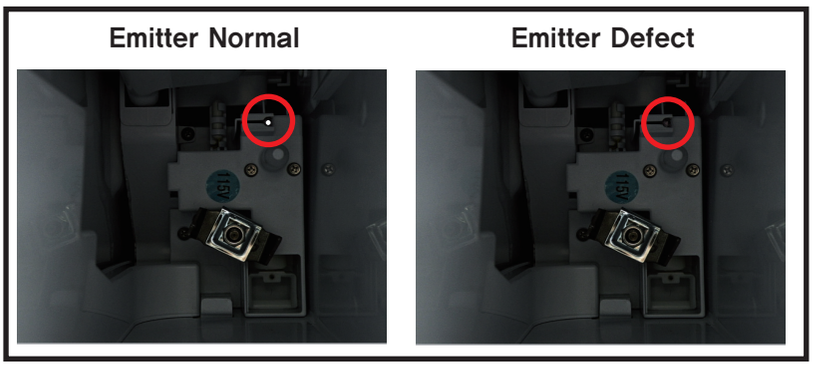

4-2-16. LED blinking frequency depending on protecting functions

If Failure Condition is detected during compressor is operating, immediately stop Compressor operating and stand by 5 minutes. During this 5 minutes, RPM command signal is not available. It means, even if available RPM command signal is applied to the compressor, it does not work and keep standing by.

Blinking time is 1 second and dwell time is 2 seconds.

LED Blinking Frequency	Protecting Functions	Remarks
	Normal Operation	N/A
	Starting Failure	1. Short between COMP U,V, and W phase(CN102) 2. Short among IPM Pins(No. #1 ~ 26) 3. Drop the IPM operating Voltage under DC 13.5V 4. Other cases, check the COMP, cycle, etc.
	IPM Fault	
	Abnormal Current Detection	1. Open the COMP wire(CN102) 2. Bad condition of R1(ex. Bad soldering.) 3. Other cases, check the COMP, cycle, etc.
	Motor Locked / Over RPM	1. Operating the locked rotor COMP within 5 second. 2. Operating the COMP under 1000 RPM more than 5 second. 3. Occur the huge change of input voltage in a moment. 4. Other cases, check the COMP, cycle, etc.
	Under Voltage	1. Drop the input voltage under AC 53V 2. Short resistor R525 (DC link resistor)
	Over Voltage	1. Increase the input voltage over AC 155V 2. Short resistor among R522, R523 and R524 (DC link resistor)

LED blinking frequency depending on protecting functions
If the same blinking, After 5 minutes, Follow the Remarks

This document can not be used without Samsung's authorization

5. PBA DIAGRAM

5–1) PBA Layout with part position 98
5–2) PBA Layout with part position (Inverter Board) 99
5–3) Connector Layout with part position (Main Board) 100
5–3–1. RF30HB* 100
5–4) Connector Layout with part position (Inverter Board) 101
5–4–1. RF30HB* 101

This document can not be used without Samsung's authorization

PBA DIAGRAM

5-1) PBA Layout with part position

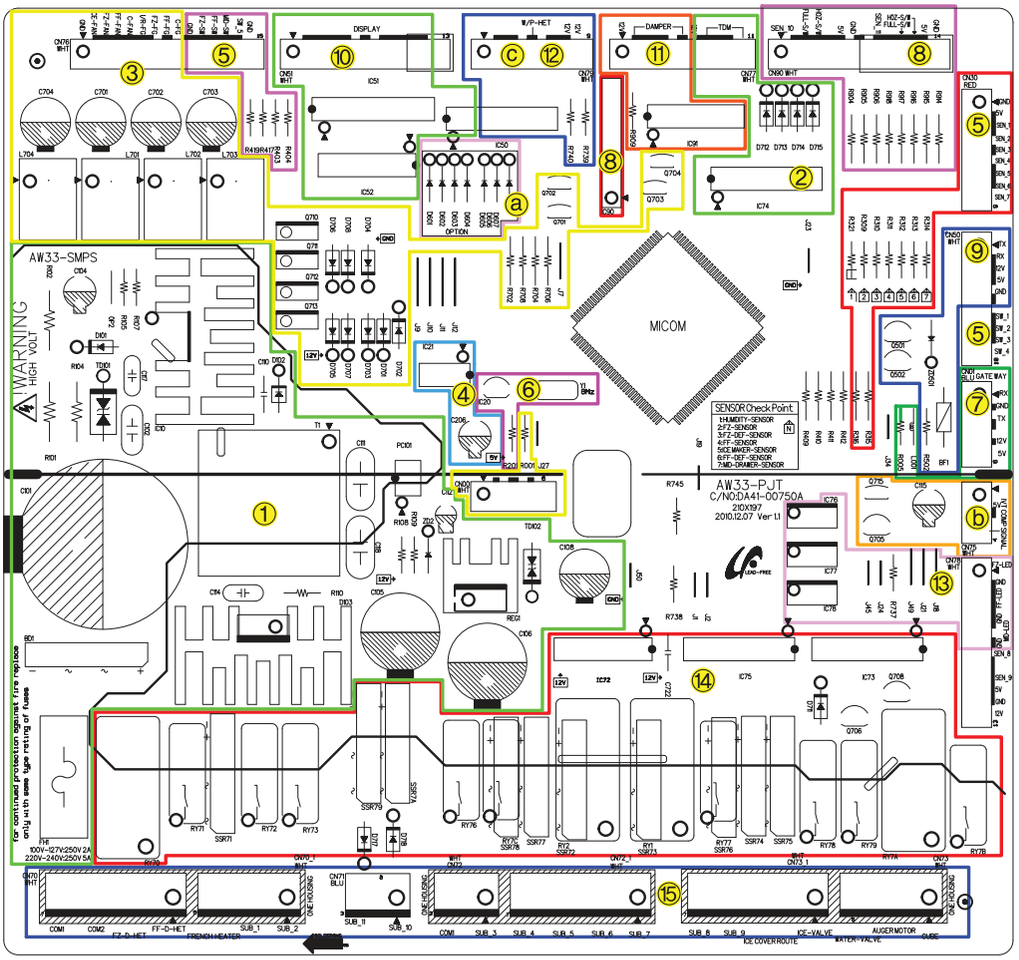

1. DC12V, 5V, GND supplied from SMPS PCB (Not Used)
2. Circuit for controlling Step-Valve (3-Way Valve) * Option
3. FAN MOTOR control part : To supply the power from 8.3V ~ 12V according to the motor types. (F,R,C,ICE)
4. EEPROM : Save and record every kinds of data.
5. Transmit inputted signals from every sensor into MICOM after eliminate the noise.
6. Micom : control the refrigerator Ceramic resonator : generate the basic frequency of Micom operation. Reset IC : make Micom reset if input voltage of Micom is detected less than the specified voltage
7. PLC input/output
   - PLC (Power Line communication) * Option (PLC module is not inserted unless specified occasion)
8. Operate ICE-MAKER, supply power to MOTOR, and sense the variation of switch.
9. Main Micom ↔ Panel Micom serial communication circuit - Dispenser option input part (Water & Cover Ice route switch)
10. Mid drawer Room display control part : display LED, detect KEY state.
11. Control Mid drawer Room damper & Damper heater
12. Water Tank Heater Controls (also controls other options)
13. LED LAMP Control Circuit (F,R room Lamp)
14. Relay parts that controls AC load and receives Micom operating signal through Sink IC.
15. Connector with AC load
    a. Diode option setting area
    b. Inverter COMP controlling signal
    c. Flow Sensor controlling signal

This document can not be used without Samsung's authorization

PBA DIAGRAM

5-2) PBA Layout with part position (Inverter Board)

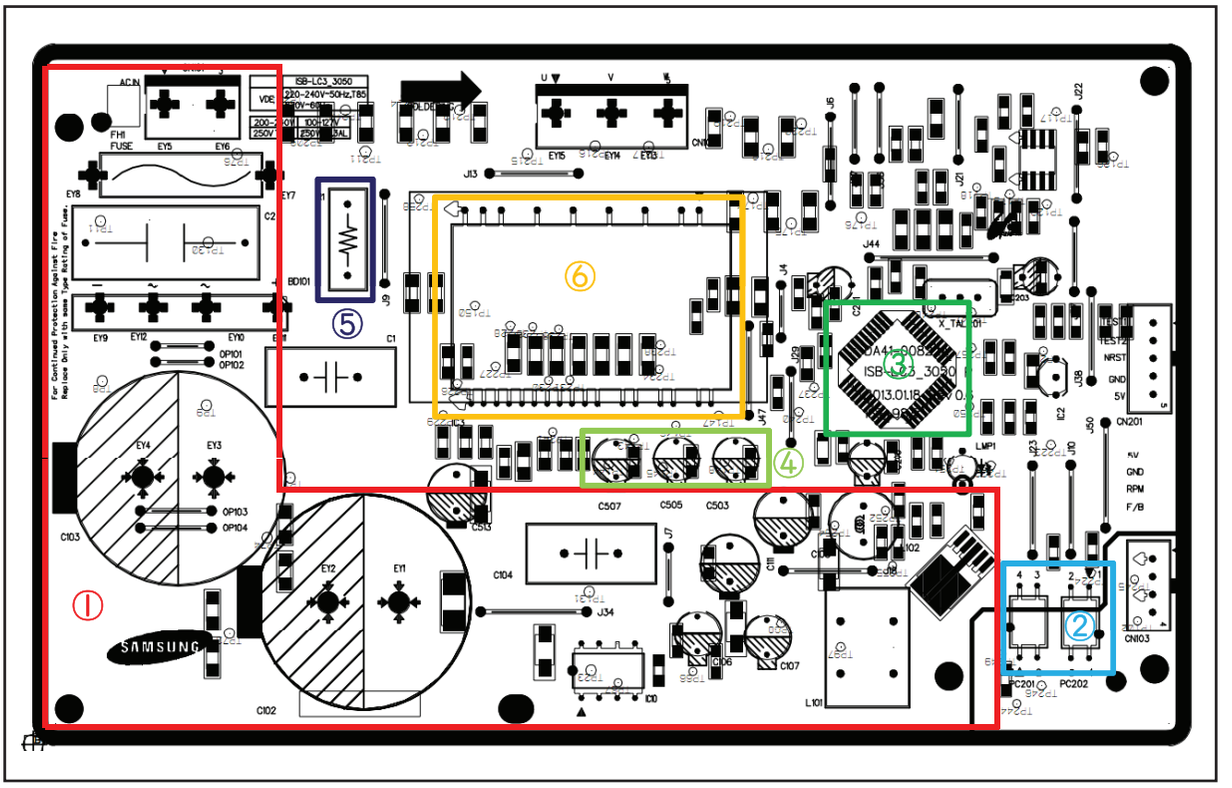

1. PCB Power Supply : From the AC Input Voltage(115V), it supplies DC 15V and 5V to the Inverter circuit for the Compressor control.
2. COMP Driving / Feedback Circuit
   It receives the COMP operation signals from the Main PBA and feedbacks the inverter errors to the Main PBA.
3. Micom (MN103SFC2D)
4. BOOTSTRAP Charger : It is an independent power circuit for the driving of the IMP High-Phase IGBT.
5. Current Pickup Circuit : It pickups the currents taken by the Shunt resistance and does the PWM DUTY control.
6. IPM (FNB40560)

This document can not be used without Samsung's authorization

PBA DIAGRAM

5-3) Connector Layout with part position (Main Board)

5-3-1. RF30HB*

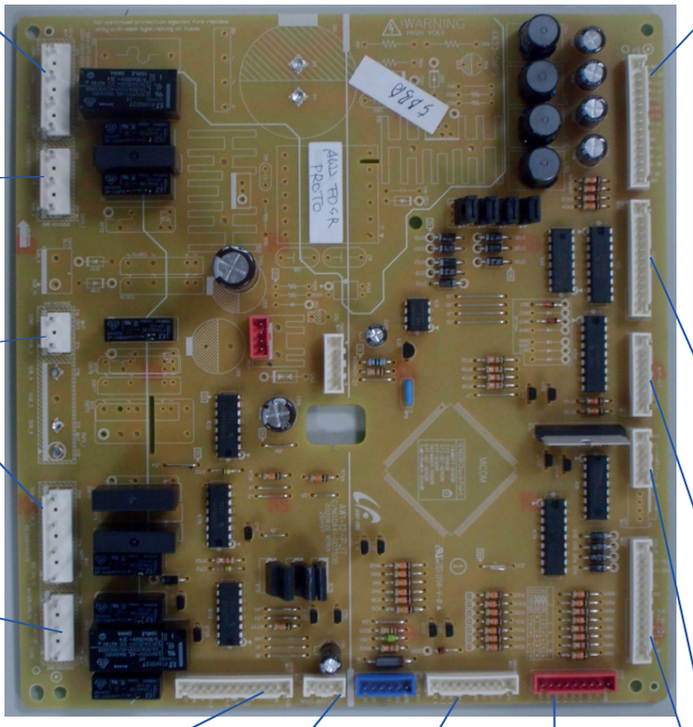

CN70 - AC LOAD
① : FF-DEF-HEATER
③ : FZ-DEF-HEATER
ICE DUCT HEATER
⑤ : COMMON2 LINE(L)
⑦ : COMMON1 LINE(N)

CN70_1 - AC LOAD
① : Main Valve
③ : ICE MAKER HEATER(FF)
⑤ : FRENCH-HEATER
DISPENSER-HEATER

CN72 - AC LOAD
① : OPEN
③ : COMMON1 LINE(N)

CN73_1 - AC LOAD
① : ICE WATER
SOLENOIDE VALVE(FF)
③ : ICE COVER ROUTE
⑤ : Open
⑦ : FDSR Door Heater

CN73 - AC LOAD
① : CUBE SOLENOIDE
VALVE
③ : AUGER MOTOR
⑤ : WATER SOLENOIDE
VALVE

CN78 – LAMP(LED)/Sensor
① : FZ LAMP(LED)
② : GND
③ : FF LAMP(LED)
④ : Open
⑤ : GND
⑥ : Open
⑦ : Open
⑧ : AMBIENT Sensor
⑨ : Open
⑩ : ICE ROOM Sensor
⑪ : +5V
⑫ : GND
⑬ : +12V

CN75 – Inverter
① : COMP. SIGNAL INPUT
② : +5V
③ : GND
④ : COMP. SIGNAL OUTPUT

CN50
① : LED PANEL TX
② : LED PANEL RX
③ : +12V
④ : +5V
⑤, ⑥ : GND
⑦ : ICE Switch
⑧ : WATER Switch
⑨ : ICE Route Switch 1
⑩ : ICE Route Switch 2

CN30 - Sensor
① : GND
② : +5V
③ : Humidity
④ : FZ-Sensor
⑤ : FZ-DEF-Sensor
⑥ : FF-Sensor
⑦ : IR-Sensor
⑧ : FF-DEF-Sensor
⑨ : Pantry Room-Sensor

CN76 - BLDC Motor & door Switch
① : GND
② : Ice Room-FAN operation signal
③ : FZ-FAN operation signal
④ : FF-FAN operation signal
⑤ : C-FAN operation signal
⑥ : Ice Room-FAN signal input volt
⑦ : FZ-FAN signal input volt
⑧ : FF-FAN signal input volt
⑨ : C-FAN signal input volt
⑩ : GND
⑪ : FZ-Door Switch
⑫ : FF-Door Switch
⑬ : Mid DRAWER-DOOR Switch
⑭ : Open
⑮ : Open

CN51 – MID DRAWER ROOM DISPLAY
① : ICE Pipe Heater(FF) F/B
② : ICE Water Pipe Heater (FF)
③~ ⑦ : Mid Drawer Room LED Driver
⑧~⑩ : OPEN
⑪ : Mid Drawer Room Switch
⑫ : OPEN
⑬ : OPEN

CN79
① : +5V
② : GND
③ : Flow Sensor Out
④ : Test Switch(FF)
⑤ : Ice Water Pipe Heater(FZ)
⑥ : Open
⑦ : Ice Room Heater
⑧ : +12V
⑨ : +12V

CN77 - Damper & Valve
①~② : Damper Heater
③~⑥ : Damper Motor
⑦ : +12V
⑧~⑪ : Step Valve

CN90 - Ice Maker
① : Sensor(FF)
② : Motor Driver INB
③ : Horizontal Switch
④ : Motor Driver Vs2B
⑤ : +5V
⑥ : Open
⑦ : GND
⑧ : GND
⑨ : Sensor(FZ)
⑩ : Test Switch(FZ)
⑪ : Motor Driver INA
⑫ : Hall IC Output
⑬ : +5V
⑭ : GND

This document can not be used without Samsung's authorization

PBA DIAGRAM

5-4) Connector Layout with part position (Inverter Board)

5-4-1. RF30HB*

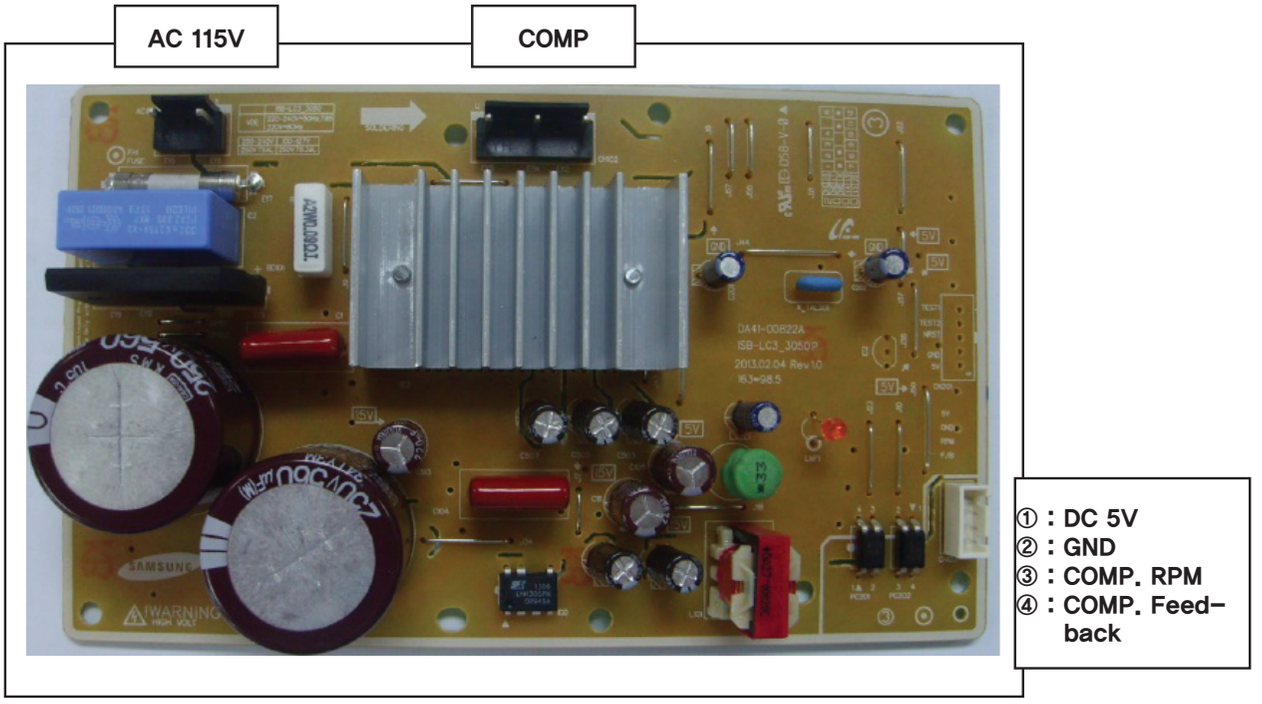

This document can not be used without Samsung's authorization

6. WIRING DIAGRAM

6-1) Model : RF30HB*

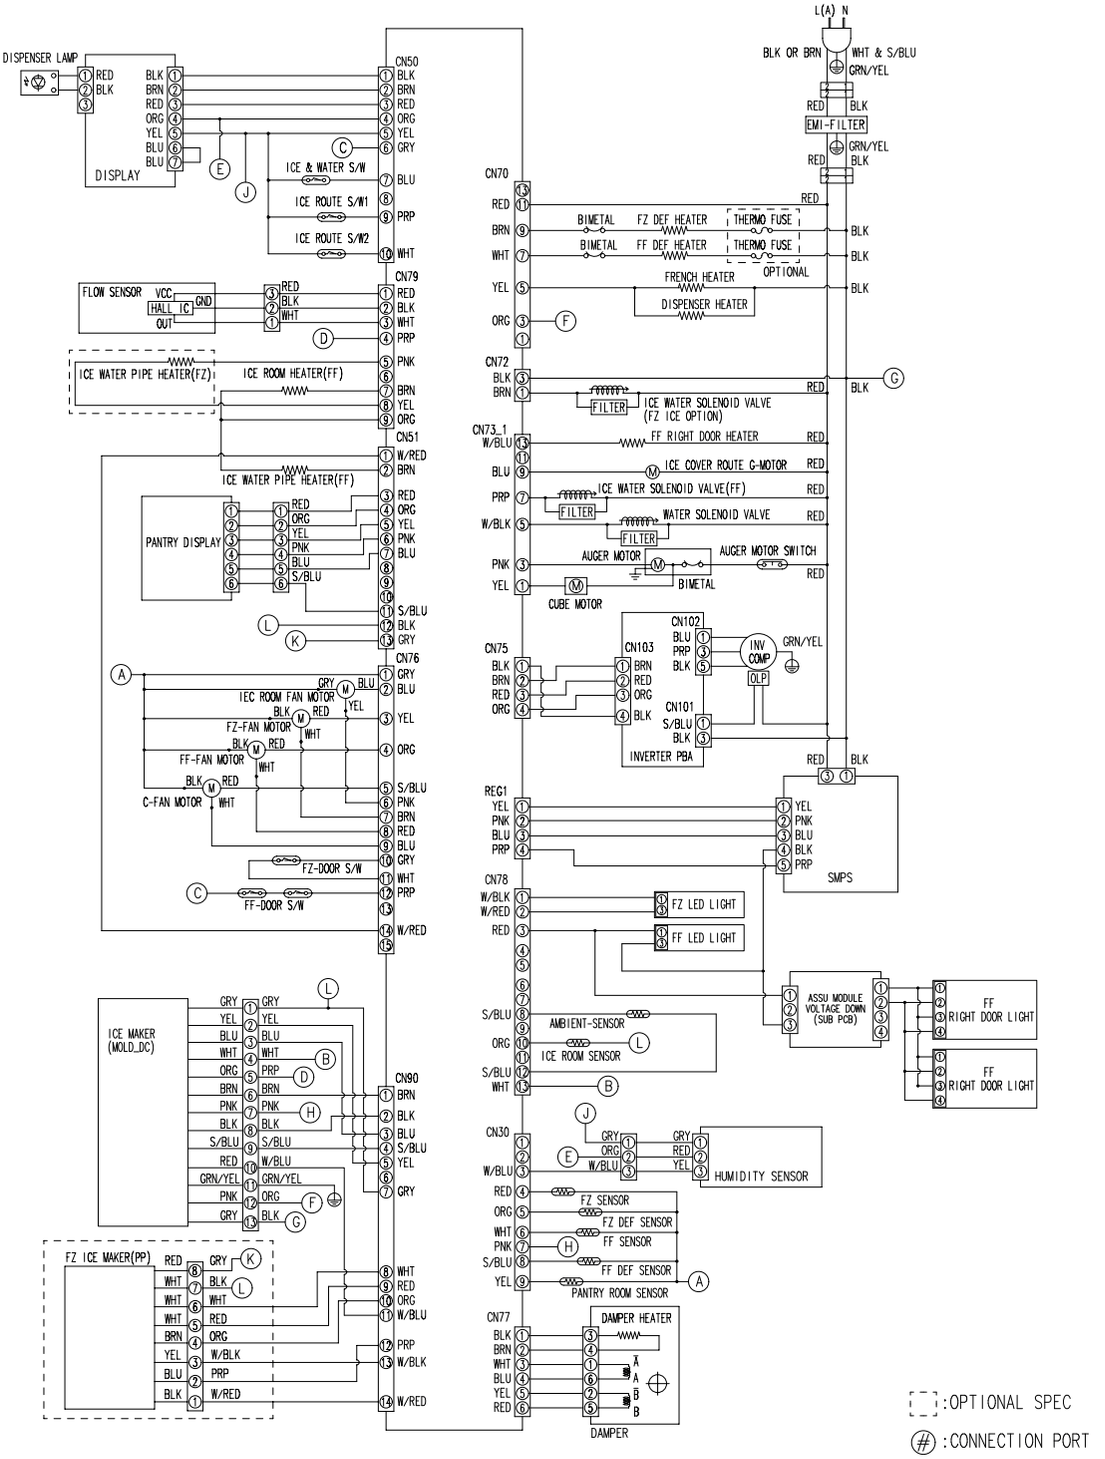

This document can not be used without Samsung's authorization

7. BLOCK DIAGRAM

7-1) Whole block diagram

7-1-1. MODEL : Common for All Models

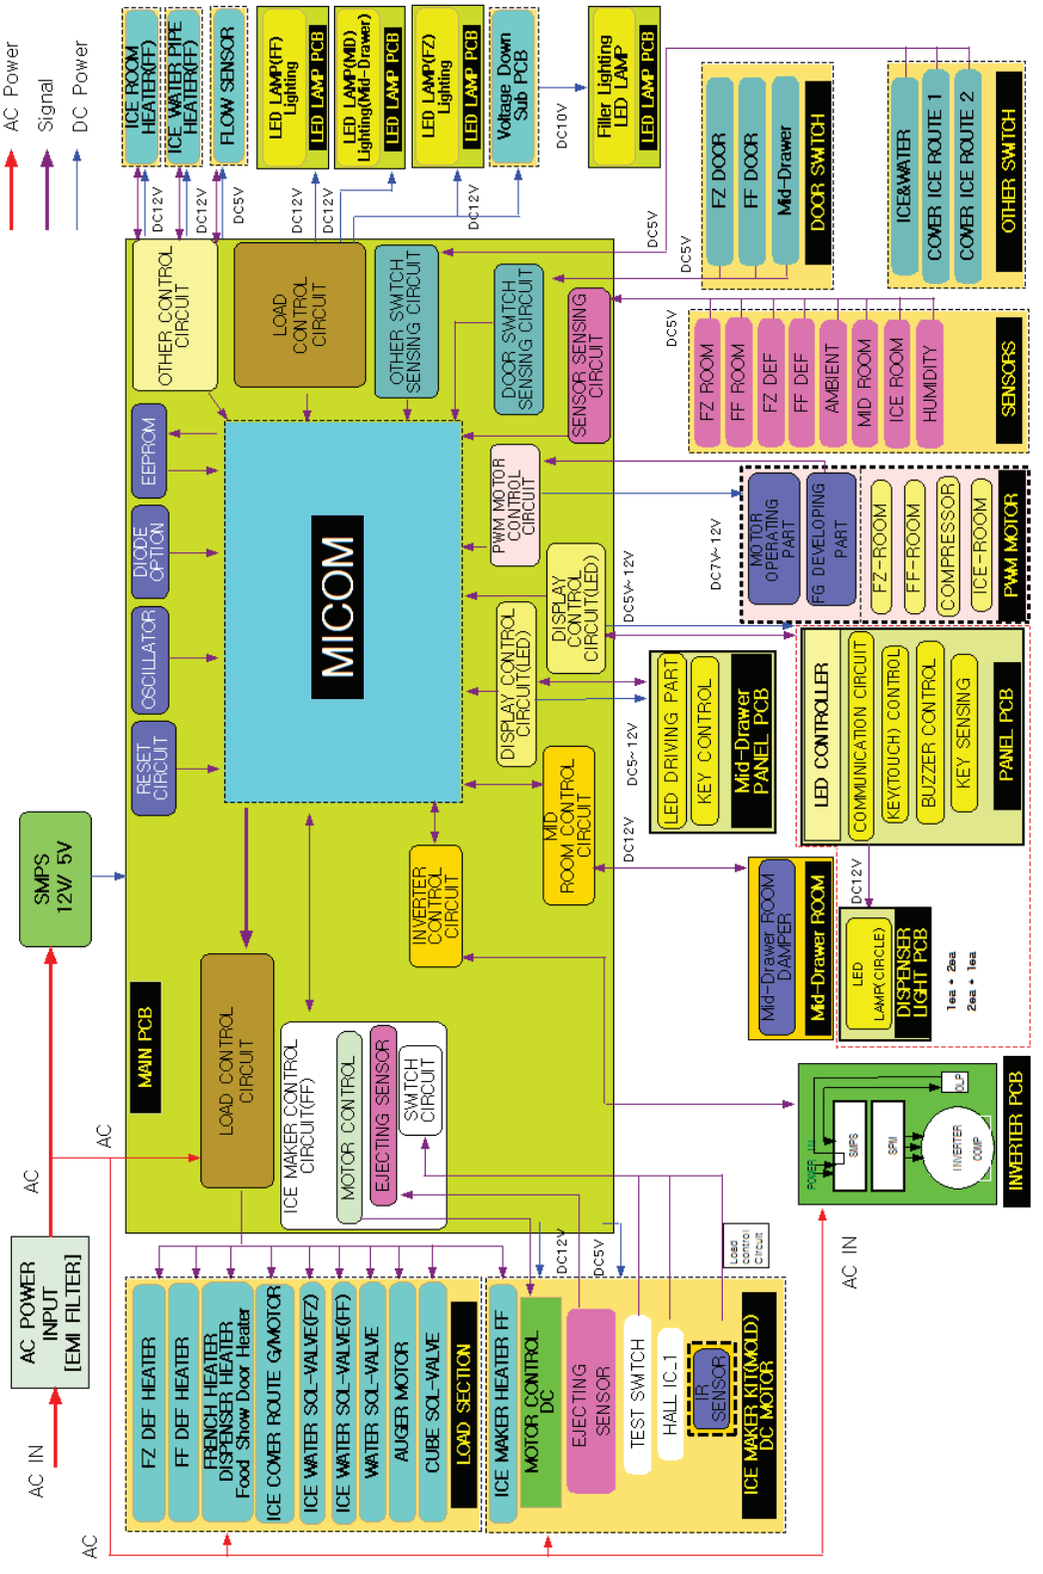

This document can not be used without Samsung's authorization

BLOCK DIAGRAM

7-1) Whole block diagram

7-1-2. RF30HB*

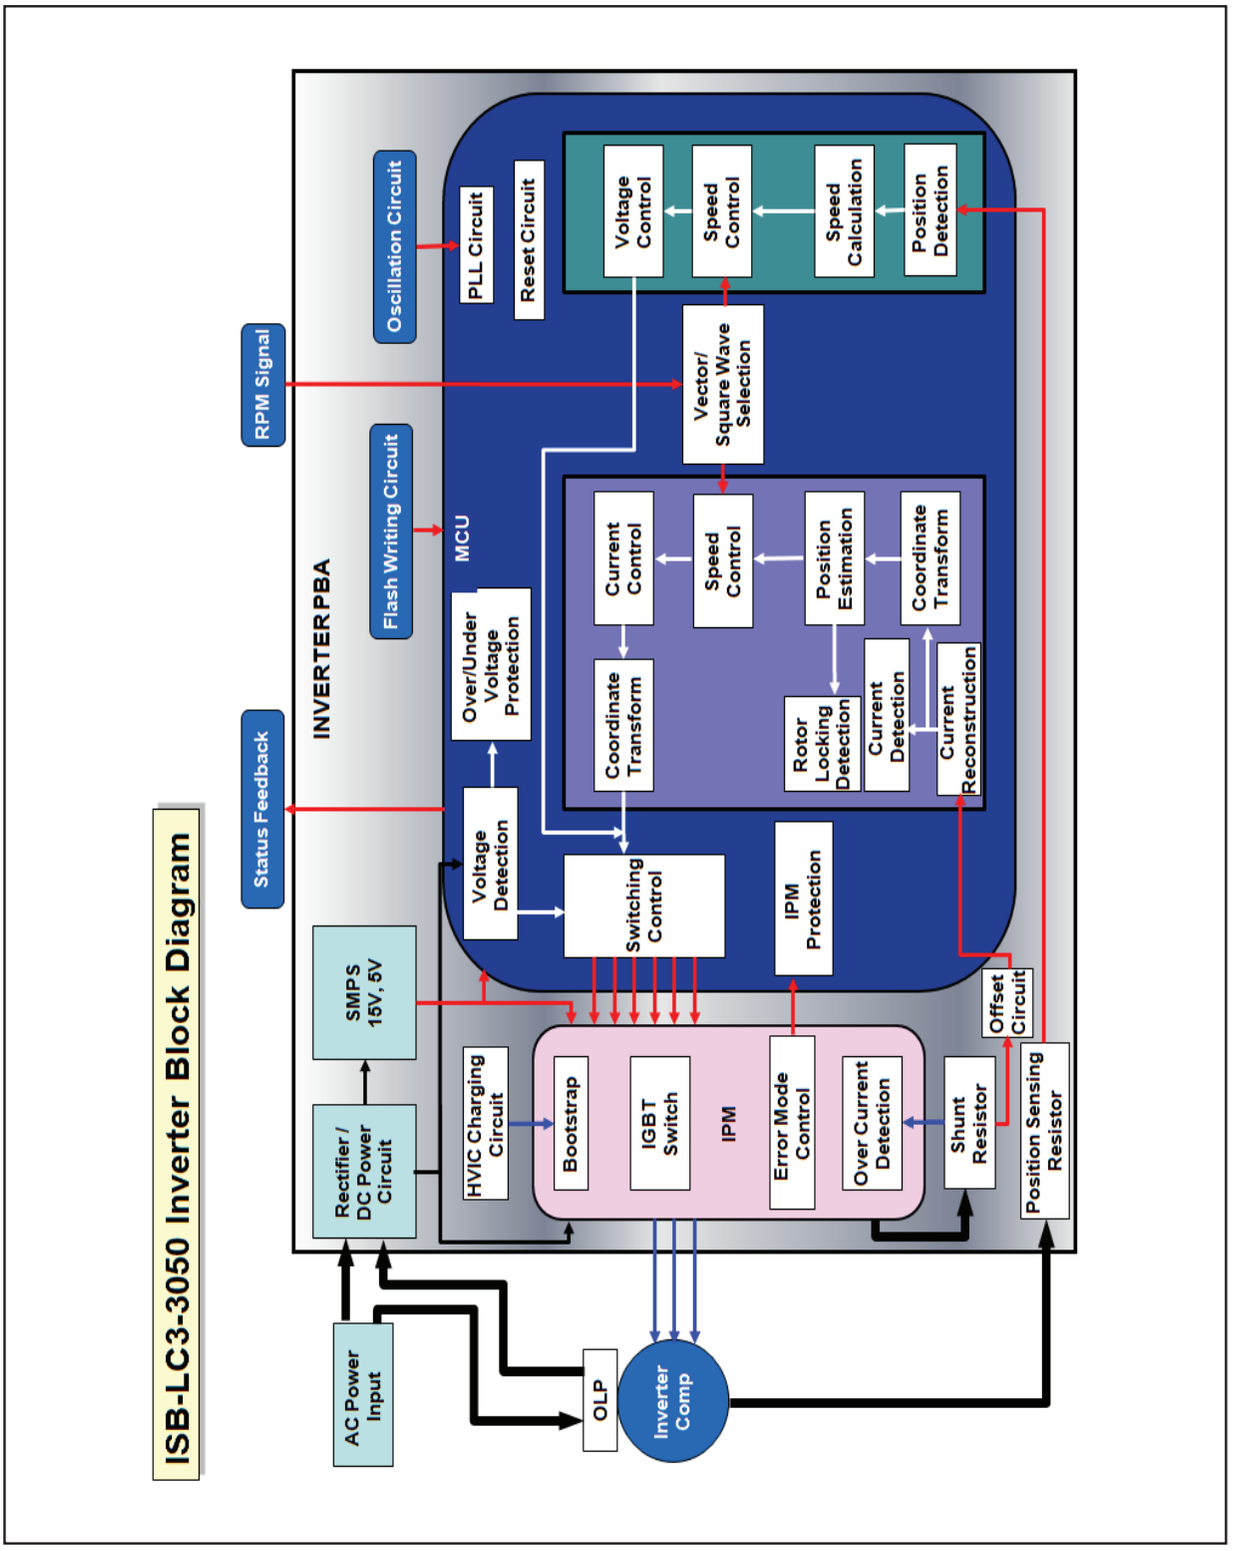

Digit	1	2	3	4	5	6	7	8	9	10	11	12	13	14
	A	A	1	1	A/1	A/1	A/1	A	A	A	A			
	Type		Capacity		Year	Feature1	Feature2	Feature3	Feature4	Color		/	Buyer	
Model Code	R	F	3	1	F	M	E	S	B	S	R	/	A	A

RF-F310N (AW4 PJT)														
	R	F	3	1	F	M	E	D	B	S	R	/	A	A
			3	0	H	F		S	T	B	C			
						B				W	W			
						D				S	L			

F	2013	M	4Door+F/S	E	Easy Handle	D	Ice&Water Dispenser	B	Basic	SR	Real Stainless
H	2014	B	4Door+F/S+ FDSR			S	Sparkling + I&W	T	TIM	BC	Empire Black
		D	3Door+F/S+ FDSR							WW	Snow White
										SL	ALF (Stainless Look)

107, Hanamsandan 6 Beon-Ro,
Gwangsan-Gu, Gwangju 506-723
Korea
TEL : 82-62-950-6193, 6896
FAX : 82-62-950-6829

Europe, CIS, Mideast & Africa: gspn1.samsungcsportal.com
Asia: gspn2.samsungcsportal.com
North & Latin America: gspn3.samsungcsportal.com
China: china.samsungportal.com

– This Service Manual is a property of Samsung Electronics Co., Ltd.
Any unauthorized use of Manual can be punished under applicable
International or domestic law.

© Samsung Electronics Co., Ltd.
Refrigerator Division 2014
Printed in Korea